

GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact



# GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact Instruction Manual

[Home](#) » [GIRA](#) » GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact Instruction Manual 

## Contents

- [1 GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact](#)
- [2 Specifications](#)
- [3 Safety instructions](#)
- [4 Device components](#)
- [5 Intended use](#)
- [6 Product characteristics](#)
- [7 Technical data](#)
- [8 Troubleshooting](#)
- [9 Accessories](#)
- [10 Warranty](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)

# GIRA

**GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact**



## Specifications

- **Model Number:** 82593232
- **Date:** 25.09.2023
- Automatic operation with motion detection
- **Minimum switch-off brightness:** 100 lux
- Short-time operation with pulse trigger
- Switch-off warning feature

## Safety instructions

- Electrical devices may be mounted and connected only by electrically skilled persons.
- Serious injuries, fire or property damage are possible. Please read and follow the manual fully.
- The danger of electric shock. The device is not suitable for disconnection from supply voltage because mains potential even is applied on the load when the device is switched off. Before carrying out work on the device or load, switch off all corresponding circuit breakers.
- Do not press on the sensor window. The device can be damaged.
- The device is not suitable for use as a burglar alarm or other alarm.
- This manual is an integral part of the product and must remain with the customer.
- Battery safety instructions
- This device or its accessories are supplied with batteries in the form of button cells.

**DANGER!** Batteries can be swallowed. This can lead directly to death by suffocation. Dangerous substances may cause severe internal burns leading to death within 2 hours.

- Keep new and used batteries away from children.

- Do not use devices if the battery compartment does not close securely and keep away from children.
- If you suspect that a battery has been swallowed or is in any orifice of the body, seek immediate medical attention.

**WARNING!** Improper handling of batteries can result in explosion, fire or chemical burn due to leakage.

- Do not heat or throw batteries into the fire.
- Do not reverse polarity, short-circuit or recharge batteries.
- Do not deform or disassemble batteries.
- Replace batteries only with an identical or equivalent type.
- Remove empty batteries immediately and dispose of them in an environmentally friendly manner.

Remove empty batteries immediately, cover the poles with adhesive tape and dispose of in an environmentally friendly manner. Do not throw batteries into household waste. Consult your local authorities about environmentally friendly disposal. According to statutory provisions, the customers are obligated to return used batteries.

## Device components

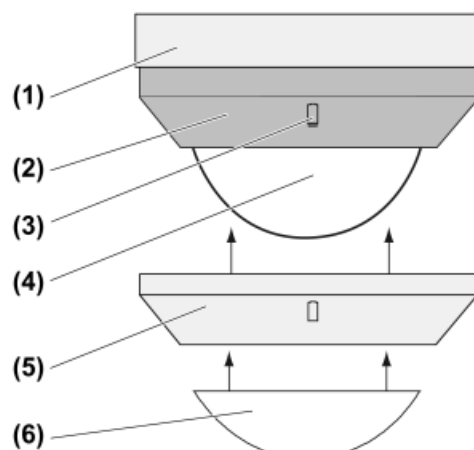
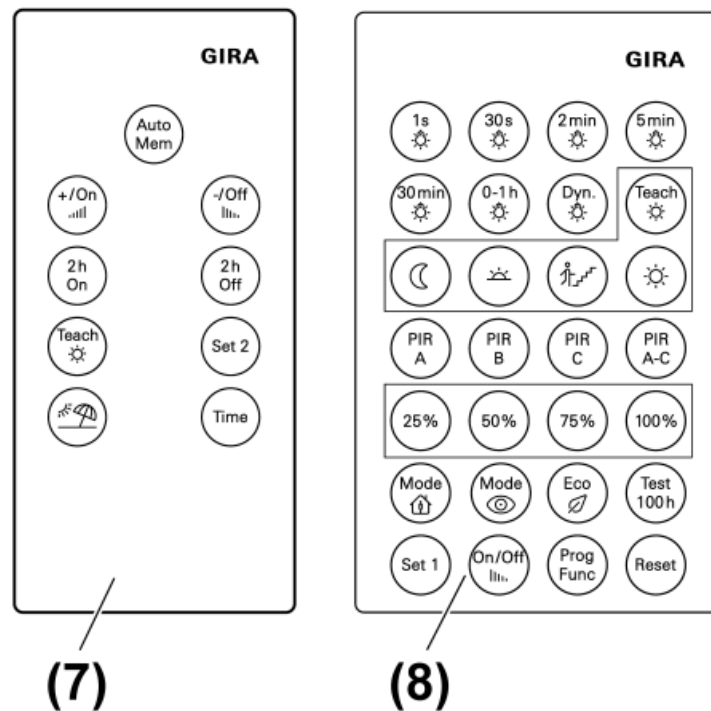


Figure 1

1. Connection box
2. Sensor cover
3. Brightness sensor
4. Sensor window with red and blue display LED
5. Decor ring
6. Push-on cover
- 7.



**Figure 2**

IR PIR 2 remote control, included in the scope of delivery

8. IR PIR 1 remote control (installation engineer), see Accessories

### Intended use

- Automatic switching of lighting depending on the heat motion and ambient brightness
- Indoor ceiling mounting, surface-mounted

### Product characteristics

- 2-point light control
- Functions settable with IR remote controls
- Restriction of the detection field by switching off individual sensors or push-on cover
- Operation with IR remote control, 2-wire extension or push-button
- Teach function for adjustment of the brightness threshold, in combination with IR remote controls
- Switch-off warning
- Short-time operation, e.g. to activate acoustic signal encoders
- Display LEDs
- Presence simulation
- Function as twilight switch
- Dynamic run-on time
- Extension of the detection field through parallel switching of multiple devices The extension of the detection field with 3-wire extensions is not possible.

### Automatic operation

The device detects heat motions of people, animals and objects.

- The light is switched on if a person enters the detection field and the brightness threshold is below the set brightness threshold.

The run-on time restarts with each detected motion.

- The light is switched off when it is no longer required because:  
no more movement is detected in the detection field and the run-on time has elapsed or the ambient light is bright enough.

The switch-off brightness is calculated from the set brightness threshold and the connected light.

To avoid brief shading from causing a switch-off, a switch-off only takes place when the set run-on time has elapsed. The run-on time does not restart on movement detection for as long as the switch-off brightness is exceeded. The minimum switch-off brightness is 100 lux, even if a lower value is set.

To avoid any switch-on caused by a cooling lamp, no movement signals are evaluated for a brief lockout time after switching off. The motion detector adjusts itself to the ambient conditions to keep the time as short as possible.

### **Short-time operation**

If motion occurs, then a short pulse of approx. 0.5 seconds is triggered depending on the brightness. The pulse is cyclically repeated as long as motions are detected.

### **Switch-off warning**

If the switch-off warning is active, the light is not switched off immediately after the run-on time has elapsed. Triple flashing at an interval of 10 seconds shows that the light will be switched off soon. The run-on time is thereby prolonged by approx.

30 seconds. If movement is detected during the switch-off prewarning, then the run-on time is restarted and the light remains on.

### **Dynamic run-on time**

The function determines a run-on time within specified limits automatically and dynamically from detected movements. In so doing, the run-on time is increased if presence continues or decreased if absence is detected.

### **Presence simulation**

In automatic operation, the motion detector continuously saves time for when the lighting is switched on. A maximum of 60 switching operations are saved over 24 hours. If more switching operations take place, the oldest ones are over-written respectively. If the presence simulation is activated, the motion detector switches the lighting at the saved times depending on brightness. Switch-off takes place after the run-on time has elapsed. Detected motions prolong the run-on time or the light is switched on depending on brightness. Times are not saved.

### **Function as twilight switch**

- The function is active as soon as all the PIR sensors have been switched off (see Commissioning).

The light is switched according to the brightness. Motions are not evaluated.

- The light is switched on if the brightness is below the set brightness threshold for 4 minutes.
- The light is switched off when the switch-off brightness (see Automatic mode) is exceeded for 4 minutes.

Switch-on and switch-off of the light via 2-wire extensions or push-buttons is not possible. The Continuous on/off and on/off for 2 hours functions cannot be used.

### **Behaviour after mains voltage return**

After mains voltage return, the device performs a self-test for a maximum of

20 seconds. After the self-test has been completed, the device is ready for operation. The device switches the light according to the settings made.

The following applies during the self-test:

- The red and blue display LEDs (4) light up.
- The device cannot be operated or set using an IR remote control.
- Movements are not detected.
- The device can be switched via 2-wire extensions or installation push-buttons.

### Operation

Special functions can be switched and settings adjusted using the supplied PIR 2 IR remote control.

- Special functions can restrict operation via the 2-wire extensions or push-buttons.
- If multiple devices are within the range of the IR remote control, then align it so that only the device to be operated can receive the signals.

### Inserting the battery

Obey the battery safety instructions.










- Keep contacts of batteries and devices free of grease.
- Insert the supplied battery with the correct polarity (see IR remote control imprint).

### LED display

Behind the sensor window (4) are a red and a blue LED (see Figure 1) for indicating different states of operation.

Red LED	Blue LED	Signalling
Off	On	Light switched on continuously
On	Off	Light switched off continuously or twilight button function activated
Flashing slowly	Off	Presence simulation switched on
Flashing	Off	Receipt of IR signals
Off	Flashing	IR signal detected

Button assignment of the supplied PIR 2 IR remote control

Taste	Funktion
<b>Auto Mem</b> Pressing for less than 0.4 seconds	Switching on automatic mode
<b>Auto Mem</b> Actuation of between 1 and 4 seconds	In automatic mode: Switch-on for the duration of the run-on time
<b>+/On</b>  Pressing for less than 0.4 seconds	Continuous on
<b>-/Off</b>  Pressing for less than 0.4 seconds	Continuous off
<b>2 h on</b> Pressing for less than 0.4 seconds	On for 2 hours
<b>2 h off</b> Pressing for less than 0.4 seconds	Off for 2 hours
<b>Teach</b>  Pressing for less than 10 seconds	In the next 10 seconds, the brightness threshold can be changed incrementally using the <b>+/On</b>  or <b>-/Off</b>  buttons.
<b>Teach</b>  Pressing for longer than 10 seconds	Saving the current ambient brightness as the brightness threshold
<b>Set 2</b> Pressing for longer than 10 seconds	Activate settings that have been saved during commissioning
 Pressing for longer than 10 seconds	Switching the presence simulation on or off
<b>Time</b> Pressing for less than 10 seconds	In the next 10 seconds, the run-on time can be changed incrementally using the <b>+/On</b>  or <b>-/Off</b>  buttons.

### Switching on light for the duration of the run-on time

A 2-wire extension or a push-button is connected.

- In short-time operation, cyclic pulses take place whilst the 2-wire extension at the top or bottom of the push-button is pressed.
- Alternatively, press the **AURO MEM** button on the IR remote control for between 1 and 4 seconds. In a short-time operation, there is a single pulse after releasing the button.

The light is switched off.

### Motion detector operation

- Press the 2-wire extension or installation push button for less than 0.4 seconds.
- If the 2-wire extension or the push-button is pressed again after the switch-on, then the run-on time is restarted.

### Presence detector operation

- Press the top or full surface of the 2-wire extension or push button for less than 0.4 seconds.
- Light is switched on depending on brightness and motion. Movements are evaluated depending on brightness and prolong the run-on time.

### Switching the light off for 3 minutes

This function can only be used in the presence detector operation. A 2-wire extension or a push-button is connected.

#### The light is switched on.

- Press the bottom 2-wire extension or push-button.
- The light is switched off for 3 minutes. When movements are detected, the time is restarted.

### Switch on the light for 2 hours

Motions are not evaluated during this time. It is not possible to switch off via a 2-wire extension or push-button.

- Press 2 h on the button of the IR remote control.
- The light is switched on for 2 hours. The motion detector is in automatic operation again after the 2 hours have elapsed.
- The time is restarted if actuation is repeated.
- Automatic operation is switched on again using the **AURO MEM** button.

### Switch on the light continuously

Motions are not evaluated during this time. It is not possible to switch off via a 2-wire extension or push-button.

- Press the  button for less than 0.4 seconds.

**INFO:** Light is switched on continuously. The blue LED lights up. Automatic operation is switched on again using the **AURO MEM** button.

### Switch off the light for 2 hours

Motions are not evaluated during this time. It is not possible to switch on via a 2-wire extension or push-button.

- Press the 2 h off button.

The light is switched off for 2 hours. The device is in automatic operation again after the time has elapsed.

**INFO:** The time is restarted if the actuation is repeated.

**INFO:** Automatic operation is switched on again using the  button.

### Switch off the light continuously

Motions are not evaluated. It is not possible to switch on via a 2-wire extension or push-button.

- Press the  button for less than 0.4 seconds.


The light is switched off continuously. The red LED lights up.

Automatic operation is switched on again using the  button.

### Adjusting the switch-on brightness




The switch-on brightness is set during commissioning. The switch-on brightness can be adjusted at a later time using the PIR 2 IR remote control.

- Press **Teach**  the button briefly.
- Within 10 seconds, press the  $\bar{U}$  or  $\bar{u}$  button briefly.

Each button press extends or shortens the brightness threshold by 10% of the set value, but by at least 1 lux.

### **Saving the current brightness as the switch-on brightness**

Press the **Teach**  button for longer than 10 seconds. The current brightness is saved as the switch-on brightness.

### **Adjusting the run-on time**

The run-on time is set during commissioning. The run-on time can be adjusted at a later time using the PIR 2 IR remote control.

- Press the Time button briefly.
- Within 10 seconds, press the **+/On**  OR **-/Off**  button briefly.


Each button press extends or shortens the run-on time by 10% of the set value but by at least 1 second.

### **Recalling saved settings**

During commissioning, the settings made can be saved (see Saving settings). These can be recalled if, for example, changes made later are no longer required.

- Press the Set 2 button for longer than 10 seconds. The saved settings are active again.

### **Switching the presence simulation on or off**

- Press the  button for longer than 10 seconds.

The presence simulation is switched on or off alternately. If the function is switched on, the red LED flashes slowly.

The function cannot be activated until 24 hours after first commissioning.


### **Information for electrically skilled persons**

#### **DANGER!**

- Electric shock when live parts are touched.
- Electric shocks can be fatal.
- Always disconnect before carrying out work on the device or load. For this, switch off all corresponding circuit breakers, secure against being switched on again and check that there is no voltage. Cover up adjacent live parts.

### **Mounting and electrical connection**

## Detection field and range

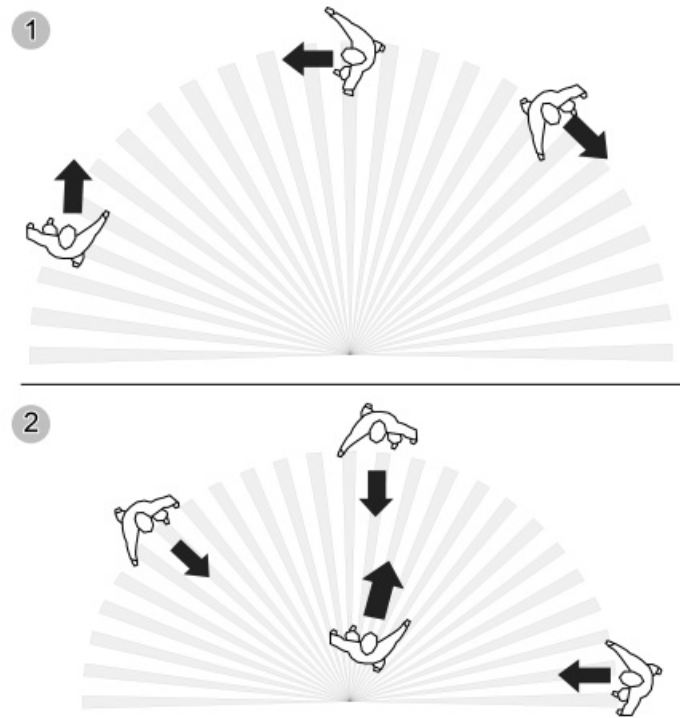

The device has a detection field of 360°. The diameter of the detection field depends on the installation height and the direction of motion of persons in the detection field (see figure 4). The detection field becomes larger the greater the installation height, while the detection density and sensitivity are reduced at the same time.

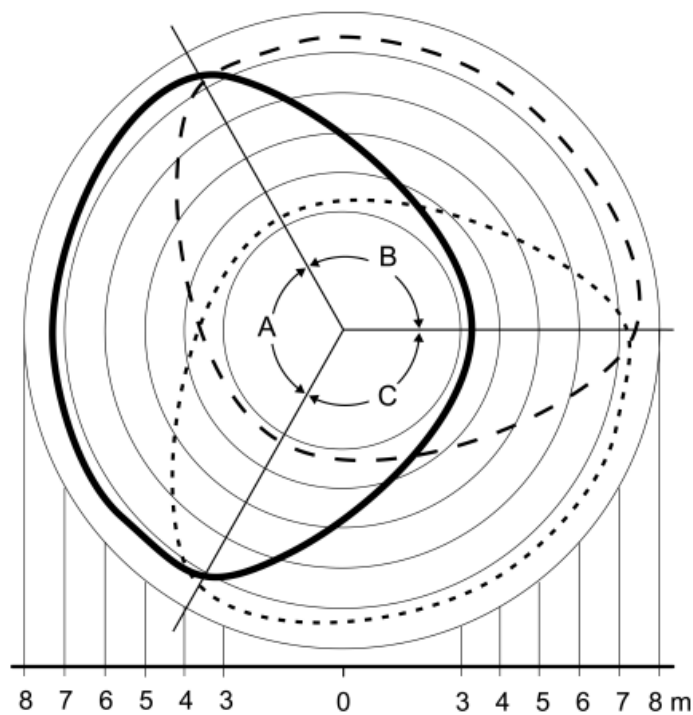


Figure 5: Detection field areas A, B and C, installation height 2.50 m

## Diameter of detection field for direction of movement

Installation height	1:	2:	3:	4:
2.20 m	14.50 m	11.50 m	8.00 m	6.00 m
2.50 m	16.50 m	13.00 m	10.00 m	7.00 m

Installation height	1:	2:	3:	4:
3.00 m	20.00 m	16.00 m	12.00 m	8.00 m
3.50 m	23.00 m	18.50 m	14.00 m	9.00 m
4.00 m	26.00 m	17.00 m	14.50 m *)	– *)
5.00 m	28.00 m	18.00 m	15.00 m *)	– *)
6.00 m	29.00 m	19.00 m	– *)	– *)

- Range for tangential movement on the ground
- The range for radial movement on the ground
- The range for typical movements at desks, e.g. torso movement Range of fine detection at desks, e.g. mouse movements
- **When used as a presence detector:** Installation height should not be more than 3.5 m, otherwise fine detection is not possible.

### Selecting installation location

For use as a presence detector, the device is installed, for example, above a workplace and monitors the surface below it. For use as a motion detector, the device is installed, for example, in the hallway.

- Select a vibration-free installation location. Vibrations can lead to unwanted switching.
- Avoid interference sources in the detection field. Interference sources, e.g. heaters, ventilation, air conditioners, and cooling luminaires can lead to un-wanted detections.

The detection field can be limited to minimise the influence of interference sources. For this, use the push-on cover (see Limiting the detection field with the push-on cover) or switch off individual sensors (see Limiting the detection field).

### Aligning the device

The device has three independent PIR sensors for motion detection (see figure 5).

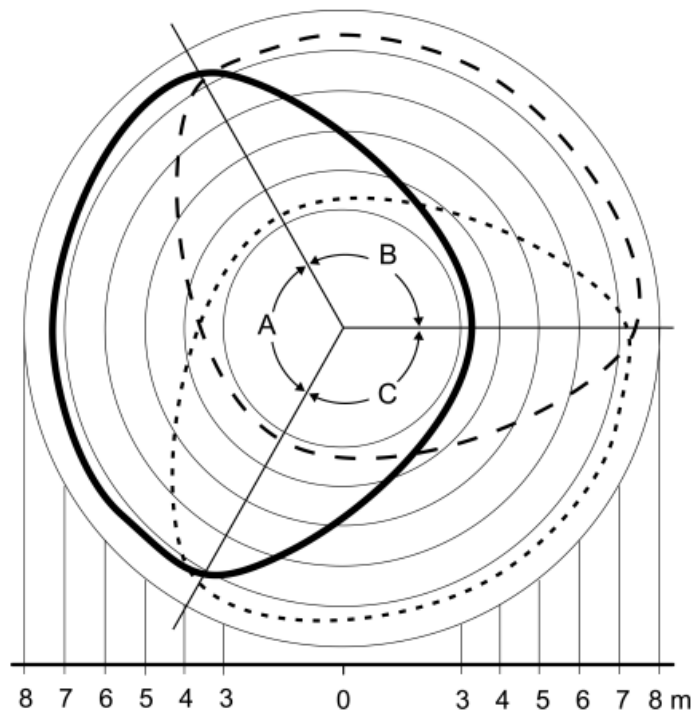


Figure 5: Detection field areas A, B and C, installation height 2.50 m

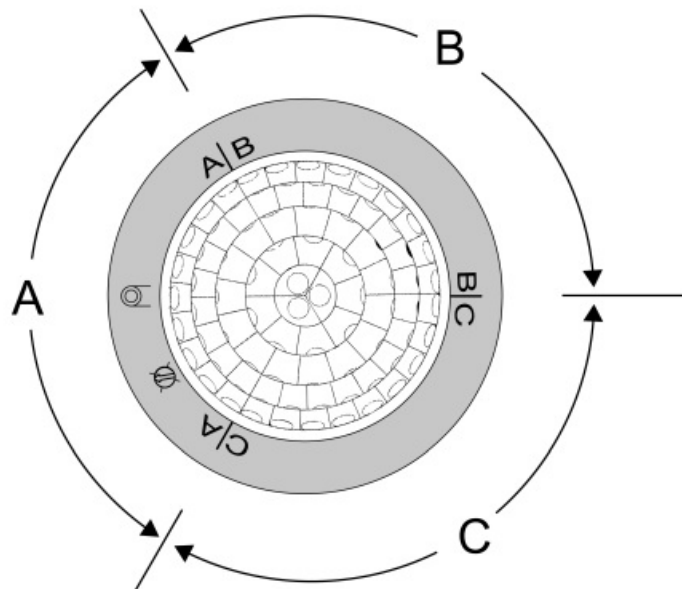


Figure 6: Arrangement of the areas A, B and C

- Align the connection box (1) in such a way that the areas A, B and C match the structural conditions. The arrangement is clearly evident under the decor ring (see figure 6).

### Preparations for mounting

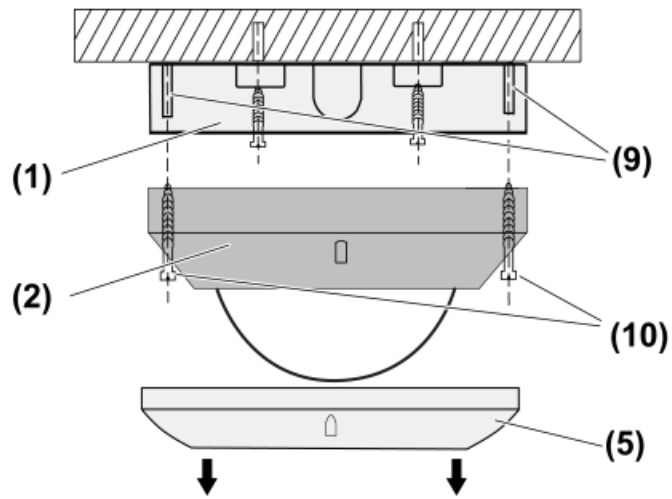


Figure 7: Mounting

1. (1) Connection box
2. (2) Sensor cover
3. (5) Decor ring
4. (9) Fastening pins
5. (10) Screws
  - Pull off decor ring (5) (see figure 7).
  - Loosen screws (10) (see figure 7).

#### Installing the connection box

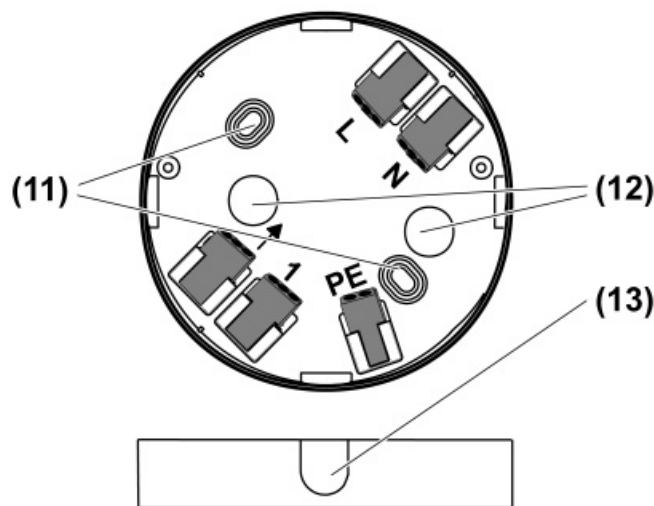


Figure 8: Connection box

- (11) Fastening holes
- (12) Cable entry, surface-mounted
- (13) Thin points for optional cable entries

Align the device (for the position of areas A, B, C, see Aligning the device) – the brightness sensor should, if possible, be located on the side away from the window. This reduces the effects of scattered light.

- For an additional flush-mounted cable entry or surface-mounted cable entry, break out the appropriate thin point

(13) (see figure 8).

- Fastening the connection box (1) through holes (11) (see Figure 8).

**INFO:** Alternatively, the device can also be mounted on a 60 mm appliance box. The screws are not included in the scope of delivery.

### Connect device


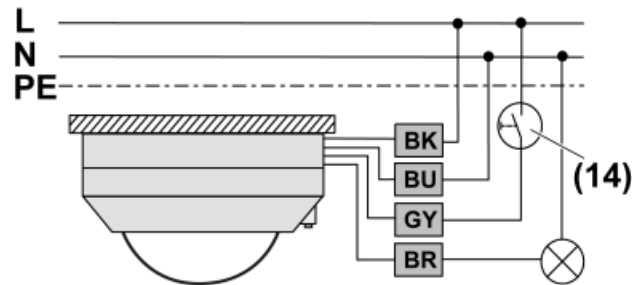


Figure 9: Connection diagram, single device

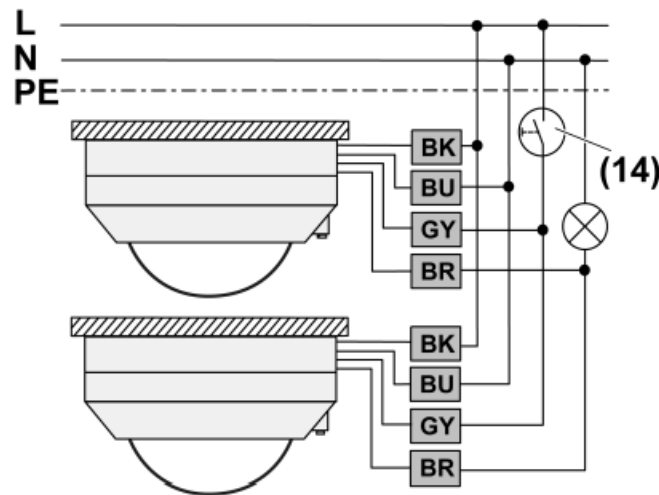

- Max. power cable length 100 m. This takes into account all the connecting cables between the devices and lamps.
- Do not connect more than five devices in parallel.
- Connect all devices to the same phase conductor.
- Set all the devices to the same device function (motion detector or presence detector).

**INFO:** The connection in parallel does not increase the maximum connected load.

- Connect the sensor cover according to the connection diagram (see figure 9) or switch the sensor covers according to the circuit diagram (see Figure 10).
- If multiple circuit breakers supply dangerous voltages to the device or load, couple the circuit breakers or label them with a warning to ensure tripping.

### Connection assignment

- black, BK, L Phase conductor
- Brown, BR, ↓ Switched phase conductor

- blue, BU, N Neutral conductor
- grey, GY, 1 Connection push-button
- PE Protective conductor
- Connect optional push-button (14) (see figure 9) or (see figure 10). This is only necessary if manual operation is also desired.
  - **INFO:** Lit push buttons may only be connected if they have an N connection terminal.
  - **INFO:** In the case of single devices, a 2-wire extension can be used as an alternative to the push-button (14).
- Screw the sensor cover (2) to the connection box (1) with screws (10) and mounting pins (9) (see Figure 7).

### Limiting the detection field using the push-on cover

The push-on cover can be used to limit the detection field, e.g. to mask out interference sources

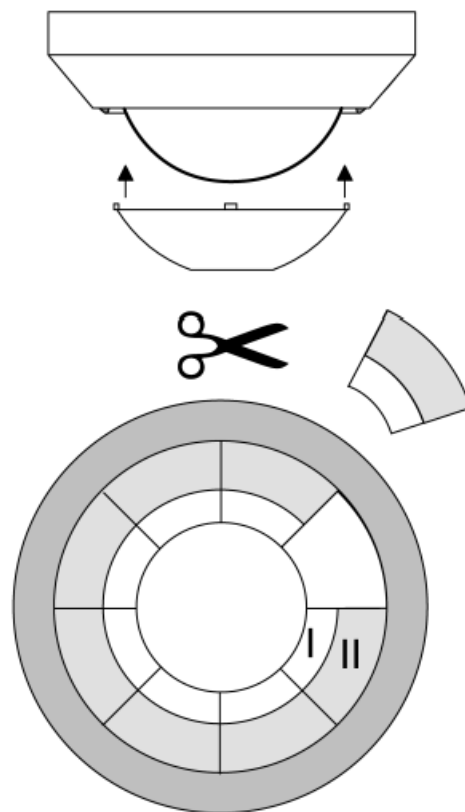


Figure 11: Push-on cover

Cover size	Range on the ground (mounting height 3 m)
Complete push-on cover	Ø approx. 4.5 m

Area I cut out	Ø approx. 7.5 m
Areas I + II cut out	Ø approx. 12 m
without push-on cover	Ø approx. 20 m

- Pull off the push-on cover.
- Using scissors, cut out the push-on cover along the marked lines as required.
- Push on push-on cover.

**INFO:** Alternatively, the detection field can also be limited by switching off individual sensors (see Commissioning).

## Commissioning

### Insert battery into IR remote control

The necessary settings are carried out using the “installation engineer” IR remote control (see Accessories).














**INFO:** If multiple devices are within the range of the IR remote control, then align it so that only the device to be operated can receive the signals.

### Inserting the battery




Obey the battery safety instructions.

- Keep contacts of batteries and devices free of grease.
- Insert the supplied battery with the correct polarity (see IR remote control imprint).

### Button assignment of the “installation engineer” IR remote control



Taste	Funktion
<b>1 s</b> 	Short-time operation
<b>30 s</b>  , <b>2 min</b>  , <b>5 min</b>  , <b>30 min</b> 	Set run-on time
<b>Teach</b>  Pressing for longer than 10 seconds	Saving ambient brightness as brightness threshold
 ,  ,  , 	Setting the brightness threshold
<b>0-1 h</b> 	Setting individual run-on time
<b>Dyn.</b>  Pressing for longer than 10 seconds	Switching on the dynamic run-on time
<b>PIR A, PIR B, PIR C, PIR A-C</b> Pressing for longer than 10 seconds	Switching off the PIR sensors
<b>PIR A, PIR B, PIR C, PIR A-C</b> Pressing for less than 10 seconds	In the next 5 seconds, use the <b>25%</b> , <b>50%</b> , <b>75%</b> and <b>100%</b> buttons to set the sensitivity of the appropriate PIR sensor
<b>25%, 50%, 75%, 100%</b>	Setting the sensitivity
<b>Mode</b>  Pressing for longer than 10 seconds	Switching on the Presence detector device function



<b>Mode</b>  Pressing for longer than 10 seconds	Switching on the Motion detector device function
<b>Eco</b> 	No function is saved for this device
<b>Test 100 h</b> Pressing for less than 10 seconds	Switch on test operation
<b>Test 100 h</b> Pressing for longer than 10 seconds	On for 100 hours
<b>Set 1</b> Pressing for longer than 10 seconds	Save any changes made for later recall using the <b>Set 2</b> button of the supplied IR remote control
<b>On/Off</b>  Pressing for longer than 10 seconds	Switch on/off switch-off warning
<b>Prog Func</b>	No function is saved for this device
<b>Reset</b> Pressing for between 4 seconds and 10 seconds	Switching off the functions: dynamic run-on time, switch-off prewarning, on for 100 hours, test operation
<b>Reset</b> Pressing for longer than 10 seconds	Restoring to factory settings

### Switching on a device function

The device can work either as a motion detector or a presence detector.

- Press the  or **Mode**  button.

The device works either as a motion detector or a presence detector.

When changing the device function, the settings of the previous device function are saved and reactivated on changing again.

### Setting the sensitivity

The sensitivity can be set individually for each PIR sensor.

- Press the PIR A, PIR B, PIR C or PIR A-C buttons for less than 10 seconds.
  - Within 5 seconds, press the 25%, 50%, 75% or 100% button. Sensitivity is set.
- INFO:** If no touch-sensitive button is pressed within 5 seconds, the old setting is kept.

### Limiting the detection field

The detection field of the motion detector can be limited by switching off one or two PIR sensors. Since the detection areas of the PIR sensors overlap, there is no distinct demarcation of the blocked out detection area. If all the PIR sensors have been switched off, then the device works as a twilight switch.

- Press the PIR A, PIR B or PIR C button for longer than 10 seconds.  
The appropriate PIR sensor is switched off and the detection field is limited.
- Press the PIR A-C button for longer than 10 seconds.
- If all the PIR sensors are switched off, then the device functions as a twilight switch.





**INFO:** Individual PIR sensors or all of them can be switched on by setting a sensitivity for the PIR sensors (see Setting sensitivity).

### Setting the switch-on brightness

One of four predefined brightness thresholds (see table) or one individual brightness threshold can be set (see Saving current brightness as the switch-on brightness). If the device is set as a motion detector, then the brightness is measured on the device. If the device is set as a presence detector, then the brightness is measured on the work surface.

- Press the appropriate button (see table).

### Brightness thresholds


Icon	Device function, motion detector	Device function, presence detector
	5 lux	200 lux
	10 lux	500 lux
	150 lux *	1000 lux
	Brightness-independent – day operation	Brightness-independent – day operation

Setting for stairways according to DIN EN12464-1, 2003-03

### Saving the current brightness as the switch-on brightness

The Teach function can be used to save the current brightness as a switch-on brightness.





**INFO:** Do not shade the device during the measuring process.

- Create the desired lighting situation, e.g. switch the light on or off.
- Press the **Teach**  button for longer than 10 seconds.

The Teach function is activated, the current brightness is saved as the switch-on brightness and is used after a maximum of 3 minutes.

**INFO:** If a value greater than 2000 lux is saved, the motion detector switches to day operation independent of the brightness.


### Setting fixed run-on time

- Press the 30 s , 2 min , 5 min  or 30 min  button.


If the run-on time is shortened, then it only becomes active after the device has switched off once. To cancel a running run-on time, set the special function Continuous on, for example, and then switch back to Automatic operation (see Operation).

### Setting individual run-on time

The individual run-on time can be set within a range of 10 seconds to 60 minutes. One of the fixed run-on times can be set again at any time.

- Press the 0-1 h  button.

Run-on time starts.


- When the required run-on time is reached, press the **0-1 h**  button.

The device saves the run-on time.

If the run-on time is shortened, then it only becomes active after the device has switched off once. To cancel a running run-on time, set the special function Continuous on for example and then switch back to Automatic operation (see Operation).


### Setting the dynamic run-on time

The device adapts the run-on time to the motion situation.

- Press the **Dyn.**  button for longer than 10 seconds.
- The dynamic run-on time is activated.


**INFO:** To switch off the function, press the Reset button for between 4 and 10 seconds

### Switching on short time operation

- Press the **1 s**  button.
- No individual or dynamic run-on time can be set in a short time operation. To switch off short-time operation, set a fixed or individual run-on time.

### Switching on switch-off warning

Switch-off warning is switched off.

- Press the **On/Off**  button for longer than 10 seconds.
  - Switch-off warning is switched on. If pressed again, the switch-off warning is switched off again.
- The function is also switched off if the Reset button is pressed for between 4 and 10 seconds.


### Switching on the function as a twilight switch

All the PIR sensors must have been switched off for the device to work as a twilight switch.

- Press the PIR A-C button for longer than 10 seconds. The red LED lights up. The device functions as a twilight switch.
- INFO:** If day operation is set as the switch-on brightness, the light remains off continuously.
- Switching via a 2-wire extension or push-button is not possible.

### Switch on the test operation

The test operation is used for testing the detection area. In test operation, the device operates independently of the brightness. All the other settings remain unchanged. Detected motions are signalled by the blue status LED.

- Press the Test 100 h button for between 4 and 10 seconds. The test operation is switched on for 5 minutes.
  - **INFO:** By pressing the  button of the supplied IR remote control, you can switch to automatic operation at any time (see Operation).
  - **INFO:** The function is also switched off if the Reset button is pressed for between 4 and 10 seconds.

## Switch on “On” for 100 h

This function is used to burn in fluorescent lamps.

- Press the Test 100 h button for longer than 10 seconds.  
The lamps are switched on for 100 hours. The device is switched back to automatic operation again after the time has elapsed.
- **INFO:** During the 100 hours, no switching is possible via 2-wire extension, push-but-ton or IR remote control, movement signals are not evaluated.
- To switch off the function, press the Reset button for between 4 and 10 seconds.

## Saving settings

Save the settings so that, if necessary, the end customer can recall them using the Set 2 button of the supplied IR remote control. No values are saved in the as-de-livered state.

- Press the Set 1 button for longer than 10 seconds.
- The following settings are saved: device function, the sensitivity of PIR A-C, detection angle, switch-on brightness, run-on time, dynamic run-on time, short-time operation, and switch-off pre-warning. Previously saved values are overwritten.

## Restoring the device to factory settings

- Press the Reset button for longer than 10 seconds.

Function	Value
Device function	Motion detector
Operating mode	Automatic operation

Sensitivity of PIR A-C	75%
Detection angle	360°, PIR A-C switched on
Switch-on brightness	10 lux
Run-on time	2 minutes
Dynamic run-on time	switched-off
Short-time operation	switched-off
Switch-off warning	switched-off
Presence simulation	switched-off
Test operation	switched-off

**INFO:** If the Reset button is pressed for between 4 and 10 seconds, only a few functions are terminated (see Button assignment of “installation engineer” IR remote control).

## Technical data

- **Rated voltage** AC 110 ... 230 V ~
- **Mains frequency** 50 / 60 Hz
- **Ambient temperature** -5 ... +45°C
- **Standby power max.** 0.3 W
- **Circuit breaker max.** 16 A
- **Contact type** ε
- **Detection angle** 360°
- **Dimensions Ø×H** 103 × 66 mm
- **Installation height** 3 m
- **Detection field** Ø approx. 20 m
- **Sensitivity** 25 ... 100%
- **Brightness setting** Approx. 5 ... 2000 lx (and day operation)
- **Run-on time** approx. 10 s ... 30 min

#### **Short-time operation**

- **Pulse duration** approx. 0.5 s
- **Pulse stop** approx. 3 s

#### **Switching current at 35 °C**

- **Ohmic** 16 A (AC1)
- **Fluorescent lamps** 4 AX

#### **Minimum switching current AC 100 mA**

- **Connected load at AC 230 V~ and 35 °C**
- **Incandescent lamps** 2300 W
- **HV halogen lamps** 2000 W
- **Electronic transformers** 1500 W
- **Inductive transformers** 1000 VA
- **HV-LED lamps typ.** 400 W
- **Compact fluorescent lamps typ.** 400 W
- **Fluorescent lamps, uncompensated** 920 VA
- **Capacitive load** 690 VA (560 µF)

#### **Connected load at AC 110 V~ and 35 °C**

- **Incandescent lamps** 1150 W
- **HV halogen lamps** 1000 W
- **Electronic transformers** 750 W
- **Inductive transformers** 500 VA
- **HV-LED lamps typ.** 200 W
- **Compact fluorescent lamps typ.** 200 W

- **Fluorescent lamps, uncompensated** 460 VA
- **Capacitive load** 345 VA (560  $\mu$ F)

## Connection

- **Single stranded** 1.0 ... 2.5 mm<sup>2</sup>
- **finely stranded with tin-plated conductor ends:** 0.75 ... 1.5 mm<sup>2</sup>

## Number of extension units

- **Push-button** unlimited
- **2-wire** unlimited
- **Total length of extension device cable** Max. 100 m
- **Total length power cable** Max. 100 m
- **IR remote control Battery type** 1×lithium CR 2025

## Troubleshooting

### Device does not switch on

- Cause 1: The ambient brightness is greater than the set brightness value.
  - Set brightness value.
- Cause 2: Device does not detect any motions.
  - Increase sensitivity.
  - Switch on all sensors.
- Cause 3: Off for 2 hours or Continuous off is activated
  - Switch on automatic mode.

### Device switches on without motions

- **Cause 1:** Presence simulation is activated. Device switches at saved times. Switch the presence simulation off.
- **Cause 2:** Interference sources in the detection field.
  - Remove interference sources if possible.
  - Reduce sensitivity.
  - Limit the detection field.

### The device constantly switches on and off during motion

- Cause 1: Short-time operation is switched on.  
Set a longer run-on time.

### The device switches off despite the motion

- **Cause 1:** The device does not detect any motion.

Increase sensitivity.

- **Cause 2:** The detection field is limited because a sensor was switched off.

Switch on all sensors.

- **Cause 3:** The detection field is limited by the push-on cover.

Check the push-on cover.

## **Device does not switch off**

- Cause 1: Interference sources in the detection field, device detects motions constantly.

- Remove interference sources if possible.

- Reduce sensitivity.

- Limit the detection field.

- **Cause 2:** On for 2 hours, Continuous on or On for 100 hours is activated.

Switch on automatic mode.

- **The device does not respond to IR remote control, red LED does not flash.**

- **Cause 1:** IR remote control out of range. Go closer to the motion detector.

- **Cause 2:** Battery in IR remote control is empty. Change battery (see back of the IR remote control).

- **The device does not respond to IR remote control, red LED flashes, blue LED does not**

- **Cause:** Device is receiving an IR signal. Function or setting cannot be executed.

## **Accessories**

IR remote controller PIR 1 (installer)

## **Warranty**

The warranty is provided by the specialist trade in accordance with statutory requirements. Please submit or send faulty devices postage paid together with a fault description to your responsible salesperson (specialist trade / installation company / electrical specialist trade). They will forward the devices to the Gira Service Center.

## **Gira**

- Giersiepen GmbH & Co. KG
- Elektro-Installations-
- Systeme
- Industriegebiet Mermbach
- Dahlienstraße
- 42477 Radevormwald
- Postfach 12 20
- 42461 Radevormwald

## **Deutschland**


- **Tel** +49(0)21 95 – 602-0
- **Fax** +49(0)21 95 – 602-191

- [www.gira.de](http://www.gira.de)
- [info@gira.de](mailto:info@gira.de)


## FAQ

- **Q: Can the device be extended with 3-wire extensions?**
    - A: The extension of the detection field with 3-wire extensions is not possible for this product.
  - **Q: How does the switch-off warning feature work?**
    - A: If the switch-off warning is active, the light does not immediately switch off after the run-on time has elapsed. Instead, there will be triple flashing at 10-second intervals to indicate that the light will be switched off soon.
- 

## Documents / Resources

	<p><a href="#">GIRA 2399 02 Presence Detectors and Motion Detectors 360 Degree Compact</a> [pdf] Instruction Manual</p> <p>2399 02 Presence Detectors and Motion Detectors 360 Degree Compact, 2399 02, Presence Detectors and Motion Detectors 360 Degree Compact, Motion Detectors 360 Degree Compact, Degree Compact</p>
--	---

## References

-  [Schalter, Steckdosen & smarte Technik | Gira](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.