

Jarvisen B14ECjGUg-L Language Translator Device User Guide


[Home](#) » [Jarvisen](#) » Jarvisen B14ECjGUg-L Language Translator Device User Guide 




Contents

- [1 Exterior Function Introduction \[Front\]](#)
- [2 Exterior Function Introduction \[Back\]](#)
- [3 Home page function](#)
- [4 Voice Translation-button free](#)
- [5 Photo Translation](#)
- [6 More applications](#)
- [7 Quick setting](#)
- [8 Accessories](#)
- [9 Product information](#)
- [10 Frequently Asked Questions](#)
- [11 Safety Instructions](#)
- [12 After—sales contact information](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

Exterior Function Introduction [Front]

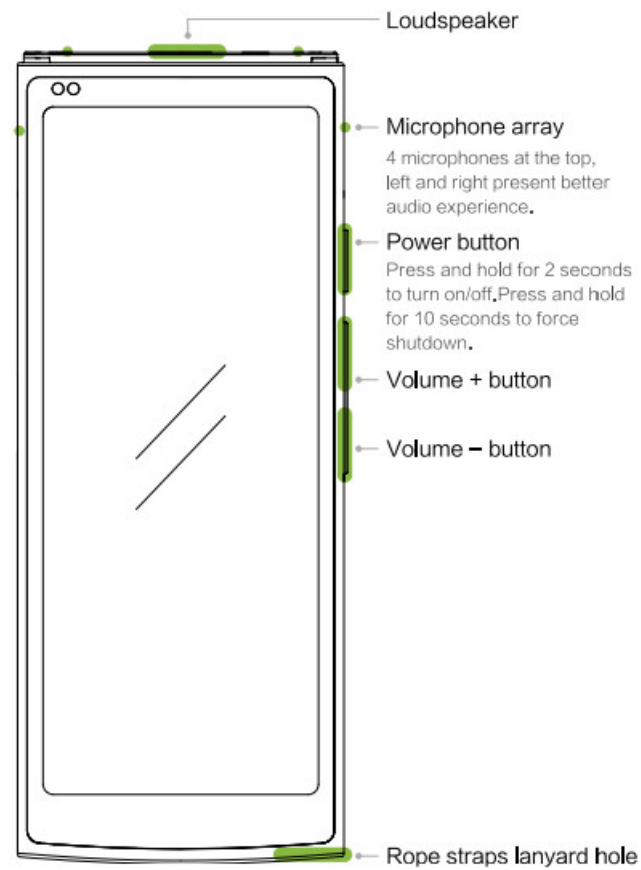


Exterior Function Introduction [Back]

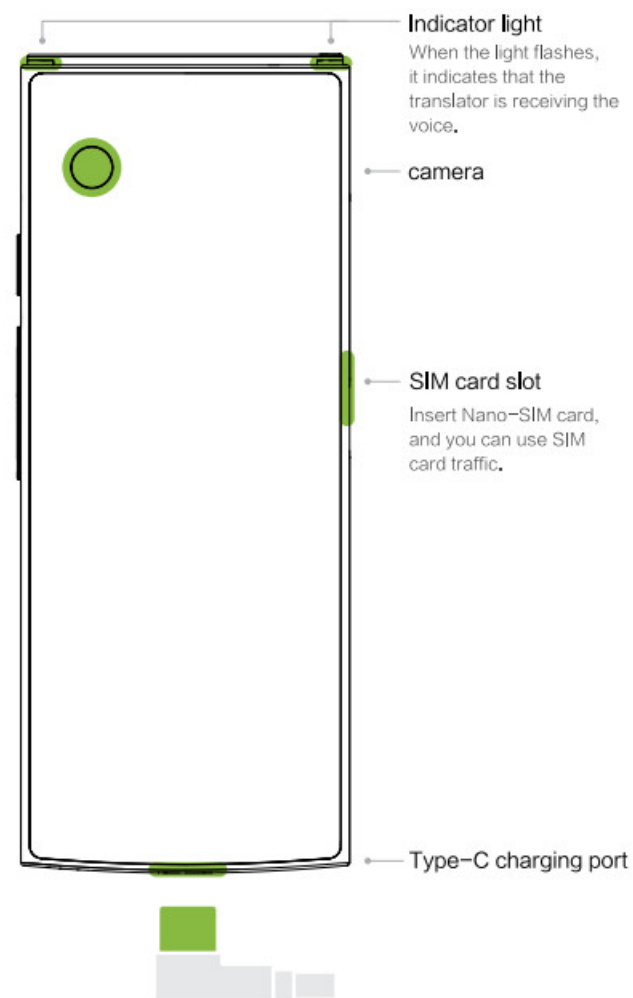

Home page function

- Click or hold down the voice key on the screen to translate the speech
- You can also hold down the volume button to speak and release to translate. (You need to click " : " in the lower right corner of the screen to turn on the function of "volume button reused as speech button")

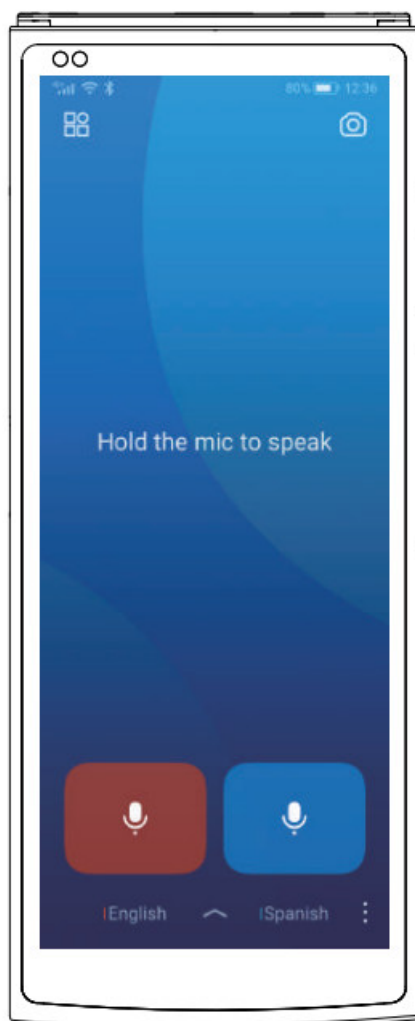

More functions

You can see more functions by clicking the icon or swiping the screen from left to right.



Photo translation

You can switch to photo translation by clicking the icon or swiping from right to left.



Red button

Hold down the red button and say "Hello", then release to translate.



Blue Button

Hold down the blue button and say "Hello", then release to translate.

Language


Click the Language button to select other languages.

Voice Translation-button free

Pick up to speak and put down o translate.

Pick up the translator so that the top front is close to mouth, about 10cm away. When you hear the "beep" sound, start to speak, and then move the transforator 'away from the mouth beyond 10cm away to trigger the translation.

When using this function, please click "fight corner of the voice translation interface to ensure ;" in the lower that the "button~free translation" function is turned on.

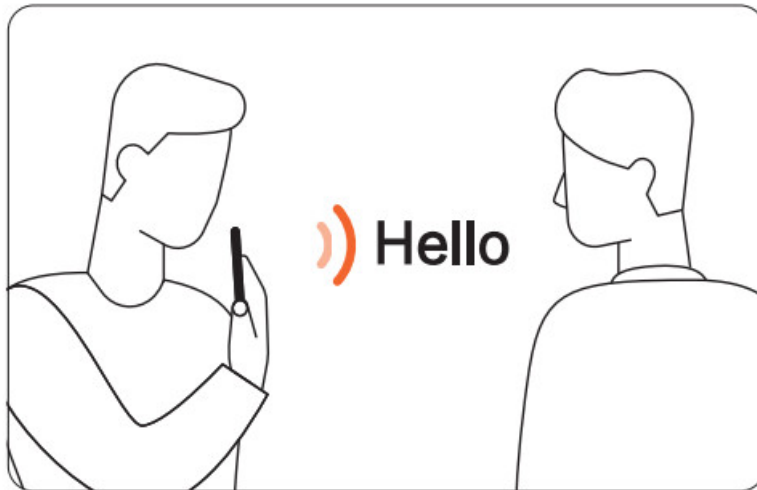

Pick up to speak and put down to translate.

Voice Translation-button free

Hand out to automatically broadcast translation and receive sound.

After finish speaking, you can hand out the translator to show and broadcast the translation to the other party in full screen. At the end of the broadcast, the translator will automatically record, recognize the other party's voice and translate.




After finish speaking, you can broadcast the translation and automatically receive the other party's voice.

Photo Translation

Full-screen framing, shooting and instant translation.

- Full screen mode: select the language to translate, and after pressing the shutter, it can directly translate the text into the target language.
- Smear mode: select the language you need to transmute and press the shutter to smear the text of the area you need to translate into the target language.

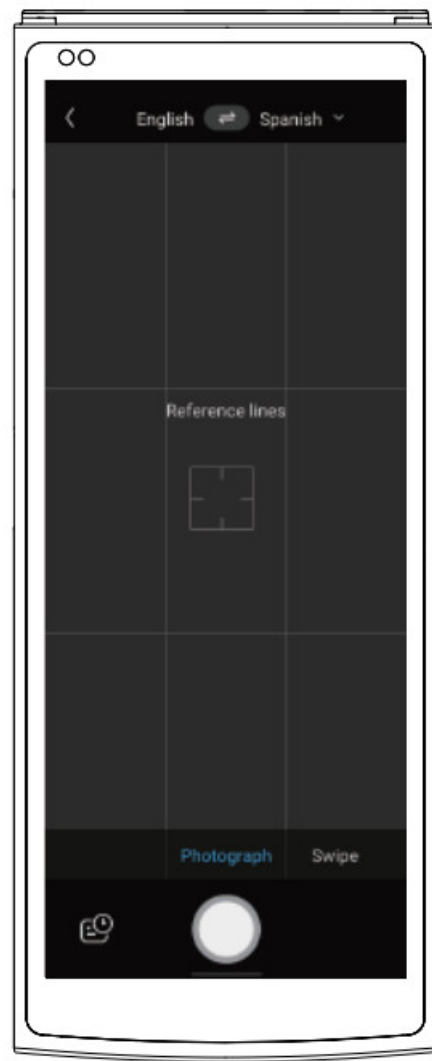


More applications



Click the icon in the upper left corner of the home page, or slide the page from left to right to see more applications and settings.

Quick setting


You can swipe down from the top status bar to see more quick setting

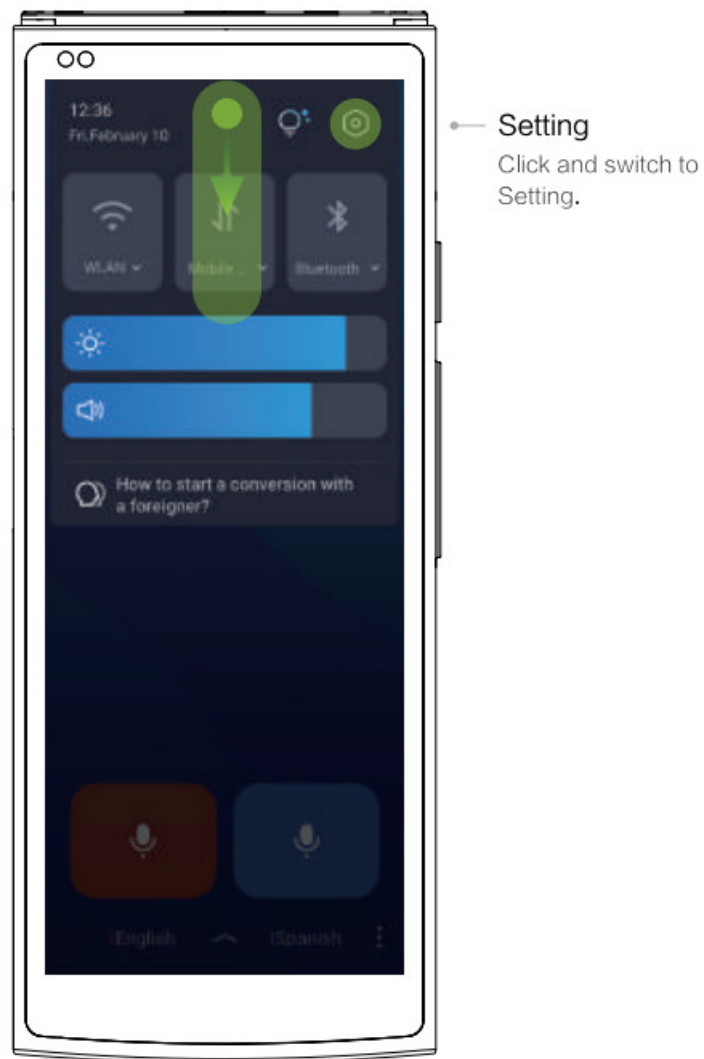

Accessories

Accessories include:

Type-C data cable, SIM pin, instruction manual and protective case.

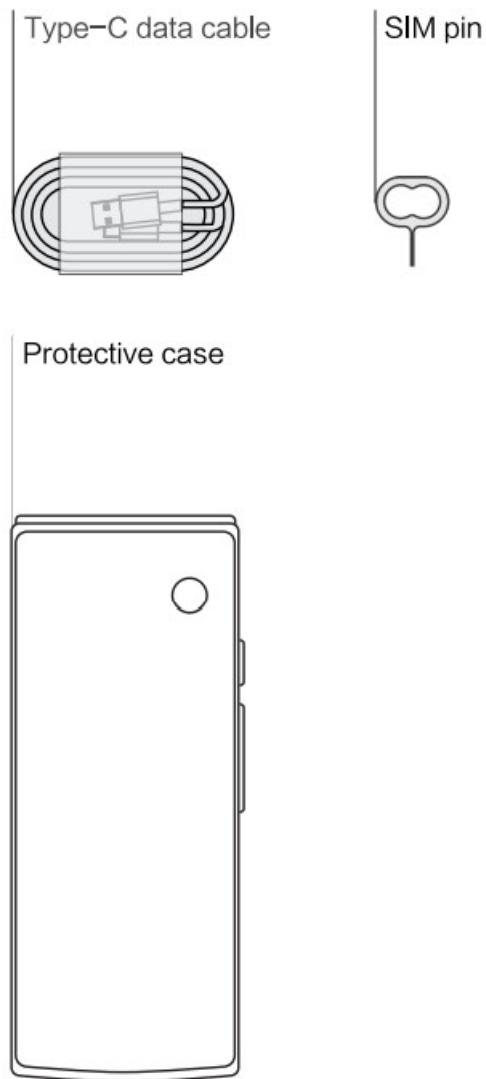

Product information

Product specification

Product name: Jarvisen Translator 2

Product model: JT-2-BLACK

Manufacturer: Hillsdale Technology LLC, California, USA

Hardware Parameters

Processor: Eight-core ARM processors

Microphone: – U-shaped 4-microphone array

Speaker: 1612 classic superlinear horn

Display screen: 5.05-inch HD IPS screen

Sensors: gyroscope, distance sensor

Size and weight

Size: 56.5 * 140.6 * 10.4 mm

Product weight: 130g

Charging battery

Charging specification: DC 5V 2A

Battery capacity: 2100 mAh

Frequently Asked Questions

Q1. Inaccurate identification or translation results?

Answer: Please avoid using it in noisy environment. If the surrounding environment is noisy, you can try to

Speak close to the microphone:

- Q3. How to export translation records?

Answer: When the translator is connected to a computer, open 'Record Export' and follow the notice to export the translation records.

- Q4. How to connect to global Internet ?

Answer: We give away 2 years of global free traffic and support online translation services in more than 100 countries and regions globally. You can open the 'Global Internet Access'.

- Q5. How to change the font size?

+ Q6. How to download the offline language package?

Q7. Why is the translator charging abnormally?

purchase through official channels. Answer: The charging specification is 5V 2A. Please use a power adapter that meets the standard and if the battery of the translator is discharged due to long-term non-use, it needs to be continuously charged for more than half an hour, and then try to switch on. "This guide is for reference only, and the software will be continuously upgraded. Please refer to the physical object."

Safety Instructions

Please read all the following safety information before using this product:

1. Please do not use this product outdoors in thunder— storm weather,
2. The product package contains small objects, so please put it out of the reach of children, and don't let children use it alone,
3. Please don't use it while driving, so as not to distract attention and lead to traffic accidents.
4. The charging specification is 5V 2A. Please use a power adapter that meets the standard test and is purchased through regular channels.
5. Please keep the translator in a dry and cool environment, and do not use organic solvents and other liquids to clean this product.
6. The operating temperature of the translator is between -10 °C and 45 °C. If the operating temperature exceeds this temperature range, the translator may be damaged and the battery life will be shortened.
7. Please do not disassemble the battery or modify the charger without permission. The battery of the translator can only be replaced by Hillsdale Technology Company or its authorized service provider.

8. Any radio transmitting equipment (including this product) may interfere with the use of improperly protected medical equipment. Please consult medical personnel or medical equipment manufacturers to ensure that the relevant regulations are observed when the use of electronic equipment is prohibited. At the same time, for users who are equipped with pacemakers and hearing AIDS, please use them carefully according to the corresponding medical equipment regulations.
9. Please don't just rely on the translator as a communication tool in an emergency, such as medical aid. The translation results provided by the translator are for reference only and do not constitute any form of guarantee.
10. Safety information related to product privacy can be viewed in the "Settings—Privacy" of the translator.
11. Our company is only responsible for the official system and update system, and any unofficial third-party system will have security risks.

Derechos De Autor © Hillsdale Technology LLC, California, EEUU 2023 Todos Los Derechos Reservados.

After—sales contact information

Company name: Hillsdale Technology LLC, California, USA

Official Website: <https://www.jarvisen.com>

Email: support@jarvisen.com

Customer Service Tel: +1(202)996-7882


Company address: 3182 Campus Drive, Unit 266 San Mateo CA 94403, United States



<https://www.jarvisen.com/pages/user-guide-2>

Scan to view digital instructions

Documents / Resources

	Jarvisen B14ECjGUg-L Language Translator Device [pdf] User Guide B14ECjGUg-L, B14ECjGUg-L Language Translator Device, Language Translator Device, Translator Device, Device
---	--

References

- [User Manual](#)