

# **JBC ND-KP Tapered Tips Set Case for DPM Instruction Manual**

Home » JBC » JBC ND-KP Tapered Tips Set Case for DPM Instruction Manual



### **Contents**

- 1 JBC ND-KP Tapered Tips Set Case for **DPM**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Packing List
- 5 How to use
- **6 Steel Needles Range**
- 7 Tapered Tips Range
- **8 Specifications**
- 9 Documents / Resources
  - 9.1 References



# **JBC ND-KP Tapered Tips Set Case for DPM**



The NDKP / NDKS Tapered Tips Set Case for DPM / Steel Needles Set Case for DPM is a product designed for use with syringes. Itincludes steel needles and tapered tips that can be used as replacements for the syringe cap. The product comes in two variations: ND-KS and ND-KP.

- The ND-KS set includes 16 units of the Steel Needles Set Case for DPM, with 2 units of each reference. It also
  includes a manual with reference number 0027833.
- The ND-KP set includes 10 units of the Tapered Tips Set Case for DPM, with 2 units of each reference. It also includes a manual with reference number 0027833.

The product specifications are as follows:

- NDKS Steel Needles Set Case for DPM Ref. ND-KS
  - Total Net Weight: 20.9 g / 0.046 lb
  - Package Dimensions/Weight (L x W x H): 90 x 55 x 40 mm / 32.5 g / 3.54 x 2.17 x 1.57 in / 0.072 lb
- NDKP Tapered Tips Set Case for DPM Ref. ND-KP
  - Total Net Weight: 18.8 g / 0,014 lb
  - Package Dimensions/Weight (L x W x H): 90 x 55 x 40 mm / 30.3 g / 3.54 x 2.17 x 1.57 in / 0.067 lb

The product is compliant with CE standards and comes with a 2-year warranty that covers manufacturing defects. The warranty does not cover product wear or misuse.

For proper disposal, the product should not be thrown in the garbage. It must be collected and returned to an authorized recycling facility in accordance with the European directive 2012/19/EU.

### **Product Usage Instructions**

To use the NDKP / NDKS Tapered Tips Set Case for DPM / Steel Needles Set Case for DPM, follow these steps:

- 1. Remove the syringe cap from the syringe.
- 2. Choose either a stainless steel needle or a tapered tip from the set case.
- Replace the syringe cap with the chosen stainless steel needle or tapered tip.

**Note**: Ensure that the chosen stainless steel needle or tapered tip matches the desired style, solder color, gauge, paste length, total length, and needle length as specified in the product manual.

For more information, please visit <u>www.jbctools.com</u>.

This manual corresponds to the following references:

- ND-KS
- ND-KP

# **Packing List**


### ND-KS

The following items are included:



Steel Needles Set Case for DPM 16 units

Manual 1 unit Ref. 0027833

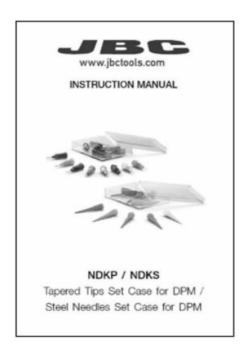


# ND-KP

The following items are included:




Tapered Tips Set Case for DPM 10 units

Manual 1 unit Ref. 0027833

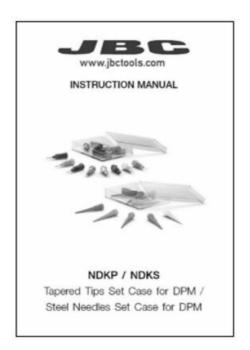


# How to use

• Replace the syringe cap for a stainless steel needle or a tapered tip.

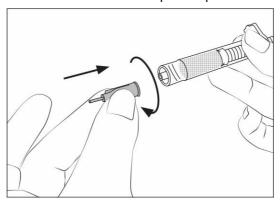

# **Steel Needles Range**

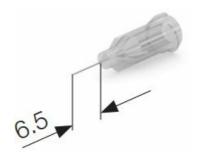

STYLE	Ref.*	COLO R	SOLD ER PA STE	GAU GE	ØID (mm)	ØID ( in)	ØOD (mm)	ØOD (in)	LENG TH (mm)	LENG TH (in)	TOTAL LENG TH (mm)	TOTAL LENG TH (in)
Stainle ss Ste el Nee dles	ND18 S6	Green	Type 2	18	0.84	0.050	1.27	0.033	6.5	0.25	24	0.25
	ND20 S6	Pink	Type 3	20	0.61	0.036	0.90	0.024	6.5	0.25	24	0.25
	ND21 S6	Purple	Type 3	21	0.51	0.032	0.82	0.020	6.5	0.25	24	0.25
	ND22 S6	Blue	Type 3	22	0.41	0.028	0.72	0.016	6.5	0.25	24	0.25
	ND23 S6	Orang e	Type 3	23	0.31	0.025	0.63	0.013	6.5	0.25	24	0.25
	ND25 S6	Plan R ed	Type 4	25	0.25	0.020	0.50	0.010	6.5	0.25	24	0.25
	ND27 S6	Clear	Type 5	27	0.2	0.016	0.40	0.008	6.5	0.25	24	0.25
	ND30 S6	Laven der	Type 6	30	0.15	0.012	0.31	0.006	6.5	0.25	24	0.25

These references are supplied in packages of 10 units.

# **Tapered Tips Range**



STYLE	Ref.*	COLO R	SOLD ER PA STE	GAU GE	ØID (mm)	ØID ( in)	ØOD (mm)	ØOD (in)	LENG TH (mm)	LENG TH (in)	TOTAL LENG TH (mm)	TOTAL LENG TH (in)
	ND18 P	Green	Type 2	18	0.84	0.033	1.27	0.050	_	_	32	1.26
Tapere d Tips	ND20 P	Pink	Type 3	20	0.64	0.024	1.20	0.048	_	_	32	1.26
	ND22 P	Blue	Type 3	22	0.41	0.016	0.72	0.028	_	_	32	1.26
	ND25 P	Red	Type 4	25	0.25	0.010	0.50	0.020	_	_	32	1.26
	ND27 P	Clear	Type 5	27	0.2	0.008	0.40	0.016	_	_	32	1.26

These references are supplied in packages of 10 units.

# **Specifications**

#### **NDKS**

Steel Needles Set Case for DPM

Ref. ND-KS

• Total Net Weight: 20.9 g / 0.046 lb

## **NDKP**

**Tapered Tips Set Case for DPM** 

Ref. ND-KP

• Total Net Weight: 18.8 g / 0,014 lb

Package Dimensions/Weight: 90 x 55 x 40 mm / 30.3 g (L x W x H) 3.54 x 2.17 x 1.57 in / 0.067 lb

### Warranty

JBC's 2-year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. The warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

This product should not be thrown in the garbage. In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



## **Documents / Resources**



JBC ND-KP Tapered Tips Set Case for DPM [pdf] Instruction Manual ND-KP Tapered Tips Set Case for DPM, ND-KP, Tapered Tips Set Case for DPM, Tips Set Case for DPM, Set Case for DPM, Case for DPM, DPM

# References

• JBC Soldering and Rework equipment for electronics

Manuals+,