

Jeasun SW-SX27-JS Smart Watch Instructions

Home » Jeasun » Jeasun SW-SX27-JS Smart Watch Instructions

Jeasun Smart Watch

Dear Customer, Thank you very much for purchasing the smartwatch from us! Smartwatch offers various convenient functions to help you enjoy your day better! Only when you set the watch and your phone properly! This instruction will show you how to connect your watch to your phone step by step! Follow the steps below and Start Your Smarter Day Right Now!


Check the device name of your smartwatch




Turn the watch



Slide the screen to right and find the Setting icon

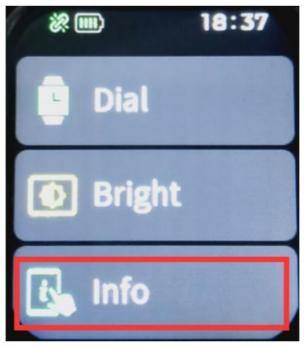

Enter Setting and find the Info icon

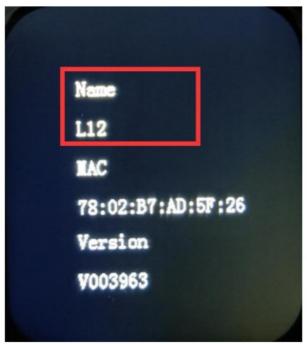

Enter Info to see the name of the smartwatch Next Page, we will show you how to set the APP on your Android phone.

Contents

- 1 For Android Phones:
- 2 For iPhones:
- 3 Documents /

Resources

4 Related Posts


For Android Phones:

Please download GloryFit APP first. You can download the APP by scanning the QR code on the package box, including instructions and your watch(Setting>QR code).




Install the GloryFit APP.

If it's the first time you install this APP, you will need to set your personal file(gender, age, etc.)

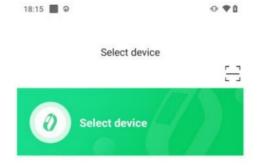




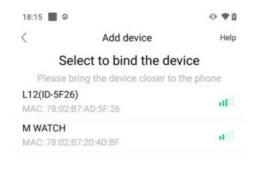



Find the name of your device and select the device to start pairing.

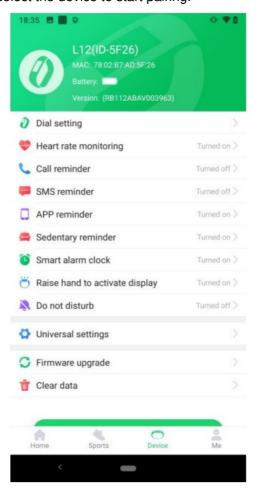

Successfully connected. Now you can check the connection by changing a watch face or setting an alarm clock.

Next Page, we will show you how to set the APP on your iPhones

For iPhones:

Note: APP used on iPhone XR


Please download GloryFit APP first. You can download the APP by scanning the QR code on the package box, including instructions and your watch(Setting>QR code).



Install the GloryFit APP.


If it's the first time you install this APP, you will need to set your personal file(gender, age, etc.)






Add a new device area. Select the Device icon from the 4 icons at the bottom and touch the




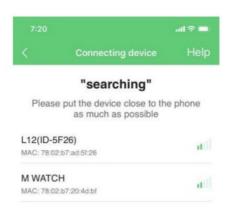

Find the name of your device and select the device to start pairing.

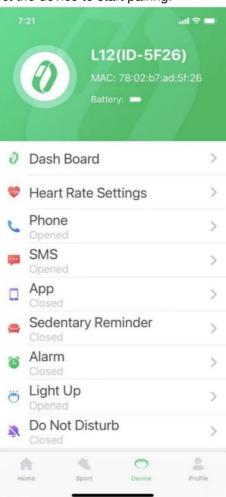

Documents / Resources

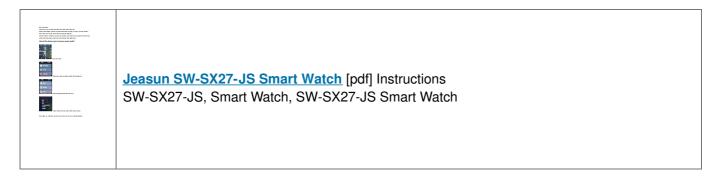

Manuals+,