



JISULIFE LA02 Computer Monitor Light Bar User Manual


[Home](#) » [JISULIFE](#) » JISULIFE LA02 Computer Monitor Light Bar User Manual 

Contents

- [1 LA02 Computer Monitor Light Bar](#)
- [2 Product Introduction](#)
- [3 Installation Instruction](#)
- [4 Take out batteries](#)
- [5 Instructions for use](#)
- [6 I. Light control](#)
- [7 2. Angle adjustment](#)
- [8 Method one](#)
- [9 Method two,](#)
- [10 Reminders](#)
- [11 Safety precautions](#)
- [12 Three-guarantee Certificate](#)
- [13 The Following Conditions Will Not Be Free Maintenance](#)
- [14 Product Parameters](#)
- [15 Packing Accessories](#)
- [16 FCC Requirement](#)
- [17 Documents / Resources](#)
- [18 Related Posts](#)


LA02 Computer Monitor Light Bar

JISULIFE

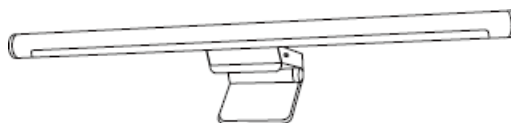


LA02

Product Introduction

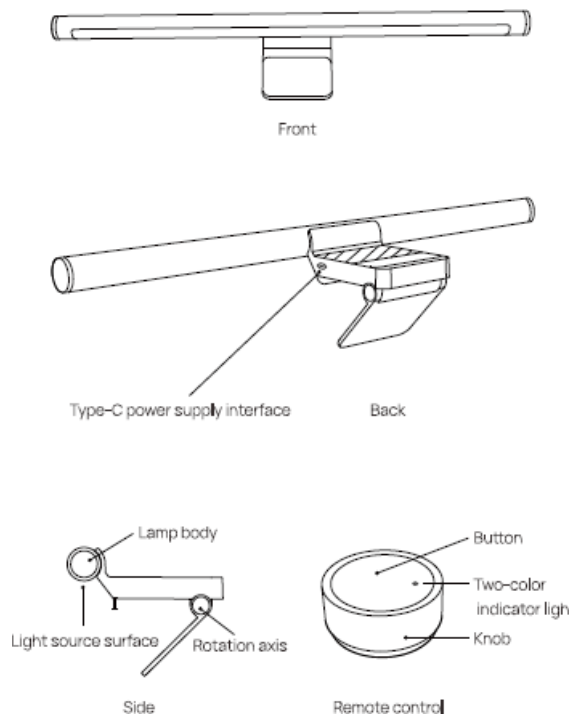


Installation Instruction

1. Place the lamp body in the middle above the display as shown in the figure, make the fixing bar close to the edge of the monitor and adjust the lower rotation axis against the back of the monitor:

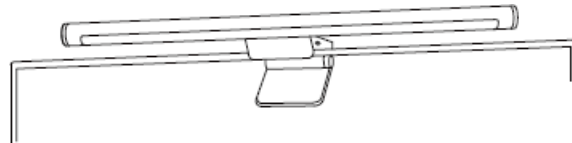

2. Connect the USB power cable to the power interface, and connect the other end to the power supply:

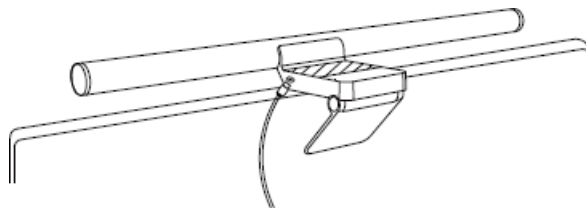

Note: Using an adapter or power supply equipment with output voltage greater than 5V to supply power for this product may cause product damage and bring potential safety hazard!

3. Open the back cover of the remote control and install 2 AAA batteries into the remote control to complete the installation.




Remove the back cover

Put the back cover back

Take out batteries

Please turn off the power before removing the batteries from the product according to the above method before discarding,

Instructions for use

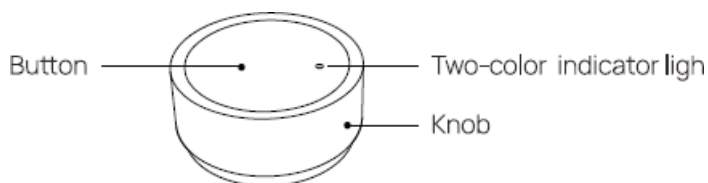

I. Light control


Long press the remote control button for 1.5 seconds to switch on and off, and turn the remote control knob to adjust brightness after power on; Short press the remote control button to switch to color temperature adjustment,

The indicator light is white, and rotate the remote control knob to adjust the color temperature after the indicator light is on (warm light to the left and cold light to the right) After restart, you can remember the last color temperature and brightness; Double click the button on the remote control to switch the leisure mode (3500K), reading mode (4500K) and focus mode (6000K) in turn; The brightness can be adjusted but the color temperature cannot be adjusted in the three preset modes. The indicator light is green.

Reminder: The remote controller has been matched with the lamp and can be used directly. If you need to pair with other remote controls of the same model, please long press the remote control button within 20 seconds after the lamp is powered on, and the matching will be successful if the lamp has breathing effect.

2. Angle adjustment

As shown in the figure, the light output angle and range of the lamp can be adjusted by rotating the lamp tube;

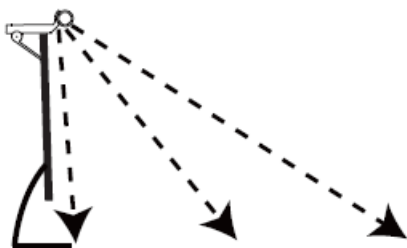

3. Connect with Tmall Genie

Method one

1. Download and open the "Tmall Genie App"

2. Enter "my home" to * add device" in the APP.

3.Wait for nearby devices to be searched and complete the network binding process according to the prompts.

Method two,

1.Successfully network the Tmall Genie

2,Make sure the device is in the state of distribution network

3.Voice to Tmall Genie: "Tmall Genie, find a teammate"

4,Connect as prompted.

Reminders

1.When the device is powered on, it will enter the state of distribution network by default if there is no distribution network, and the waiting time for distribution network is 10 minutes.

2.To clear the distribution network, Please wait for 3S after powering on for 5 times (each interval is less than 3S)to clear the distribution network, then the device will re-enter the distribution network state.

Safety precautions

1, Please use an adapter with stable output of $SV=1.2A$ or other power supply devices to power the product, such as mobile power supply or USB interface of computer. Insufficient power supply will lead to brightness decline of the product and even affect normal use. If the input voltage of the device is greater than 5V, product damage and safety risks may occur.

2.Do not use in unstable places to avoid dumping and damaging the lamp.

3.The product is not a toy for children. Children under 14 years old should use it under the supervision of a guardian.

4,Do not cover flammable materials such as cloth or paper on the lamp to avoid fire accidents.

5, Do not use this product in a damp environment,

6.Do not plug or unplug the USB power cable with wet hands to avoid electric shock.

7,Please clean the product regularly. When cleaning the surface of the product, please unplug the power supply and wipe it with a soft cotton cloth. Do not use liquid, spray cleaner or damp cloth for cleaning.

8, Do not touch the hot part of the lamp body when the lamp is on or within 3 minutes after turning off the lamp to avoid burns,

9. When not using the lamp for a long time, please pull out or cut off the power of the USB power cable.

10. Do not disassemble the product by yourself.

11. This product is for indoor use only.

12. The light source of this lamp is irreplaceable. When the light source reaches the end of its life, the entire lamp should be replaced.

Three-guarantee Certificate

1, Please keep the warranty card properly as a certificate for maintenance.

2. The warranty period is within one year from the date of purchase.

3. During the warranty period, if this product breaks down under normal use and is verified by our company, we will provide maintenance and replacement services free of charge.

The Following Conditions Will Not Be Free Maintenance

Our products are subject to limited warranty within the warranty period. Equipment failure or damage under the following circumstances is not covered by the limited warranty, and the Company will not undertake the warranty obligation free of charge:

1, Equipment or components have exceeded the valid warranty period,

2. Equipment failure or damage caused

by incorrect installation, storage and use by users who fail to comply with the requirements of the manual .

3. Equipment failure or damage not caused by disassembly by authorized institutions or personnel of the company.

4, Equipment failure or damage caused by unexpected factors or man-made reasons (including but not limited to operation errors, scratches, handling, bumping, input of inappropriate voltage and current, etc.).

5, Equipment failure or damage caused by force majeure such as natural disasters (including earthquake, fire, etc.)

The contents in this user manual and the technical specification of the product will be changed without prior notice.

Product Parameters

Brand: JISULIFE

Product model: LAO2

Product name: Monitor light

Rated input: 5Va=.2A

Rated power: 6W

Working temperature: – 10-45 C

Color rendering index: Ra>90

Color temperature: 2700k-6500k

Product weight: 506g

Dimensions: 460X104,7X46.3mm

Packing Accessories

Monitor light *1

Remote control *1

AAAbattery *2

USB power cable *1

User manual *1

Certificate of Quality

Inspector 01 Pass


FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Documents / Resources

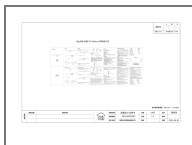

[JISULIFE LA02 Computer Monitor Light Bar](#) [pdf] User Manual
LA02, 2A6CH-LA02, 2A6CHLA02, Computer Monitor Light Bar, LA02 Computer Monitor Light Bar, LA02 Monitor Light