

JLAB Epic Wireless Keyboard Instruction Manual

Home » JLab » JLAB Epic Wireless Keyboard Instruction Manual 🖫

Contents

- 1 JLAB Epic Wireless
- Keyboard
- **2 REGISTER TODAY**
- 3 KEYS
- **4 SHORTCUT KEYS**
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**



JLAB Epic Wireless Keyboard



We love that you are rocking JLab!

We take pride in our products and fully stand behind them.

YOUR WARRANTY

All warranty claims are subject to JLab authorization and at our sole discretion. Retain your proof of purchase to ensure warranty coverage.

CONTACT US


Reach out to us at support@jlab.com
or visit jlab.com/contact

REGISTER TODAY

jlab.com/register

Product updates | How-to tips FAQs & more


CONNECT WITH DONGLE

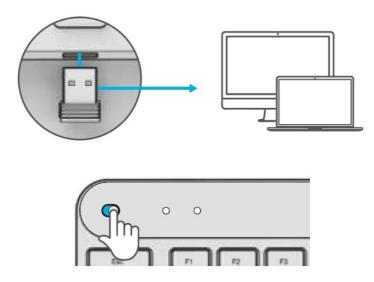


Install 2.4G USB dongle and switch keyboard on Epic Keys will auto connect If connection is unsuccessful, press and hold 2.4 until button flashes quickly. Unplug and re-plug dongle into computer.

CONNECT WITH BLUETOOTH


Press and hold or 1 2 for Bluetooth pairing LED will blink in pairing mode Press and hold CONNECT Select "JLab Epic Keys" in device settings

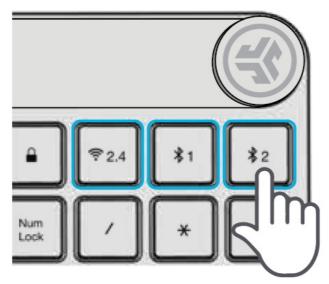

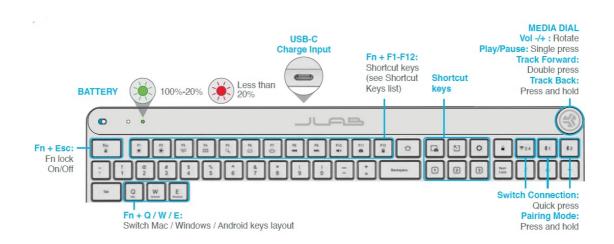


SHORTCUT KEYS

Fn +	MAC	PC	Android
Esc	FN Lock	FN Lock	FN Lock
F1	Brightness –	Brightness –	Brightness –
F2	Brightness +	Brightness +	Brightness +
F3	Task Control	Task Control	N/A
F4	Show Applications	Notification Center	N/A
F5	Search	Search	Search
F6	Backlit –	Backlit –	Backlit –
F7	Backlit +	Backlit +	Backlit +
F8	Track Back	Track Back	Track Back
F9	Track Forward	Track Forward	Track Forward
F10	Mute	Mute	Mute
F11	Screenshot	Screenshot	N/A
F12	N/A	Calculator	N/A

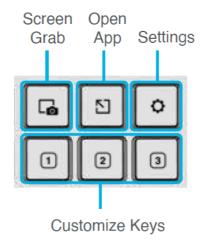

Customize the Epic Keys with the JLab App <u>JLab.com/software</u>

Documents / Resources

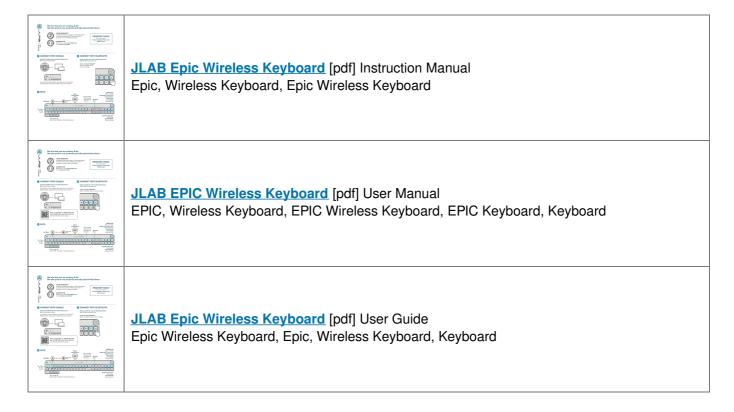

References

- JLab International: True Wireless Earbuds, Headphones, Microphones
- Contact Us JLab International
- Register Your Product JLab International
- <u>S JLab: True Wireless Headphones, Earbuds, Microphones, Personal Audio</u>
- **Contact Us JLab**
- Register Your Product JLab

Manuals+