




Kejinrun 285 Pickup Dynamic Humidifier User Manual

[Home](#) » [Kejinrun](#) » Kejinrun 285 Pickup Dynamic Humidifier User Manual 

Kejinrun

PICKUP DYNAMIC HUMIDIFIER INSTRUCTION MANUAL

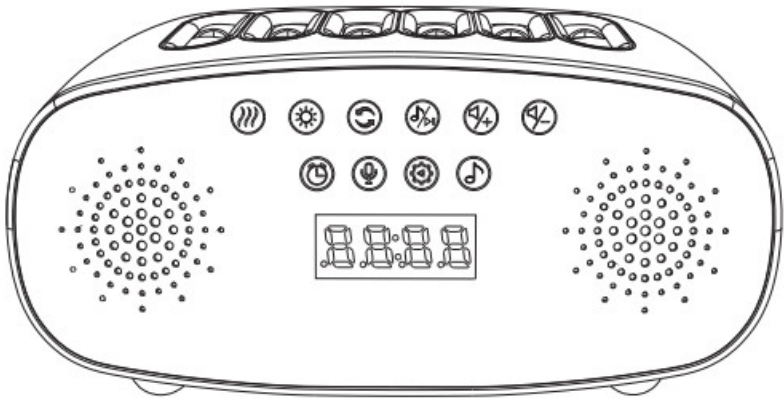

USER MANUAL

Thank you for purchasing this product, please read the instruction manual carefully before using this product


Contents

- 1 Product Specification
- 2 Product diagram
- 3 Key Function
- 4 Remote Control Function
- 5 Matters needing attention
- 6 Package Contains
- 7 FCC Warning:
- 8 Documents / Resources
- 8.1 References

Product Specification





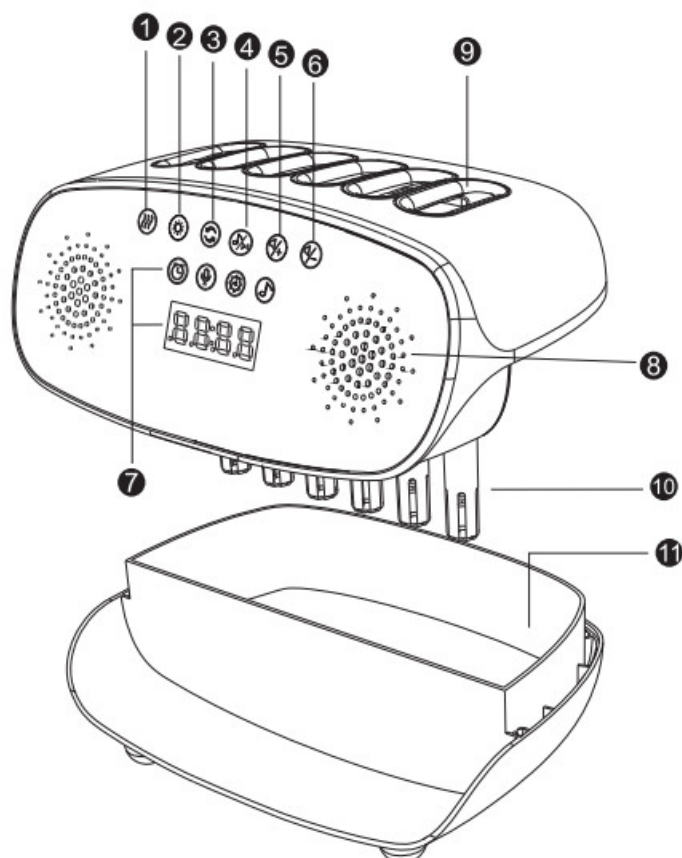

Product model: 285
Input Current: DC5.0V/2.0A
Product Size: 195*139*92 MM
Raw material:ABS+PC
Origin:China
Current:s1300MA
Rated power:s6W
Net weight: 508G
Water tank: SOOML
Spray volume: 15-30ML/H
Executive standard:
GB 4706.1-2005
GB 4706.48-2009

Product diagram














1. Power button
2. Light button
3. Mode Switch button
4. Bluetooth and Pause,'Play button
5. Volume"+"
6. Volume"-"
7. Time screen
8. Horn
9. Spray port
10. Cotton sleeve
11. Water tank

Key Function

Key 1 	Short press the 1st time,turn on the mist and light of the 1st mist outlet
	Short press the 2nd time,turn on the mist and light of the 3rd mist outlet
	Short press the 3rd time,turn on the mist and light of the 5th mist outlet
	Short press the 4th time,turn on the mist and light of the 2nd mist outlet
	Short press the 5th time,turn on the mist and light of the 4th mist outlet
	Short press the 6th time,turn on the mist and light of the 6th mist outlet
	Short press the 7th time to turn off or long press 2 seconds to turn off the machine.
	By default, it will shut down automatically after 10 hours
Key 2 	Short press everytimeto changethe modes as below:7 colors auto changing/fixed color/dazzling light/turn off the light.
	Long press two secondstoturn off the light in any mode.
Key 3 	Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection).
	Short press the 2nd time,turn off the voice control funtion,the machine turn to dynamic and spra y mode automatically.
	Short pressthe 3rd timeor long presstwo secondsto turn fixed mode.
Key 4 	Short pressthe 1sttime,turn on the bluetooth.
	Short pressthe 2nd time, turn off the bluetooth.
	Long press two secondsto pause play.
	Long press two secondsto cancel pause paly.
Key 5 	Short press once to increasvolume,long press can increase volume continuuously.
Key 6 	Short press once to reducevolume,long press can reducevolume continuuously.

Remote Control Function

     		Same function as the kl-k6 bond on the machine
Clock 	Press and hold for 2 seconds to setup time, the buzzer beeps once, time zone show 12, click “+” or “-” to change 12H/24H format;	
	Short press the first time, the hour area flashes, press the + – key to adjust the hour	
	Short press the second time, the minute area flashes, press + – to adjust the minutes;	
	Short press 3rd time, confirm and complete to normal time setting, after ten seconds it will be turn off by itself if no setting.	
	+: Adjust the set clock + / -: Adjusts the set clock –	
	: Previous song / : Previous song	
	Pause	
Alarm clock 	Press and hold for 1.8S to set the alarm, the peaker drops 2 sounds, displays OF/On, and sets on or off by + -. The default state is OF.	
	Short press the first H hour flicker, press + – to adjust the hour	
	Short press the second S minute flash, press + – to adjust the minutes	
	Short press the third button to confirm and complete the normal clock setting, and automatically exit the setting after 10 seconds without operation	
	When the alarm clock sounds, the display displays the normal time and flashes slowly, and at the same time, the buzzer beeps, beeps, beeps, etc., and the alarm time is 1 minute. If it is not interrupted by short pressing the alarm button, it will enter the snooze mode (the display will remain in slow flashes), and the alarm will sound again after every 5 minutes. The alarm will stop sounding after a maximum of 5 cycles. Press the alarm button at any time to interrupt and exit snooze. After exiting snooze, the display will display normally and no longer flicker.	

Matters needing attention

1. When using for the first time, please put the absorbent cotton swab into the right amount of water, so that it completely absorbs water, in the use of this will achieve the best results. If a new machine or a long-term unused machine has no spray for about 3 minutes during use, that is a normal phenomenon, this process is used for the absorption of cotton swabs, when the cotton swabs absorb water, it will soon produce atomization effect, and the machine begins to work normally.
2. Please use the included Type-C 2A power cord. If an alternative power cable is used, yes Note that the current specification is 2A, otherwise it will affect the atomization effect.
3. During the operation, the sound in the water tank is the atomization sound, which is a normal phenomenon.
4. Add water before using this product, and it is forbidden to use the humidification function in the case of water shortage;
5. When cleaning the product, please do not wash directly with a tap to avoid the possibility of product short circuit. It is recommended to use a meat cotton cloth to wipe;

6. Do not let children aged 0-6 use this product alone
7. It is forbidden to stand upside down if there is water in the water tank

Package Contains

One humidifier, one instruction manual, Remote control
Type-C cableX1, Spare cotton swabs 6

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Documents / Resources

	Kejinrun 285 Pickup Dynamic Humidifier [pdf] User Manual 285, 285 Pickup Dynamic Humidifier, Pickup Dynamic Humidifier, Dynamic Humidifier, Humidifier
---	---

References

- [User Manual](#)

[Manuals+ Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.