



[Home](#) » [Linenspa](#) » **Linenspa DDC-TXL-BK Adjustable Bed Frame Instruction Manual** 

Contents [[hide](#)]

- [1 Linenspa DDC-TXL-BK Adjustable Bed Frame](#)
- [2 Product Usage Instructions](#)
- [3 GENERAL INFORMATION](#)
- [4 SETUP and INSTALLATION](#)
- [5 Remote Control](#)
- [6 TROUBLESHOOTING](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Linenspa®

Linenspa DDC-TXL-BK Adjustable Bed Frame



Specifications:

- **Model Numbers:** DDC-TXL-BK, DDC-F-BK, DDC-Q-BK
- **Weight Limit:** 750lb
- **Lifting and Lowering Mechanisms:** Minimal humming sound during operation

Product Usage Instructions

Advisory and Warnings:

Before using the product, read all instructions carefully. Use a surge protector for safety. Do not tamper with critical components like the transformer, control box, motors, or remote control.

Dispose of packing materials to prevent smothering hazards for small children and pets. Ensure children do not operate the bed without adult supervision.

Hospital or Convalescent Use Disclaimer:

The adjustable bed is for in-home comfort and not for hospital use. It is not suitable for bed-ridden patients on extended recovery.

Product Ratings and Weight Limit:

Avoid continuous use exceeding 2 minutes in an 18-minute period.

The weight limit is 750lb, evenly distributed across head and foot sections.

Lifting and Lowering Mechanisms:

Expect a minimal humming sound during operation.

Cord Maintenance:

Always unplug before cleaning or servicing. Discontinue use if cord/plug is damaged. Ensure the base is flat and motors are off before unplugging.

Setup and Installation:

Step 1 – Parts Check:

Verify all parts are included before discarding packing materials. Components are in

boxes under the base or attached to the frame.

Step 2 – Carton Placement:

Place the carton on the floor with the help of an assistant.

Step 3 – Power Connection:

Extend and plug the input power cord into the transformer power supply. Connect the transformer power supply to the control box.

Step 4 – Product Setup:

1. Flip the product over so the back faces up.
2. Unfold the folded rails on both sides and press them firmly against the Velcro.

GENERAL INFORMATION

Attention: Read the following information before using this product.

Use of a surge protector is recommended.

WARNING:

Do not open or tamper with the transformer, control box, motors, or remote control (with the exception of battery compartments).

SMALL CHILDREN AND PETS:

Immediately dispose of all packing materials as they smother small children and pets. Do not allow any persons or pets under the bed. Children should not operate the bed without adult supervision.

HOSPITAL OR CONVALESCENT USE DISCLAIMER:

Adjustable beds are designed and engineered for a lifestyle of in-home comfort and are not intended for hospital use or for a bedridden patient on an extended recovery.

Adjustable beds are not equipped with bars to help patients get safely in and out of bed and are not intended to be used around tent-type oxygen therapy or explosive gases.

PRODUCT RATINGS:

The bed lift motors are not designed for continuous use of more than 2 minutes in an 18-

minute period, or approximately 10% duty cycle. Any attempt to circumvent or exceed this rating will shorten the life expectancy of the product.

WEIGHT LIMIT:

The limitation is 750lb. The bed will structurally support these weights, provided it is evenly distributed across the head and foot sections. This product is not designed to support or lift this amount in the head or foot section alone. Exceeding this weight restriction could damage the bed and/or cause injury.

Enter or exit the bed in a flat position and do not sit on the head or foot sections while in the raised position.

LIFTING AND LOWERING MECHANISMS:

It is normal for the raising and lowering feature on this bed to emit a minimal humming sound during operation.

CORD MAINTENANCE:

Always unplug the base from the electrical outlet before cleaning or servicing the base. If the cord or plug is damaged, discontinue use of the bed base and contact qualified service personnel for examination and repair. Make sure the base is in a flat position, and the vibrating motors are off before unplugging from the power source.

SETUP and INSTALLATION

Important: We strongly recommend two able-bodied adults setup and assemble this product.

STEP 1

Check to verify all parts are included before discarding any packing materials.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.

PARTS LIST



x1
Input Power Cord




x1
Transformer Power Supply



x6
6"+6" legs



x1
Wireless Remote Control

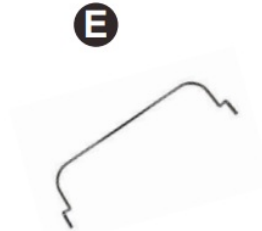


x1
Mattress retainer bar

STEP 2

With the help of your able-bodied assistant, place the carton on the floor.

STEP 3

Extend the input power cord (A) and plug it into the transformer power supply (B). Connect the transformer power supply (B) to the control box. The control box is the black box attached to the bottom of the bed.

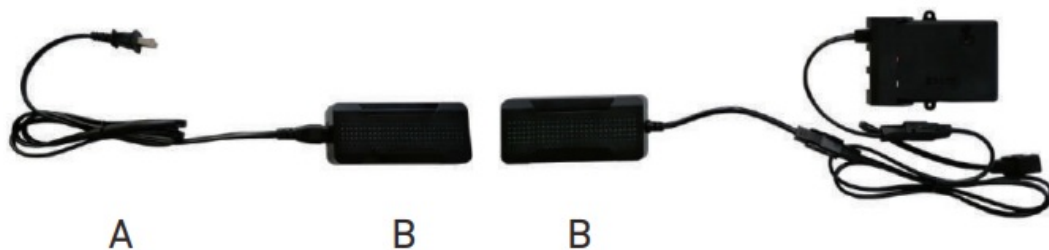

STEP 4

1. Flip the product over so the back is facing up. The side rails that are folded are at the foot section.



2. Unfold the folded rails on both sides and press them firmly against the Velcro.



3. Align the bottom foot rail upright and press it firmly against the Velcro.



STEP 5

- Install the six legs (C) firmly into the base of the frame. Screw the legs into the threaded holes on each corner of the adjustable base frame . (See Figure below)
- Do not over tighten.



STEP 6

Synchronize the remote control (D) with the control box. First; make sure batteries are in the remote control (D), as shown in Figure 4 , find the black box mounted under the bed.

locate the red circle indicating the button on the control box. Hold the button on the control for box 3 seconds after plugging in the adjustable bed,the light will flash quickly.Then press any key on remote control (D), When the light stops flashing, the match is successful.



Figure 4



Figure 5

STEP 7

For safety reasons, lifting the adjustable bed frame must be performed by two (2) people; The bed should always be in a flat position before operation.Excessive pressure may damage the legs.Remove all protective plastic covering.Note: Check to make sure that all power cords are clear and do not interfere with any Adjustable Bed Mechanisms.



STEP 8

Note: Get the Mattress Retainer Bar (E) from packaging. Carefully insert the mattress retainer bar(E) into the 2 holes on the foot end of bed base. (See Figure below)



STEP 9

Plug in the adjustable base. You are ready to enjoy!

Remote Control



Head Position Adjustments (1, 2)

Press and hold the button to raise or lower the head section of your base.

Foot Position Adjustments (3, 4)

Press and hold the button to raise or lower the foot section of your base.

Flat (5)

Press this button to return the power base to a flat position. NOTE: Make sure your base is in a flat position before using it. Press the FLAT button on the remote control after plugging in the power cord.

TROUBLESHOOTING

SYMPTOMS	SOLUTIONS
----------	-----------

<p>The base does not respond when the remote is used. Remote LED illuminates and appears to be normal.</p>	<p>Perform any or all of the following:</p> <ul style="list-style-type: none"> *Check that the power cord is plugged into a working and grounded electrical outlet. *Check that the light on the control box is On. *Check the home circuit Breaker and Fuses. *Unplug the power cord from the outlet. After a minute, plug it back in. Press any button on the remote. The base should be working.
<p>The remote does not work or light up.</p>	<p>Check the remote LED Light is lighting up when pressed. If not, please replace 3*1.5V batteries.</p>
<p>Base stutters while in motion.</p>	<ul style="list-style-type: none"> *Clear any clutter or obstructions under and around the adjustable base. Radio frequency interference from other remotes or electronic devices may affect normal operation. *Check the batteries in the remote. *Ensure the keys on the remote are being pressed firmly down when operating the Head and Foot buttons.

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.

FAQ


Q: Can the bed lift motors be used continuously?

A: No, it is not recommended to use the bed lift motors continuously for more than 2 minutes in an 18-minute period to avoid shortening the product's life expectancy.

Q: What should I do if the cord or plug is damaged?

A: If the cord or plug is damaged, discontinue use of the bed base immediately and contact qualified service personnel for examination and repair.

Documents / Resources

	<p>Linenspa DDC-TXL-BK Adjustable Bed Frame [pdf] Instruction Manual</p> <p>DDC-TXL-BK, DDC-F-BK, DDC-Q-BK, DDC-TXL-BK Adjustable Bed Fra me, DDC-TXL-BK, Adjustable Bed Frame, Bed Frame, Frame</p>
---	--

References

- [User Manual](#)

Linenspa

Adjustable Bed Frame, BED FRAME, DDC-F-BK, DDC-Q-BK, DDC-TXL-BK, DDC-TXL-BK Adjustable Bed Frame, Frame, Linenspa

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.