Home » Linshang » Linshang LS176 Color Spectrophotometer Colorimeter User Manual

# **Linshang LS176 Color Spectrophotometer Colorimeter User Manual**





QR code for app installation <a href="https://www.linshangtech.cn/a/170/">https://www.linshangtech.cn/a/170/</a>



Please read this manual carefully before using and reserve it for reference.

#### **Contents**

- 1 Product Introduction
- 2 Standards for the product
- **3 Parameters**
- 4 Features
- **5 Operation**
- **6 Measurement**
- 7 Menu bar
- **8 Bluetooth Connection** 
  - 8.1 App Installation
- 9 Device connection
- 9.1 APP operation
- 9.2 PC Software
- 9.3 Precaution
- 9.4 Locating Plate
- 9.5 Packing List
- 9.6 Service
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

#### **Product Introduction**

The instrument is a handheld multi functional colorimeter. It has a 3.5-inch IPS color display and capacity touch panel, which has an excellent operating experience. The instrument integrates multiple color charts and can quickly match the measured color to the closest color code. It also has color difference comparison function, color difference threshold can be set and a variety of color difference formulas can be selected to achieve rapid QC testing. The instrument can also connect to APP for color measurement and sharing. It is also equipped with a powerful PC software to meet various needs of customers. The instrument meets the requirements about grade 1 colorimeter in the Chinese JJG 595-2002 Verification Regulation of Colorimeters and Color Difference Meters in all directions employing full-spectrum LED light source and advanced spectral sensor.

#### Standards for the product

JJG 595-2002 Colorimeters and Color Difference Meters

GB/T 3978-2008 Standard illuminates and geometric conditions

GBT 7921-2008 Uniform color space and color difference formula

GB/T 11186.1-1989 Methods for measuring the colour of paint films-Part 1: Principles

GB/T 11186.2-1989 Methods for measuring the colour of paint films-Part 2: Colour measurement

GB/T 11186.3-1989 Methods for measuring the colour of paint films-Part 3: Calculation of colour differences

GB/T 39822-2021 Plastics—Determination of yellowness index and change in yellowness index

GB/T 17749-2008 Methods of whiteness specification

ASTM E313-98 Standard Practice for Calculating Yellowness and Whiteness Indices from Instrumentally

#### **Parameters**

Illumination geometry	D/8, specular component include (SCI)	
Illumination light source	Full spectrum LED light source	
Spectral Range	400-700nm	
Spectral Interval	10nm	
Measuring aperture	8mm	
Measurement conditions	Light source D65, field of view 10°	
Measuring time	About 1s	
Color space	CIE Lab, Luv, LCh, Yxy, CMYK, RGB, Hex, WI-98, WI-Gauz, WI-Hunt er, YI-98, Reflectance	
Color difference formula	ΔE*ab, ΔE*uv, ΔE*94, ΔE*cmc(2:1), ΔE*cmc(1:1), ΔE*00	
Repeatability	Standard deviation $\Delta E^*$ ab is within 0.03 (Measurement condition: the average value of 30 measurements on the whiteboard at an interval of 3s after calibration)	
Inter-Instrument Agreement	△E*ab<=0.4, based on avg. of 12 BCRA series II tiles	
Dimension	179mm * 64.5mm * 93mm	
Weight	About 471g	
Power supply	Rechargeable lithium battery 3.7V@4000mAh, can measure 10,000 ti mes continuously under full charge	
Display	480 * 320 dot matrix IPS color screen	
Language	Simplified Chinese, English	
Charging port	USB (Type-C)	
Data transmission	USB, Bluetooth	
Operating temperature range	0~45°C, 0~85%RH (no condensation)	
Storage temperature range	-25~55°C, 0~85%RH (no condensation)	

# **Features**

- 1. The instrument is fashioned with a full-spectrum LED light source and spectral sensor, and it meets the requirements of the national petrology grade 1 machine.
- 2. Adopt a 3.5-inch capacity touch panel with human-machine interaction interface for convenient operation.
- 3. Contains multiple electronic color charts, which can quickly match the closest color code with a color chart matching accuracy rate higher than 90%
- 4. QC testing function: the color difference threshold can be set and a variety of color difference formulas are optional.
- 5. A variety of color spaces are available, suitable for various needs of color measurement.

- 6. Can store 1000 colors and 1000 color comparison records with large storage space.
- 7. Can connect to APP for color sharing.
- 8. A powerful function of color difference analysis as well as data import and export with PC software.
- 9. The instrument has a built-in compensation optical path with stable values, allowing long-period calibration.
- 10. With built-in rechargeable lithium battery, the instrument can measure continuously for 10,000 times under full charge.

# Operation

#### Power on/off

**Power on**: Short press the power button to turn on the colorimeter.

**Power off**: Long press the power button to turn off the colorimeter or press "Power off" in the menu bar, If automatic power off is set, the instrument will automatically power off as no operation time exceeds the set value, when the time of no operation is longer than the set automatic power off time. When the colorimeter is connected to the App via Bluetooth, it will automatically power off with no operation over 30 minutes.

#### Calibration

After entering "calibration" interface, you can perform calibration operation as the calibration animation, or skip the calibration. It is recommended to calibrate after a long time of no usage.

You can also set the language in calibration interface. If displayed in Chinese, press "English" for English; if displayed in English, press " " for Chinese.




# For failed calibration, the possible reasons are as below:

- The bottom cap is not closed properly;
- The standard tile on the bottom cap needs to clean;
- The attenuation of the light source leads to failure of normal use and it needs to be returned to the factory for inspection and repair.

## Measurement


To enter the main measurement interface, there are two modes: "Color Scan" and "Color Compare". You can press the button at the bottom of screen to switch and the selected mode will turn blue.

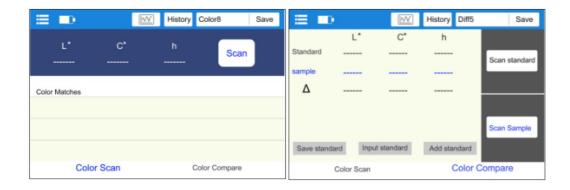

#### **Color Compare**

In the "Color Compare" interface, press the "Scan Standard" button to set current value as standard. Press the "Scan Sample" button to use current value as sample.

Short press the button to scan, and this value will replace the last record.

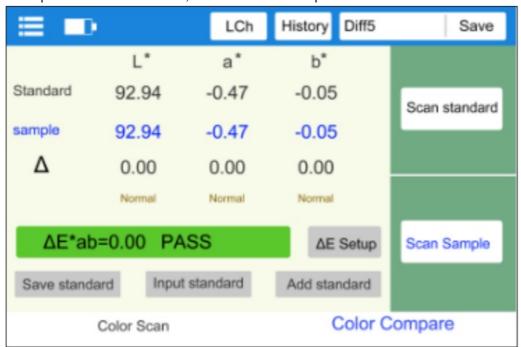

When the standard is measured or added and sample is measured, color difference between the two colours will be calculated with the following results:

# LabCh difference Δ

LabCh difference  $\Delta$ : sample color data minus standard color data. The color cast direction between the two is judged by  $\Delta L$ ,  $\Delta a$  and  $\Delta b$ .

#### AE value

The value of  $\Delta E$  is calculated according to the selected color difference formula.

#### QC test

Suitable for color difference inspection in production process. If  $\Delta E$  is higher than the set threshold, it will read "unqualified" and shown in red; if  $\Delta E$  is less than or equal to the set threshold, it will read "qualified" and displayed in green.

#### The following steps can be performed after completing the color difference comparison:

#### Save

To save the comparison result, press "Save" on the upper right corner. You can choose default or name the

record manually.

# History

If users need to view the saved comparison results, click "History" to view the color difference comparison record, and enter the history interface to view the next record by sliding left and right.

# • Lab/LCh/

Click this button, you can switch back and forth between the 3 interfaces of Lab, LCh and reluctance spectrometer.

# ΔE Setup

Set  $\Delta E$  calculation formula and QC test threshold.

#### Save standard

The standard color can be saved in "My Colors" for further use.

## Input standard

The user can manually input the Lab value or LCh value as standard.


#### Add standard

You can choose any color in "My Color" as standard. Press the "Add Standard" button, select any color you want in "Add Standard" interface, the selected color will be used as the standard color and get back to Color Scan interface.

#### **Color Scan**

In the "Color Scan" interface, short press the button or press "Scan" button on LCD screen to trigger the color scan.

#### The interface will be as below:

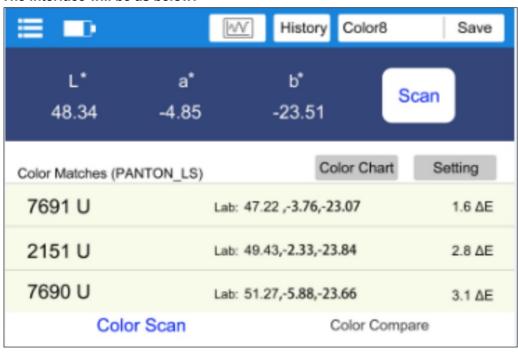

- Sample Data: After scan, the scan button area will display the color data. The user can set the data type in Setting.
- Color Matches: According to the color chart selected by the user, the closest three color codes are matched and displayed.

The following steps can be performed after completing the color scan:

#### Save

Press "Save" on the upper right corner to save scanned color in "My Colors". The record can be saved with a default name or named manually.

### History

If users need to view the saved comparison results, click "History" to view the color difference comparison record, and enter the history interface to view the next record by sliding left and right.

# Lab/

Click this button, you can switch back and forth between the 2 interfaces of the data value interface and the reluctance spectrometer.

#### **Color Chart**

Select one set of color charts for matching, then samples will be only compared within this chart. Three closest color codes will be matched.

#### Setting

Select parameters for the scanned color.

#### Menu bar

In the measurement interface, click the "icon on the upper left corner to pop up the menu bar, with the following options: Settings, My colours, Compare History, Device info, Calibration and Power Off.



# **Settings**

Items in "Parameter Setting" include:  $\Delta E$  setting, color chart selection, parameter setting, shutdown time setting, language and restoring default settings.

## ΔE Setup

 $\Delta E$  setup includes  $\Delta E$  threshold setting and color difference formula selection. There are six color difference formulas:  $\Delta E^*ab$ ,  $\Delta E^*uv$ ,  $\Delta E^*94$ ,  $\Delta E^*cmc(2:1)$ ,  $\Delta E^*cmc(1:1)$ ,  $\Delta E^*00$  and  $\Delta E^*00$ . The  $\Delta E$  threshold is used for QC testing the range of 0.1-50.

#### Select Color Chart

To select a set of color charts for color matching in the "Color Scan" interface.

#### Color Format

There are 11 color spaces including Lab, Luv, LCh, Yxy, CMYK, RGB, Hex, YI-98, WI-98, WI-Gauz, and WI-Hunter.

#### Auto Off setting

Choose whether to set the auto off and auto off time with a range is 1-30 minutes.

## Language

Support Simplified Chinese and English.

#### · Restore to defaults

To restore parameters to the factory settings.

#### **My Colors**

Colors scanned by the user are stored in "My colors", up to 1000 records. You can swipe the screen to turn pages, delete, modify names, search, and view color data.

# **Compare History**

Color compares are stored in "Compare History", up to 1000 records. You can slide the screen to turn pages, delete, modify the name, search and view the comparison records.

#### **Device Info**

"Device Info" displays the basic information of the instrument, including: Device Model, Serial number, Production date, Calibration date, Battery level, Firmware Version, and Device Status.

#### Calibration

The instrument can be calibrated in Calibration interface at any time.

# **Power Off**

Press "Power off" to power off the instrument.

# **Bluetooth Connection**

# **App Installation**

The colorimeter APP supports Android operating system 7.0 and above as well as iOS system 7.0 and above. Choose one of the following methods to install:

- 1. Scan the QR code on the cover with a mobile browser or We Chat, follow the prompts to download and install Colorado.
- 2. Search for "LScolor" from the iOS App Store or Google Play App market and follow the prompts to download and install LScolor.



App icon

#### **Precautions:**

Open the App during the installation process or after the first installation, the mobile phone will prompt the permission of setting, the customer needs to allow all of them, otherwise the App cannot search for the device, and App cannot be used.

#### **Device connection**

Turn on the colorimeter, open the App, after display of LOGO. enter the "Connect Device" interface and automatically start searching for Bluetooth devices. The searched devices will be displayed at the bottom of the interface. Click the device that matches the SN of the colorimeter and wait for the device to connect. Once connected, it will jump to "Calibration interface.

#### **Precautions:**

- 1. If there is a Bluetooth connection error or failure, you can restart the App and the colorimeter, or turn off/start Bluetooth in the setting interface and reconnect.
- 2. Click the "Browse" button, App is not connected to the colorimeter, you can enter the App to view historical data.

# **APP** operation

The APP has the same function of color scan and color compare as the instrument with the same operation. The only difference is that the APP has color sharing function, and can import and export colors.

# **Color sharing**


#### There are two ways to share colors:

- **a)** Scan a color in the "Color Scan" interface, press the "Share" icon to share the scanned color in image format or data format (the sharing methods are: WhatsApp, WeChat, email, etc.).
- b) In the "My Colors" folder, select the colors to share and click "Share" icon to share the colors in data format.

## **Color import**

Users can import colors shared by others into their own App, but the colours must be scanned by the same model of colorimeter. Both single color and batch of colors can be imported as follows:

Take We Chat sharing and import on Android as an example, find the file to import with a name of "import mycology" and long press the file to be imported.

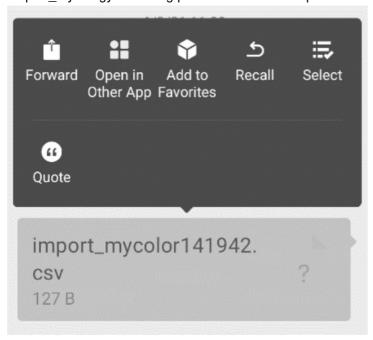

If use the iOS system, click the file and download it first, and then select "Open with other app" to realise data sharing.

**a)** If the above interface appears, click "Open with other app" and select the App "LScolor", after confirmation, jump to the import interface and select the file to complete the import.





b) If the import has completed, it will prompt "Import successful". After pressing "Confirm", the imported color will be displayed. After the import is completed, the import can be checked as the first record under the folder.

**c)** If the product model does not match, it will prompt "Unmatched device model ". Please connect to the correct model before importing

# **PC Software**

You can use the PC software to connect the computer via USB. The software has function of read my color to the computer, write my color or Colorado (standard color chart) to the instrument, read color difference record, color difference measurement, export excel, record qualified, unqualified number and total statistics, generate and print test report. For specific operation, please refer to the "Cyclometer Software Operation Manual".



#### **Precaution**

- 1. When the colorimeter has not been used for a long time, it is recommended to perform calibration before using.
- 2. Please ensure that the sample is evenly colored with a flat and clean surface, otherwise it will affect the measurement accuracy.
- After the base is removed from the host, it should be stored in a clean place to avoid contamination of the standard tile.
- 4. Do not insert any object inside the colorimeter to clean it, as this will damage it and affect measurement accuracy and operational safety.
- 5. Charge the colorimeter in time when the battery is out of power.
- 6. If not in use over 6 months, charge it regularly to prevent the battery from over-discharge and damage.
- 7. It's recommended to calibrate the instrument once each year. And we offer calibration service.
- 8. Due to different mobile phone displays, there may be a slight color difference between the actual color and the color displayed on the mobile phone App.


# **Locating Plate**

In order to meet the requirements for precise alignment of some measurement areas, the colorimeter is equipped with a locating plate.

· Measurement area



• Place the meter on the positioning hole

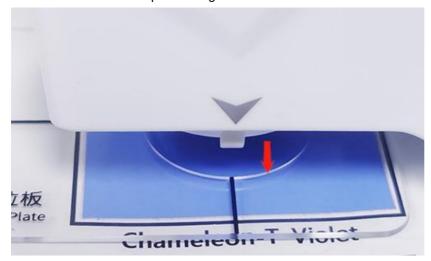

· Measurement result



# **Packing List**

No.	Description	Quantity	Unit
1	Cyclometer	1	Set
2	USB cable	1	pcs
3	Cleaning cloth	1	pcs
4	Locating plate	1	pcs
5	User manual	1	pcs
6	Certificate / Warranty card	1	pcs
7	Calibration Report	1	pcs

# **Service**

- 1. The colorimeter has one-year warranty. If the meter works abnormally, please send the whole instrument to our company for maintenance.
- 2. Provide users with spare parts and lifelong maintenance services.
- 3. Provide the users with the gauge calibration service.

4. Free technical support for long term.

Manufacturer: Shenzhen Linshang Technology Co., Ltd.

Website: <a href="www.linshangtech.com">www.linshangtech.com</a>
Service hotline: +86-755-86263411
Email: <a href="mailto:sales21@linshangtech.com">sales21@linshangtech.com</a>



# **Documents / Resources**



<u>Linshang LS176 Color Spectrophotometer Colorimeter</u> [pdf] User Manual LS176 Color Spectrophotometer Colorimeter, LS176, Color Spectrophotometer Colorimeter, Sp ectrophotometer Colorimeter, Colorimeter

#### References

- Transmission Meter | UV Light Meter | Coating Thickness Gauge Linshang
- Scolor APP
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.