




LISKA SV-MO4 Smart Bracelet Instructions

[Home](#) » [LISKA](#) » LISKA SV-MO4 Smart Bracelet Instructions 

Contents

- 1 LISKA SV-MO4 Smart Bracelet
- 2 Preparation
- 3 Connection
- 4 Start using
 - 4.1 Features specifications
- 5 Frequently asked questions.
- 6 Specifications
- 7 Documents / Resources
- 8 Related Posts



LISKA SV-MO4 Smart Bracelet




Compatible Operating System and requirements.

Android 4.4 and higher/ IOS 8.4 or higher/ Bluetooth 4.0

Preparation

Make sure the battery is fully charged the first time. Please charge it if the device cannot be turned on.

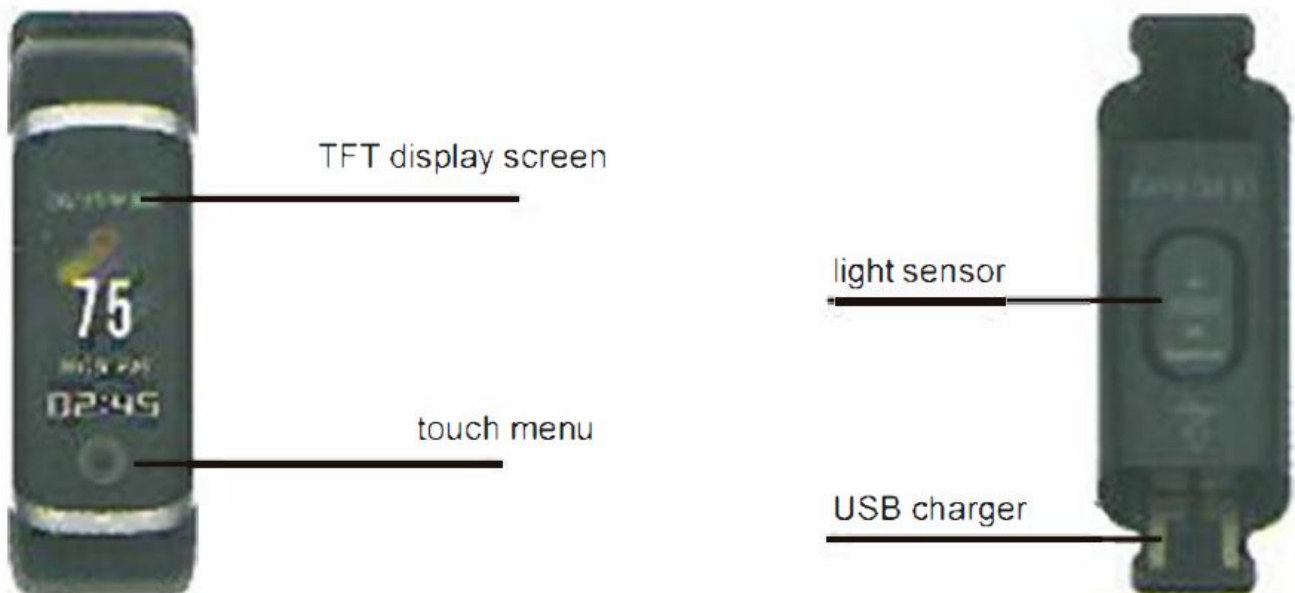

Connection

Please make sure the phone supports "WearFit 2.0" before downloading it.
Then connect the bracelet through "WearFit 2.0"

Download App: Search for "WearFit 2.0" in the App Store or Google Play.

Pair: Make sure Bluetooth is turned on and open "WearFit 2.0", select pair the bracelet, look for the device name

m the list and connect it. Then go to the main interface.

On-screen time icon switch: Firstly select time icon on the screen, long press the touch button for 3 seconds to switch, there are 2 different kinds of views, select one and press the touch button for 3 seconds. The bracelet vibrates and the time icon will have been changed

Start using

Once the bracelet is connected to WearFit 2.0, It will be synchronized with the phone time and data records.

Bracelet operation: Press the touch button on the TFT screen, It will display the following interface: Steps mode – Distance mode – Calories mode – Heart rate mode – Sleep mode – Stopwatch mode – Message reminder – Phone search – Off mode – Modes – Backgrounds – Bluetooth Name

Features specifications

1. Heart Rate Measurement: Automatically measure current heart rate every second, 24h continuous monitoring.
Connect to WearFit 2.0 for heart rate data and health status analysis
2. Step information: automatically records the number of steps per day. They are counted according to the movement of their arms
3. Stopwatch: Press and hold for 3 seconds for stopwatch – click to start – click to stop – press and hold 3 seconds to exit
4. Distance display: shows the distance traveled.
5. Calories: Shows the calories burned.
6. Time Mode: The display shows the time and date, battery, current heart rate. Three types of screens. Press and hold for 5 seconds to change the screen. After selecting, press and hold 5 seconds. The screen change will be completed after the bracelet vibrates
7. Call reminder: Open the “Call reminder” function in the App, the bracelet will vibrate when a call comes in.
8. Message Reminder: Open the “Message Reminder” function in the App, the bracelet will vibrate gently to alert you when the phone receives a new message (SMS, QQ, Wechat, Facebook, Twitter).
9. Sleep monitoring: Automatically monitor sleep quality and analyze hours of deep and light sleep.
10. OTA update: It will continue optimizing and updating the functions.
11. Use the bracelet to find the mobile: Press and hold “SEARCH” for 5 seconds – Press the touch button to start – Find the location of the mobile by following the ringtone and vibration – Press for 5 seconds to exit. (Make sure that the Bluetooth of the mobile app is connected with a bracelet and in the accepted distance range to receive the signal.)

Frequently asked questions.

1. Can't find the bracelet or can't connect?

Make sure that Bluetooth is turned on in the phone and that the phone's operating system is Android 4.4 or higher and iOS 8.4 or higher.

If you still can't connect, go to Settings -Application Management -Authorization Management -Application Access Authorization on your phone, find “WearFit 2.0” and give all permissions to allow access. Then go back into the settings to activate the GPS location service, restart the phone, try connecting again.

Make sure the bracelet is fully charged. Feel free to contact us if It doesn't work normally with the battery charged.

2. After pairing the bracelet, does the application show that it is not connected or that the remaining

battery is 0%?

In that case the bracelet and the phone are not connected properly, please pair the devices again

3. Can't connect the device to the App?

Pull down and refresh the main interface, the data will be synced manually, then the data can be displayed in the App. Automatic data sync will only sync on the first pairing. The data will then automatically sync every hour. Also, don't forget to open the data measurement every hour. If it is not open, the histogram has no data.

4. After updating, no data is displayed.

Go to app settings – restore factory settings – turn off smart bracelet – turn on smart bracelet and reconnect to app. The data can be loaded into the application.

5. The time is not synchronized.

When the bracelet runs out of battery, the time of the bracelet may be wrong after the battery is recharged. Connect to the phone and the time on the bracelet will automatically sync

6. Is the bracelet time not synchronized after connecting to the phone?

Go to phone settings -Application Management – Permissions Management – Open App Permissions – re-link the bracelet. Pull down and refresh the main interface of the App.

Specifications


- OLED screen size 0.96 inch
- Bluetooth Bluetooth 4.0
- Battery capacity 90 mAh
- Water resistance IP67
- Material Soft TPU
- Battery type Polymer lithium battery
- Strap size 235mm x 18.5mm x 10.8mm

Charging way: Remove the charging strap.

Charging way: Remove the charging strap.



Multiple screens to select: Enter the Backgrounds menu – Press to select – Press for 5 seconds to set the background.

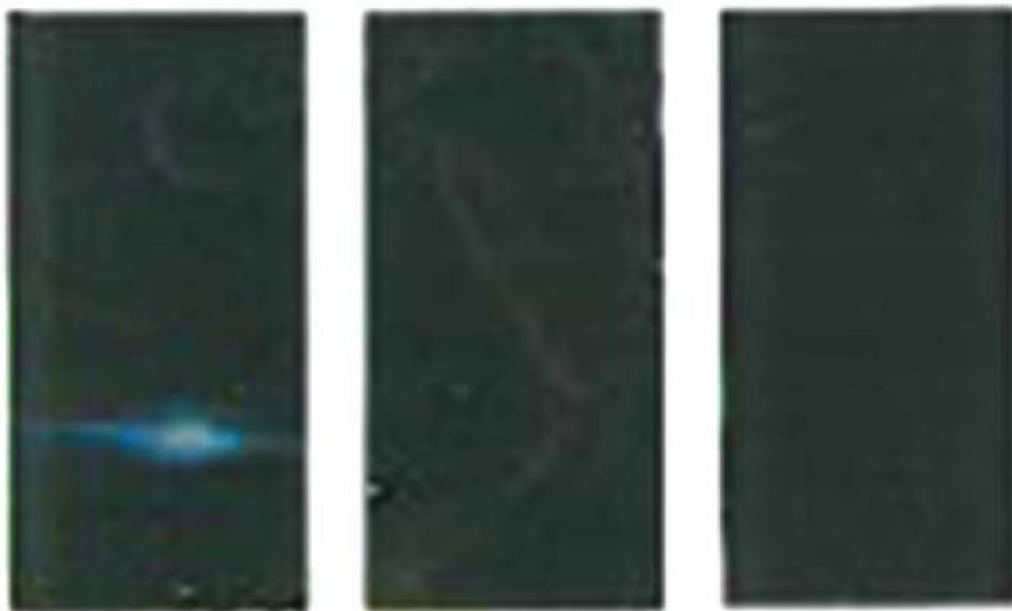


Notice: The company reserves the right to modify the content of this manual without prior notice

Warning: Please follow the doctor's instructions. According to the results, self-diagnosis and treatment is very dangerous, it is dangerous to have blood circulation disorders or blood diseases. Please treatment should be under the supervision of a doctor, the measurement results of this product are for reference only, not for any purpose or medical basis.

www.liskajoyas.com

Documents / Resources

	<p>LISKA SV-MO4 Smart Bracelet [pdf] Instructions SV-MO4, Smart Bracelet</p>
---	--