

# **Lumens LC100 CaptureVision System Instruction Manual**

Home » Lumens LC100 Capture Vision System Instruction Manual






#### **Contents**


- 1 Introduction of Product
- **Functions**
- 2 Product connection diagram
- **3 Precautions Prior to Use**
- 4 Hard drive installation steps
- 5 Real-time operation menu
- **6 Web Interface**
- 7 Director Tab
- 8 Documents / Resources
  - 8.1 References

# **Introduction of Product Functions**

#### 1.1 Front View

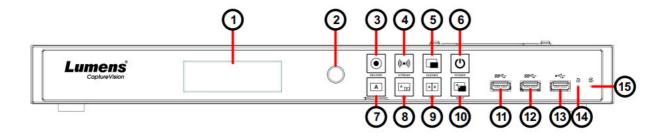


# 1.2 Back View



# 1.3 Function Descriptions

No.	Item	Function Descriptions	No.	Item	Function Descriptions
1.	LCM	Display Menu and Informatio n	16	DC IN 12V	DC 12 V power connector
2.	Knob	LCM knob	4-7	Land	■ HDMI Input 1
3	Record	Start/Stop recording	17	Input	■ 3G-SDI Input 1 ■ HDMI Passthrough
4	Stream	On/Off image streaming	18	Input2	■ HDMI Input 2 ■ 3G-SDI Input2
5	Scene	Switch templates		Output	■ PGM: Main screen output, di splay the recording or streamin g screen and layout ■ Multiview: Operation interfac e output; display the settings m enu and image management
6	Power	On/Off the device power	19		
7	Single Chann el	Display a single channel scr een			
8	PIP	Switch to PIP (picture in pict ure)			
9	PBP	Switch to PBP (picture by pic ture)		USB3.0 port	Supports the following devices:  USB video/audio devices  External storage disk  Keyboard/mouse  LC-RCO1 (optional) controlle
10	SWAP	Switch signal channels	20		
11	USB3.0 port	for external storage disk			
12	USB3.0 port	for external storage disk		r	
13	USB2.0 port	Can connect to keyboard/mouse device operation menu	21	Ethernet	Connect to LAN
14	Factory Reset	Reset all configurations to fa ctory default settings	22	RS-232/ RS-485 port	Connect to AV control equipment
15	Restart	Reboot the machine	23	XLR audio in	Connect to a microphone or audio mixer
			24	Line In/ Out	Audio In/Out

## **Product connection diagram**

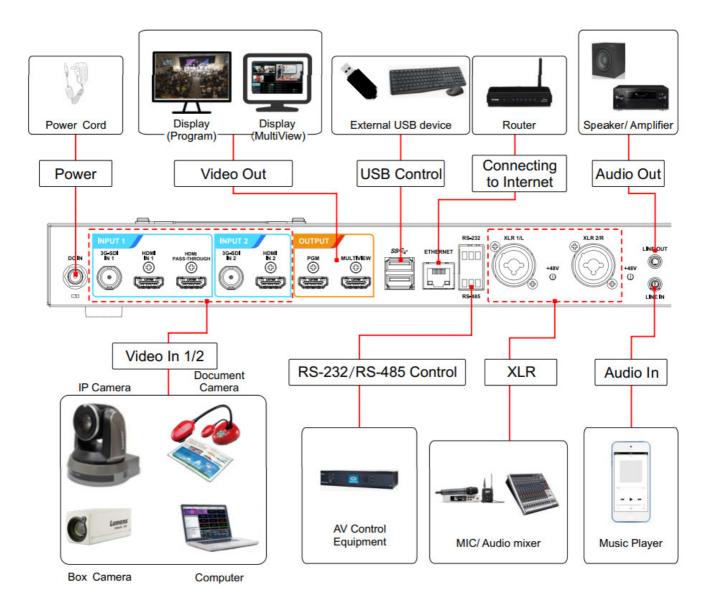

### **Precautions Prior to Use**


- 3.1 Please confirm the purchased version equipped with hard drive or not. If not, please purchase one for installation.
- 3.2 LC100 supports 2.5"/3.5" SATA hard drives.
- 3.3 If no hard drive is installed, use a USB disk for external storage.

## Hard drive installation steps


4.1 Remove the screws (5 pcs) on the top cover.




4.2 Loosen the following screws.

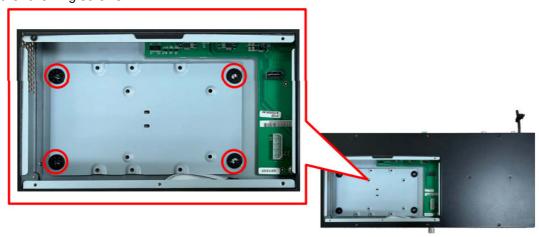

- 4.3 Attach your hard drive to the connection cable.
- \* Please make sure the port and the L-shaped slot of the cable are aligned before insertion. Do not force the connection to avoid damage to the port.

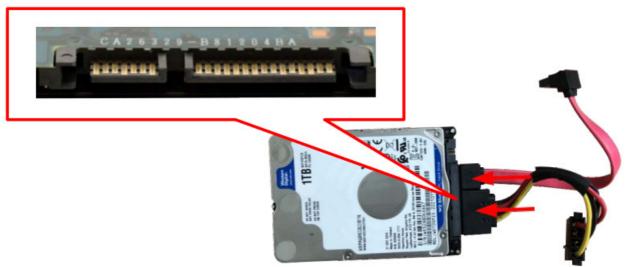

- 4.4 Fasten the hard disk to the metal plate with the provided screws (4 pcs).
- A. 2.5" SATA Hard Drive holes
- B. 3.5" SATA Hard Drive holes
- \* Do not over-tighten the screws to avoid damage to the hard drive. Only use the screws provided.

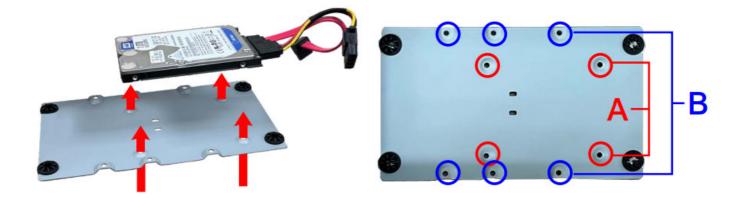

4.5 Lock the hard drive mounting plate in place and insert the connection cable.




- 4.6 Close the top cover to complete the installation.
- 4.7 Hard drive setting

After installation, you need to log in to the web page and click Information to format the drive.


#### Storage Setting > Hard Disk

\*Formatting the drive will erase all existing data on the disk

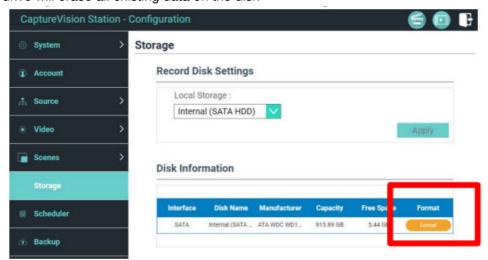

# Real-time operation menu

Connect the HDMI1 Multi View output to a monitor to display the real-time operation menu

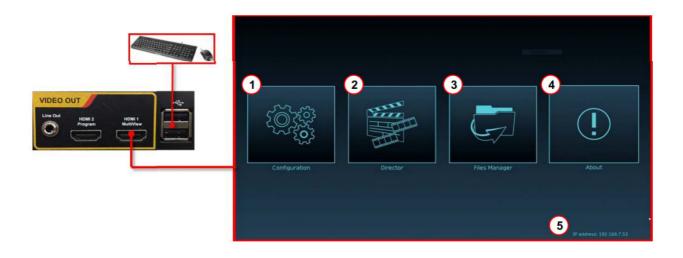

No.	Item	Function Descriptions
1	Configuration	Configure the network settings and recording/streaming quality
2	Director	Creative control of video and audio inputs, audio feeds. Control recording and streaming and network video cameras
3	File Management	Transfer, upload, download, delete, and play back video files
4	About	Display the current LC100 firmware version
5	Device IP	Displays the device's network IP address.

#### Web Interface

#### 6.1 Confirm the IP address of the device

Connect the LC100 to a router. Note the IP address of the device (visible in the lower right corner of the HDMI Multiview output screen) .

6.2 Input the devices IP address into the web browser, e.g. 192.168.100.100.

Address http://192.168.100.100


http://192.168.100.100



Account : admin Password : admin

#### Web Interface

Thru the web interface users can access the File Manager, the Multi View interface and system settings.

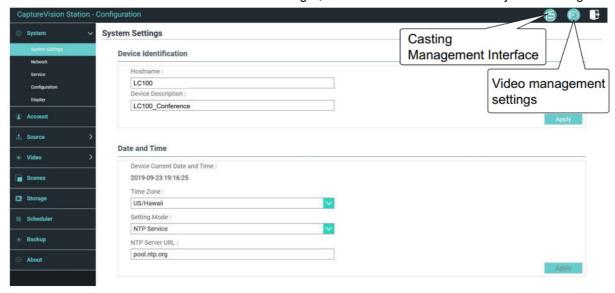


### **Director Tab**

Follow these steps to access the Director Tab

• On the Multi View interface, select Director




• Log in to the web page by entering the online Director Casting Account /Password (default setting: director/director)

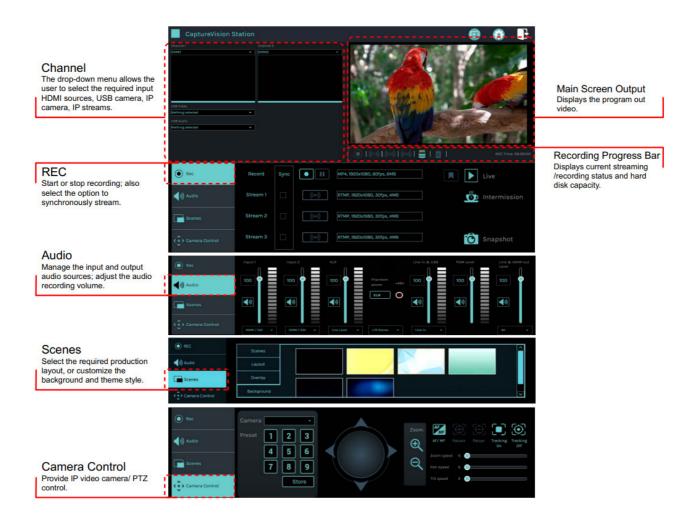



Copyright © Lumens Digital Optics Inc.
All rights reserved.

#### **Documents / Resources**

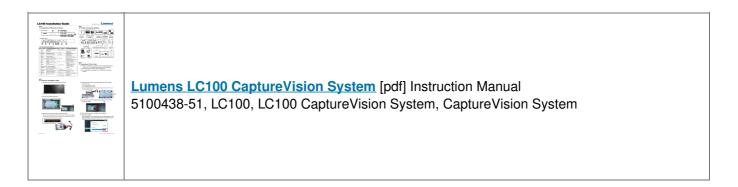

#### References

• <u>Lumens – Pro AV Technology | Lumens</u>

Manuals+,