

### DO NOT USE the product before consulting your medical doctor if yo

- Have a heart condition or a pacemaker.
- . Have a history of blood pressure iss
- Do not use the product while charging Do not replace the battery.

Do not charge or use the device if it get

### Advertencia

NO USE el producto sin consultar a su

- Tiene antecedentes de problemas de presión

No cargues ni utilices el dispositivo si se calienta



Read terms before use Lisez les termes avant utilisation

Lesen Sie die Bedingungen vor Gebraud Lea los términos antes de usar 使用前に利用規約をお読みください

 Êtes enceinte. . Have any other medical condition Avez des antécédents de problèmes de tension artérielle.

· Avez une autre condition médicale. Nutilisez pas le produit pendant la charge. Ne remplacez pas la batterie. Ne chargez pas ou n'utilisez pas l'appareil s'il devient inconfortablement chaud.

Avertissement

votre médecin si vous:

NUTILISEZ PAS le produit sans consulter

· Avez une maladie cardiaque ou un

Tiene una afección cardíaca o un marcapasos.

VERWENDEN SIE das Produkt nicht. rzt zu konsultieren, wenn Sie:

- Herzschrittmacher haben.
  - Eine Vorgeschichte von Blutdruckprobleme
  - Fine andere Vorerkrankung haben Verwenden sie das Produkt nicht während des

Frsetzen Sie die Batterie nicht. Laden Sie das Gerät nicht auf und verwenden Sie es nicht, wenn es unangenehm heiß wird.

以下のいずれかに該当する場合は

# ♠ 警告 (Keikoku)


医師に相談するまでこの製品を使用

- 心疾患またはペースメーカーを

- 高血圧の病歴がある。 他の持病がある


充電中には製品を使用しないでください. デバイスが不快なほど熱くなった場合は、 充電したり使用したりしないでください。

# YOUR WOOJER VEST

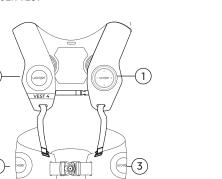

### FRONT VIEW

- 1 CONTROL UNIT / FRONT LEFT TRANSDUCER
- 2 FRONT RIGHT TRANSDUCER
- 3 SIDE-LEFTTRANSDUCER
- 4 SIDE-RIGHT TRANSDUCER

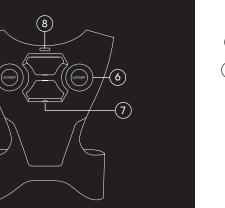

- 5 BACK-LEFT TRANSDUCER
- 6 BACK-RIGHTTRANSDUCER
- 7 CHARGING PORT

# CONTROL PANEL

13 SENSATION UP BUTTON

- 9 POWER/BLUETOOTH BUTTON
- - 8 CHAIR/HANGING NOTCH

REAR VIEW

- 10 LED INDICATOR 15 ANALOG AUDIO-IN PORT
- 11 VOLUME UP BUTTON
- 12 VOLUME DOWN BUTTON
- - 17 WIRED HEADPHONE JACK
- 16 DIGITAL USB-C INPUT PORT

PAIR IT WITH OTHER DEVICES, UPDATE ITS FIRMWARE 14 SENSATION DOWN BUTTO FINE-TUNE YOUR EXPERIENCE AND MUCH MORE, IT'S

FIRST TIME USAGE

CHARGE YOUR VEST

CONNECT THE PROVIDED

20V USB-C POWER

DELIVERY CHARGER TO

THE REAR CHARGING

**MOBILE CHARGER!** 

CHARGE 🗐 → 🗍 3H 🗵

DO NOT USE A STANDARD

PORT

- HIGHLY RECOMMENDED TO INSTALL WOOJER APP ON YOUR MOBILE, WOOJER, COM/WOOJERAPP

INSTALL WOOJER APP TO CONTROL YOUR WOOJER.

TO GET THE MOST OUT OF YOUR VEST, MAKE SURE YOU'RE L Download on the App Store THE LATEST AVAILABLE FIRMWARE LAUNCH WOOJER APP TO UPDATE THE FIRMWARE.







USB-C / Analog

CONNECT YOUR VEST

TO THE HEADPHONE JACK





→ VEST IS OFF

3 SECONDS

LONG-PRESS ON THE

POWER BUTTON

# CONNECT YOUR HEADPHONES

# BLUETOOTH HEADPHONES



VR





IF YOU'RE USING WIRED HEADPHONES, CONNECT THEM

# FOR MORE CONNECTION LAUNCH OPTIONS, PLEASE VISIT WOOJER APP POWER ON/OFF


LONG-PRESS ON THE POWER BUTTON VEST IS ON

3 SECONDS

# WEAR YOUR VEST

ONE SIZE FITS MOST

ALL ADJUSTING STRAPS MUST BE LOOSENED BEFORE WEARING THE VEST. MAKE SURE TO FOLLOW THESE STEPS IN ORDER





WAIST STRAPS





PULL BOTH SHOULDER STRAPS IN PARALLEL TO ENSURE TIGHT CONTACT OF ALL HAPTIC UNITS TO THE BODY



# FINE-TUNE YOUR


1 VOLUME UP BUTTON

EXPERIENCE

- 2 VOLUME DOWN BUTTON
- SENSATION UP BUTTON
- 4 SENSATION DOWN BUTTON



# AUDIO-HAPTIC SYNC





### MANUAL BLUETOOTH PAIRING - AUDIO SOURCE



PAIR WITH A BLUETOOTH AUDIO SOURCE

WITH THE VEST POWERED OFF. PRESS AND HOLD THE BUTTON FOR 5 SECONDS

THE LEFT HALF-RING WILL BLINK IN ALTERNATING RFD/BILIF

ON YOUR SOURCE DEVICE. ENTER BLUETOOTH SCREEN. LOCATE "WOOJER VEST 4" AND PAIR WITH IT

\* THE BLUETOOTH ICON MAY REMAIN \* WHEN PLUGGING IN THE HEADSET. IT IS EVEN IF THE SIGNAL IS BRIFFLY LOST TO APPEAR

NORMAL FOR THE CORRESPONDING ICON NOT

### MANUAL BLUETOOTH PAIRING - HEADPHONES



PAIR WITH **BLUETOOTH HEADPHONES** 

WITH THE VEST POWERED ON PRESS AND HOLD THE BUTTON AND THE BUTTON TOGETHER FOR 5 SECONDS

THE RIGHT HALF-RING WILL BLINK IN ALTERNATING RED/BLUE

SET YOUR BLUETOOTH HEADPHONES INTO PAIRING MODE AND PLACE IT WITHIN PROXIMITY TO THE VEST. BOTH DEVICES SHOULD BE PAIRED WITHIN 30 SECONDS

- O- BLUETOOTH HEADPHONES PAIRING MODE→ RIGHT HALF OF CIRCLE BLINKING RED-BLUE
- SEARCHING FOR AUDIO SOURCE → A RUNNING BLUE LIGHT ON THE **LEFT** HALF OF THE CIRCLE
- SEARCHING FOR BLUETOOTH HEADPHONES → A RUNNING BLUE LIGHT ON THE **RIGHT** HALF OF THE CIRCLE
- AUDIO SOURCE CONNECTED → SOLID BLUE LIGHT ON LEFT HALF (OR USER-DEFINED PATTERN)
- HEADPHONES CONNECTED → SOLID BLUE LIGHT ON RIGHT HALF (OR USER-DEFINED PATTERN)
- -O-LOW BATTERY → CIRCLE BLINKING RED



### LED BEHAVIORS

- BLUETOOTH AUDIO SOURCE PAIRING MODE→ LEFT HALF OF CIRCLE BLINKING RED-BLUE

- CHARGING → GRADUAL FILLING. COLOR CHANGING FROM RED. THROUGH YELLOW TO GREEN
- CHARGING COMPLETE → FULL GREEN

TECHNICAL SPECS

CHARGING TIME: 3h

BATTERY: 4SP Li-On battery pack 14.8V

CHARGING PORT: USB-C Power Delivery

CHARGING VOLTAGE: 20V only

TRANSDUCER: 6 x Osci V2 TRX

TRANSDUCER IMPEDANCE: 110

HEADPHONES AMP THD: 1%, f = 1 kHz

HEADPHONES OUT S/N RATIO: 98 dB

HEADPHONES AMPLIFIER OUTPUT: 138mW

HAPTIC FREO RESPONSE: 1-250Hz

AUDIO FREQ RESPONSE: 20-20KHz



AUDIO OUTPUT: Aux 3.5mm TRRS, BT Audio A2DP

AUDIO INPUT: Aux 3.5mm TRRS, USB-Stereo Audio, BT Audio A2DP

BLUETOOTH: Bluetooth 5.4 Audio, BLE App Control and Update



2 MONTHS FROM PURCHASE OU CAN LEARN MORE ABOUT THE WARRANTY

### CARE AND MAINTENANCE

- . KEEP THE WOOJER VEST SERIES 4 AND ACCESSORIES DEVICE DRY, PRECIPITATION HUMIDITY, AND ALL TYPES OF LIQUIDS OF MOISTURE CAN CONTAIN MINERALS THAT WILL CORRODE ELECTRONIC CIRCUITS.
- . DO NOT STORE THE DEVICE IN HOT AREAS. HIGH WITH HEADPHONES/FARPHONES AT HIGH TEMPERATURES CAN SHORTEN THE LIFE OF VOLUME WHILE WALKING OR ENGAGED IN OTHER ELECTRONIC DEVICES, DAMAGE BATTERIES, AND ACTIVITIES, EXERCISE EXTREME CAUTION AND WARP OR MELT CERTAIN PLASTICS DISCONTINUE LISE IN POTENTIALLY HAZARDOUS
- . DO NOT STORE THE DEVICE IN COLD AREAS. WHEN THE DEVICE RETURNS TO ITS NORMA TEMPERATURE, MOISTURE CAN FORM INSIDE TH DEVICE AND DAMAGE ELECTRONIC CIRCUIT
- . DO NOT ATTEMPT TO OPEN THE DEVICE
- LEVEL, SO THAT YOU ARE BETTER ABLE TO HEAR . DO NOT DROP. ROUGH HANDLING CAN BREA OUTSIDE SOUND. INTERNAL CIRCUIT BOARDS AND FINE MECHANIC
- . DO NOT USE HARSH CHEMICALS, CLEANING SOLVENTS, OR STRONG DETERGENTS TO CLEAN
- IF THE DEVICE DOESN'T WORK PROPERLY. PLEASE CONTACT OUR TECHNICAL SUPPORT TEAM THROUGH OUR WEBSITE, AT

### WWW.WOOJER.COM/SUPPORT

### SAFETY AND WARNINGS (READ CAREFULL) BEFORE USE)

- THIS PRODUCT CONTAINS A RECHARGEABLE LITHIUM-ION BATTERY AND SHOULD NOT BE DISPOSED TOGETHER WITH HOUSEHOLD WAST THIS PRODUCT MUST BE DISCARDED IN ACCORDANCE WITH YOUR LOCAL LEGAL
- AS WITH OTHER DEVICES WITH PERMANENT MAGNETS, WOOJER VEST SERIES 4 IS NOT SUITABLE FOR USE BY PERSONS WITH
- DO NOT USE WOOJER PRODUCTS DURING PREGNANCY WITHOUT APPROVAL FROM YOUR
- . IF YOU HAVE ANY PHYSICAL CONDITION THAT MAY LIMIT YOUR ABILITY TO PLAY COMPUTER GAMES OR ENGAGE IN MODERATE PHYSICAL ACTIVITY, PLEASE CONSULT YOUR PHYSICIAN BEFORE USING YOUR WOOJER.

THIS FOLIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RUL THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFU INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL

INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY

FOLLOWING MEASURES:

RECEIVER IS CONNECTED.

RADIO/TV TECHNICIAN FOR HELP.

TURNING THE EQUIPMENT OFF AND ON, THE USE

IS ENCOURAGED TO TRY TO CORRECT THE

INTERFERENCE BY ONE OR MORE OF THE

CIRCUIT DIFFERENT FROM THAT TO WHICH THE

CONSULT THE DEALER OR AN EXPERIENCED

THE DEVICE HAS BEEN EVALUATED TO MEET T

EXCESSIVELY DURING USE, DO NOT USE IT AND CONTACT OUR TECHNICAL SUPPORT TEAM THROUGH WWW.WOOJFR.COM/SUPPORT

. DO NOT USE WOOJER VEST SERIES 4 WITH

HEADPHONES/EARPHONES WHILE DRIVING

VEHICLE, THIS MAY CREATE A TRAFFIC HAZARD

IT CAN BE DANGEROUS TO PLAY YOUR MUSIC

AVOID LISING HEADPHONES/FARPHONES A

HIGH VOLUME, HEARING EXPERTS ADVISE

. IF WOOJER VEST SERIES 4 OVERHEATS

AGAINST CONTINUOUS LOUD AND EXTENDE

MUSIC PLAY, KEEP THE VOLUME AT A MODERA'

CYCLING, OR OPERATING ANY MOTORIZED

AND MAY BE ILLEGAL.

 AVOID CHARGING YOUR WOOJER VEST SERIE REORIENT OR RELOCATE THE RECEIVING ANTENNA 4 AT EXTREMELY HIGH OR LOW TEMPERATURES INCREASE THE SEPARATION BETWEEN THE LIQUIDS MIGHT SHORT-CIRCUIT THE BATTER' OUIPMENT AND RECEIVER AND CAUSE A SIGNIFICANT RISK OF FIRE, OTHER CONNECT THE EQUIPMENT INTO AN OUTLET ON BODILY INJURY AND PHYSICAL DAMAGE.

### DECLARATION OF CONFORMITY, CERTIFICATES AND SAFETY PROTOCOLS

INTERFERENCE RECEIVED. INCLUDING

INTERFERENCES THAT MAY CAUSE UNDESIRED

OPERATION .ANY CHANGES OR MODIFICATION

RESPONSIBLE FOR COMPLIANCE COULD VOID

NOT EXPRESSLY APPROVED BY THE PARTY

THE USER'S AUTHORITY TO OPERATE THE

**FOUIPMENT** 

FEDERAL COMMUNICATIONS COMMISSION

THIS DEVICE COMPLIES WITH PART 15 OF TH GENERAL RF EXPOSURE REQUIREMENT. FCC RULES. OPERATION IS SUBJECT TO THE THE DEVICE CAN BE USED IN PORTABLE EXPOSU FOLLOWING TWO CONDITIONS: (1) THIS DEVICE CONDITIONS WITHOUT RESTRICTION. MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY

CANADA-INDUSTRY CANADA (IC) THIS RADIO TRANSMITTER HAS BEEN APPROVED BY INDUSTRY CANADA, THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN STANDAI ICES-003 THIS DEVICE COMPLIES WITH INDUS CANADA LICENCE EXEMPT RSS STANDARD(S) OPERATION IS SUBJECT TO THE FOLLOWING TW CONDITIONS, (1) THIS DEVICE MAY NOT CAUSE

INTERFERENCE AND (2) THIS DEVICE MUST NTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION OF THE DEVICE. THE DEVICE HAS BEEN EVALUATED TO MEET THE GENERAL RE EXPOSURE REQUIREMENT. THE DEVICE CAN BE USED IN PORTABLE EXPOSURE CONDITIONS WITHOUT RESTRICTION.

L'ÉMETTEUR/RÉCEPTEUR EXEMPT DE LICENCE CONTENU DANS LE PRÉSENT APPAREIL EST CONFORME AUX CNR D'INNOVATION, SCIENCES FT DÉVELOPPEMENT ÉCONOMIQUE CANADA APPI ICABI ES AUX APPAREILS RADIO EXEMPTS DE LICENCE. L'EXPLOITATION EST AUTORISÉE AUX DEUX CONDITIONS SUIVANTES

- 1. L'APPAREIL NE DOIT PAS PRODUIRE DE
- 2. L'APPAREIL DOIT ACCEPTER TOUT BROUILLAGE RADIOÉI ECTRIQUE SUBI, MÊME SU E BROUILLAGE EST SUSCEPTIBLE D'EN COMPROMETTRE LE FONCTIONNEMENT.


THE WOOJER VEST SERIES 4 QUALIFIED DESIGN LISTING WAS ACHIEVED IN ACCORDANCE WITH THE BLUFTOOTH QUALIFICATION PROCESS AS SPECIFIED WITHIN THE BLUETOOTH

CE DECLARATION OF CONFORMITY WE, WOOJER LTD., DECLARE UNDER OUR SOLE RESPONSIBILITY, THAT THIS WOOJER VEST SERIES 4 PRODUCT IS IN CONFORMITY WITH THE STANDARDS AND OTHER NORMATIVE

### wooj@r

©2025 - WOOJER LTD. ALL RIGHTS RESERVED THE WOOJER VEST 4 PACKAGING, LOGOS, ICONS. "RFADY. PLAY. FEEL.", "BORN TO FEEL", AND "#ALLTHEFEELS" ARE TRADEMARKS OF WOOJER LTD. WOOJER USA INC. AND THEIR SUBSIDIARIES IN THE UNITED STATES AND OTHER COUNTRIES. VISIT · WOO IFR COM

WOOjor VEST 4

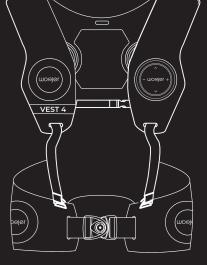

USER MANUAL WJRV4-101

#ALLTHEFEELS