
正面

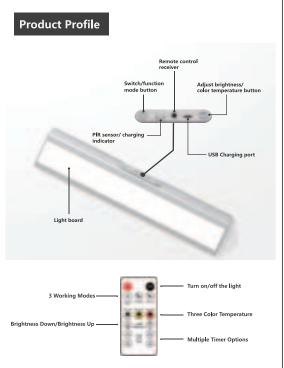



Function Description

Press it 🙆 key Enter the constant light mode; (The induction function does not take effect in the always-o

Button is color temperature switching and brightness adjustment key

Every press ②Cycle switching of color temperature: white light-warm light-natural light.

ong press (a) key Can be dimmed or lightened

Special instructions for motion sensing mode

- 1 This product is designed for double induction of human body and light. That is, when the ambient light is insufficient, Set the night sensing mode, The lamp body will light automatically when people enter the induction area of the lamp body, Other conditions do not meet the condition of induction automatic lighting; Set the all-day induction mode, which lights up as long as people come..
- 2 After people leave the sensing area, The light will go out automatically in about 25-30 seconds.
- 3 The light stays on if human stays in the sensing range.
- 4 In the sensing mode, the light won't turn on when it senses human in a well litenvironment.
- 6 The installation position such as too low, too high or the probe was blocked will affect the sensing is recommended to be mounted facing the side passing by to ensure the better effect.

Motion sensor working instructions





- the center point. However, improper installation or blockage of the sensing probe w affect the sensing sensitivity.
- When a person passes through a low-light area within the sensing range, the light will automatically turn on. When a person leaves the sensing range, the light will automatically turn off after about 25-30 seconds.

Remote control operation instructions



- controlled at the same time. However, obstruction by objects will affect the sensitivi

反面

USB charging


- A Please turn off the light before charging, and do not use it while charging. ▲ Please use the included charging cable when charging to avoid charging failure.
- Charging State:Red light
- Fully charged:Green light



Power usage duration description

- According to different usage conditions, the power consumption time will be different. The longer you use it every day, the faster the power consumption will be.
- 2 The brightness will decrease with the decrease of power, when the birghtness is low, please recharge the light in time.


Installation description

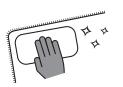

Please wipe the surface where it is pasted clean first and make sure the surface is dry. (Note: Oil stains on the surface of the pasting area will affect the firmness of the adhesi


Step 2

Step 1

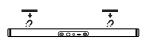

Place the two mounting pieces on the back of the light body and move the mounting pieces to the position of the built-in magnet.

Step 3

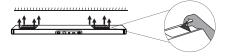

Peel off the adhesive tape on the back of the mounting piece and stick it to the desired

(Note: Please press the surface for more than 10 seconds)

A WARNING



WARNING: The battery is hazardous and shall be kept away from children:

WARNING: The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body;

WARNING: Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.

A WARNING



- INGESTION HAZARD: DEATH or serious injury can occur if
- A swallowed button cell or coin battery can cause **Internal** Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is suspected
- to be swallowed or inserted inside any part of the body.
 For treatment information call: [phone number for the National Battery Ingestion Hotline,currently 1-(800)498-8666].

Support Email: Support@lenomalighting.com



MADE IN CHINA

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.