

Thank you for purchasing the mobile wireless charging sterilization box.  
Please read this product manual carefully before using this product.

Different models support functions

Model	Sterilization	USB Charging	Wireless Charging	Mobile disinfection & mobile power supply
A	●	●	X	X
B	●	●	X	●
C	●	●	●	X
D	●	●	●	●
E	●	●	X	X
F	●	●	●	X

Product parameters

Product Name: mobile phone wireless sterilization box  
Input: 5V / 2A; 9V / 2A  
USB output: 5V / 2A  
UV output: 2W (Max)  
Wireless charging output: 10W (max)  
Battery capacity: 4000mAh / 14.8wh  
Product weight: SW02-A 360g SW02-B 420g  
SW02-C 375g SW02-D 435g  
SW02-E 332g SW02-F 347g

Product size: 200 \* 120 \* 54mm  
Package size: 203 \* 123 \* 56mm  
Material: ABS + PC  
Color: white  
Wireless charging conversion rate: 73%  
Rated frequency: 110-205khz  
Transmission distance: ≤ 6mm  
wavelength: 185nm & 254nm

inventory

Mobile phone charging sterilizing box x1  
Type-C data line (1m) × 1  
Instruction x1  
Pipette x2

instructions

- Plug in the equipped data line, turn on the power, the product will default to the wireless charging mode after power on, and the indicator light will flash twice and then go out to enter the standby mode,
- Put the items to be sterilized into the sterilization box and cover it. The sterilization mode is as follows:
  - 3-minute quick sterilization mode: press the button on the top of the cover once a short time, the green indicator light will be on, and enter the 3-minute sterilization mode,
  - 10 minute deep sterilization mode: on the basis of 3 minute sterilization mode, press the button above the cover

- again, and the blue indicator light will be on From, start to enter the 10 minute deep sterilization mode,
- After the completion of 3 minutes or 10 minutes, the corresponding indicator light flashes for 5 seconds and then goes out, indicating the completion of sterilization.
  - aromatic bacteria removal function: before sterilization, use a straw to drip 2 or 3 drops of perfume into the fragrant hole of the box, and then remove the bacteria by aroma.
  - Wireless charging function: place the mobile phone at the middle mark of the upper cover for wireless charging. In the wireless charging working state, red The color indicator light is always on.
  - Wireless charging can work with disinfection mode at the same time, When it works at the same time, the indicator light of the key will show "red green" or "red blue".

Lighting mode introduction

Mode	indicator
Power on status	Red light flashes twice
position in readiness	Extinction of lamp
Wireless charging state	The red indicator light is on for a long time
Wireless charging full state	Lights out
State when foreign matter is detected	Red light flashes fast
Over temperature and over current protection status	Red light flashes fast
3-minute sterilization status	The green light is always on
10 minute sterilization status	Blue light is always on
Disinfection completion status	The corresponding flash will be off after 5 seconds
Disinfection mode error status	Green and blue lights flash alternately

Sterilization

- Put the mobile phone or other items to be sterilized into the box and close the cover.
  - 3-minute quick sterilization mode: press the button on the top of the cover once, the green indicator light will be on directly, and the ultraviolet light in the box will be on at the same time
  - 10 minute deep sterilization mode: on the basis of 3 minute sterilization mode, press the button above the cover again, and the blue indicator light is
- In the direct on state, the ultraviolet light in the box will be on for sterilization, When the blue light flashes for 5 seconds, it will go out, indicating sterilization end,
- Complete sterilization: the whole sterilization process is 3 minutes or 10 minutes. After the sterilization operation is completed, the corresponding light flashes for 5 seconds and goes out The business ends automatically. At this time, the upper cover can be opened and the sterilized articles can be taken out for normal use. It will light up for disinfection. When the green light flashes for 5 seconds, it will go out, indicating the end of sterilization.

- Terminate the operation: ① if it is in the fast sterilization mode of 3 minutes, please press the key twice, and the green off means the sterilization is terminated.
- If it is in the 10 minute deep sterilization mode, please press the key once, and the blue off indicates that the sterilization is terminated, At this time, the cover can be opened normally Take out the items in the box.
- Before the sterilization starts, 2 or 3 drops of perfume can be poured into the fragrant hole of the box, and the aroma of the box can be simultaneously cured during the sterilization process Sterilization.
- Open the cover and automatically close the UV function.

Note: if not necessary, do not open the cover directly before canceling the work.  
Do not peep at the ultraviolet light, which may cause adverse effects on vision.

Wireless charging

- After the product is powered on, the default wireless charging mode is set, and the indicator light is red. When the product is in no-load state, it will be directly on for 30 seconds, and then it will go out and enter the standby state, nothing The working state of the line charging is that the red indicator light is on directly.
- Make sure the top cover of the product is closed, put the mobile phone screen up, and the wireless charging receiving part on the back down in line with the charging mark (The wireless charging receiving part of the mobile phone is generally in the middle of the back of the mobile phone).
  - When the wireless charging module detects the mobile phone normally, the red light is on, indicating that the mobile phone is placed correctly and enters the wireless charging mode, If the red light is not On, please try mobile phone location or check whether the mobile phone supports Qi wireless charging. If the red light flashes, it indicates that foreign matters are detected.
  - During the charging process, if the mobile phone is picked up, the charging will be suspended; wireless charging and sterilization functions can work at the same time.

USB charging

- Please plug the male end of USB cable a into the USB output port and the other end into the mobile phone to charge the mobile phone.
- Without battery, you can also use USB output port to charge the mobile phone when disinfecting, saving you a power adapter.
- USB output port supports 5V / 2A (max) output

Mobile disinfection & mobile power suppl

- Please fully charge the built-in 4000mAh battery to carry the product with you and sterilize it anytime and anywhere.
- It can use USB output to charge the mobile phone, small capacity emergency power supply.

Magnetic switch

- When the sterilization box is working, the ultraviolet lamp will be automatically turned off after the cover is opened to prevent harm to human body and eyes.
- When the sterilization box is working, it will automatically turn on the ultraviolet lamp for sterilization after closing.

Reminder

- a maximum of two to three drops of perfume can produce a full aroma effect. Do not drip excessive perfume.
  - do not use alcoholic perfume (such as dew) to avoid adverse effects on the surface of silicone based mobile phone.
- If the upper cover is opened in the process of sterilization, the sterilization operation is temporarily suspended, and the UV light will be automatically turned off to ensure that no It will cause unnecessary damage to the human body outside the box; after the upper cover is closed, the ultraviolet lamp will be on again, and the operation will resume.
- If the product is not used for a long time, the UV lamp may have a preheating process when the sterilization is started, and the duration is about 10 seconds,After preheating, the UV light will be on automatically.
- If the green and blue lights flicker alternately, it means that the ultraviolet ozone light is damaged. Please do not disinfect at this time. Please contact the manufacturer or the merchant for treatment.


Do not peep or look directly at the ultraviolet lamp during disinfection to avoid damage to vision.

Do not disassemble the product without permission. Do not use ultraviolet lamp to directly irradiate human body, animals and plants.

Please keep out of the reach of children.



Made in China

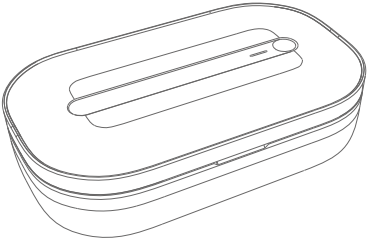

Sterilizing Box  
Instruction Manual

