


NetumScan

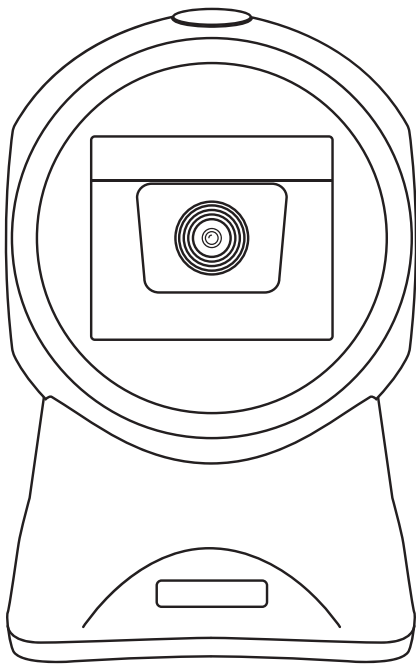

Quick Setup Guide

How to start:

- 1) Connect scanner with your device via USB cable.
 - 2) Setup keyboard language: If you use US keyboard, it's plug and play.
If you use other type of keyboard, scan command barcode of the keyboard from this manual. For more information please refer to "keyboard language".
 - 3) Locate cursor on place where you want the scanner to output the data.
- Once you finished above steps you scan start to scan.

Programming Code

Netum barcode scanners are factory programmed for the most common terminal and communications settings. If you need to change these settings ,programming is accomplished by scanning the bar codes in this guide. An asterisk (*) next to an option indicates the default setting.

Important Notes:

This scanner has big scanning range, make sure you cover the codes closed to the one that you want to scan so they will not be scanned by accident.

Factory Defaults

Configure the scanner to revert all settings to factory defaults.



303FFF0
Factory Restore

USB Interface (Optional)

USB HID-KBW

By default, the scanner is in HID mode as a Keyboard device. It works on a Plug and Play basis and no driver is required.



303FFF2
***USB KBW**

USB Serial

If you connect the scanner to the Host via a USB connection, the USB COM Port Emulation feature allows the host to receive data in the way as a serial port does.

If you are using a Microsoft®Windows®PC, you need to download the driver. Driver is available for downloading from our official website: www.netum.net



303FFF1
USB Serial

Keyboard Languages

Follow below instructions to configure keyboard language before you using it. For example If you use French Keyboard, scan command barcode of “French keyboard”. If you use a US keyboard you can ignore this step.



6060101
***USA**



6060116
SPAIN



6060108
FRANCE



6060109
GERMANY



606010D
ITALY



6060102
Belgium

Symbology

Some barcode types are not commonly used is off by default. You need to activate a command barcode to get it to work.

Code 32 Pharmaceutical



1020301
Enable Code32

EAN ADD ON 2 OR 5



30303A1
Enable "EAN ADD ON 2"



30303A0
***Disable "EAN ADD ON 2"**



30303B1
Enable "EAN ADD ON 5"



30303B0
***Disable "EAN ADD ON 5"**

FAQ

- Question:Is there any barcodes for apply or remove suffix ?

Yes, you may go to our official website"netum.net" to download the complete manual and refer to the part of " prefix and suffix" or turn to customer service for help.

- Question:How to solve the messy code problem encountered while using other foreign languages?

Solution:The default keyboard language is English. If you use other types of keyboard please refer to "Keyboard language".

- Problem: Some barcodes cannot be read.

Solution:

- a. Dirty or unclear barcodes might not be read.
- b. The possible reason is that setting for some barcode types are not commonly used is off by default. You need to activate a specific barcode type to get it to work. Please contact us for help.

Support

If you have any inquiries please do not hesitate to contact us.

Contact Information

Tel.: +0086 20-3222-8813

Email: support@netumscan.net

www.netum.net

ADD:Room 301, 6th Floor and full 3rd Floor, Building 1, No. 51 Xiangshan Avenue, Ningxi Street, Zengcheng District, Guangzhou City, Guangdong Province, China

Made in China