




1. Go to <http://www.topdondiagnostics.com> , click “SUPPORT” of The page, and select “Rom Update”

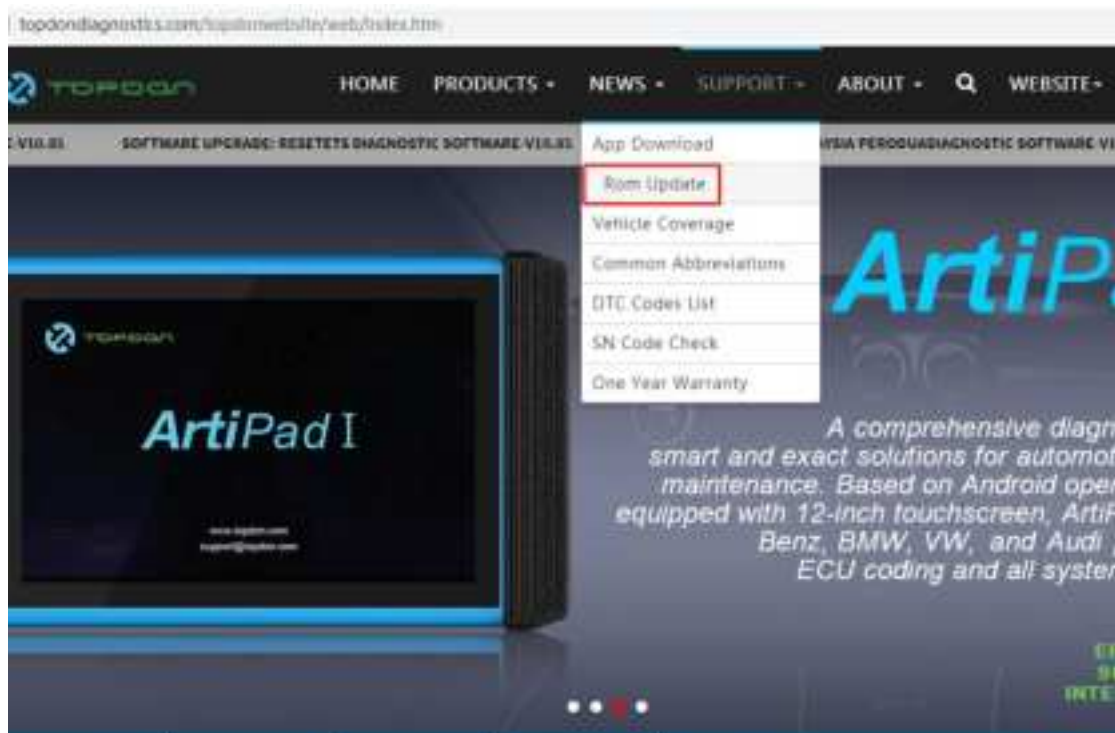


2. click “TOPDON ArtiLink500 Updata”, download

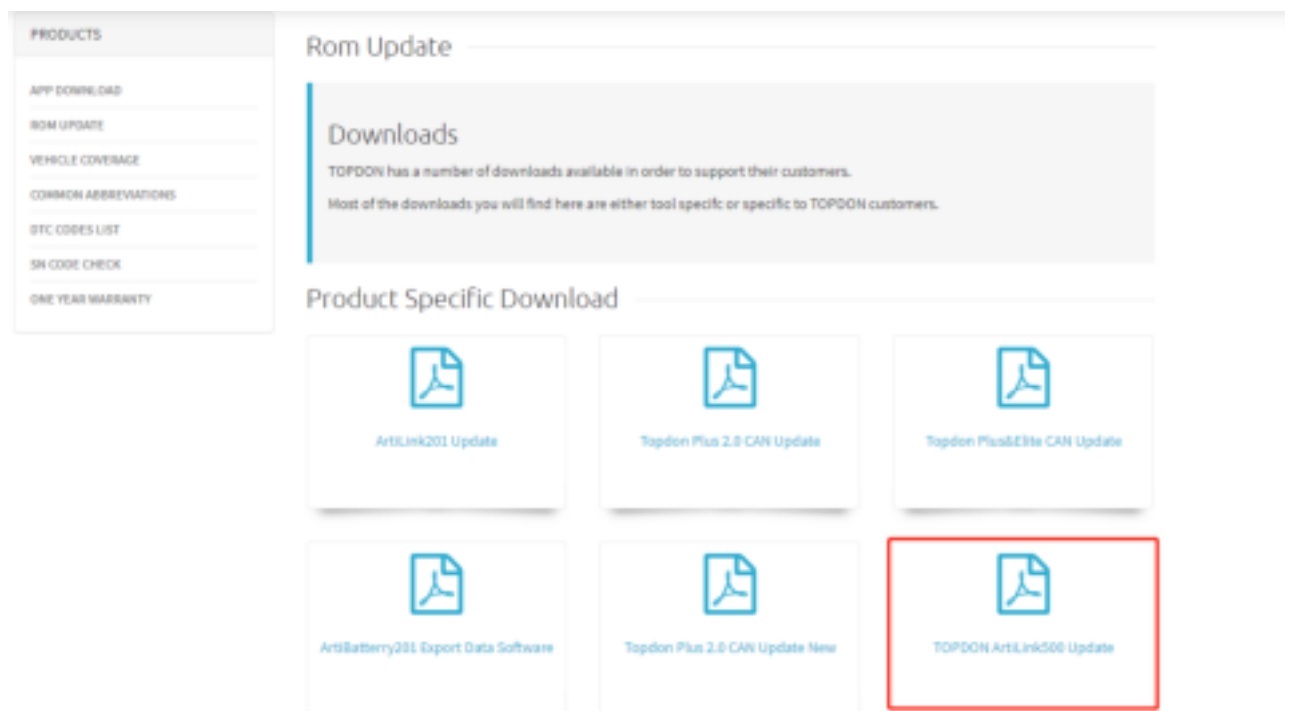

3. Unzip the downloaded file

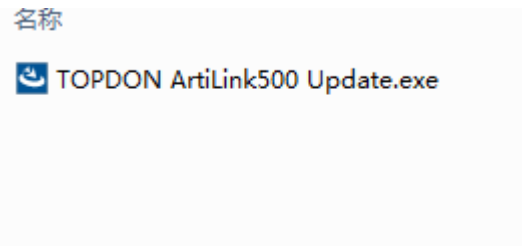


4. run TOPDON ArtiLink500 Update.exe, follow the instruction until the installation finishes.

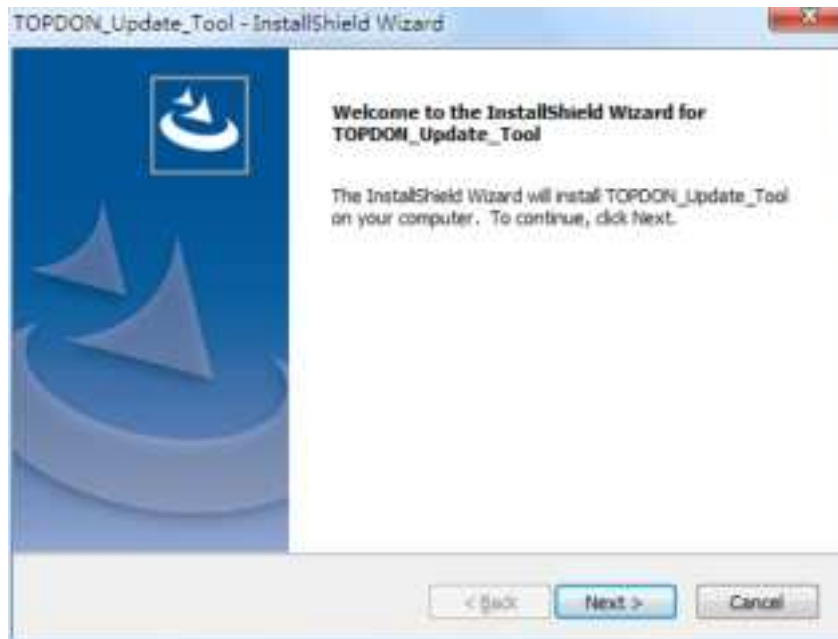


5. Connect ArtiLink500 with the computer using the USB cable, as follow:(please move to the next step after the screen shows hardware information):




6. Run the update tool on the computer

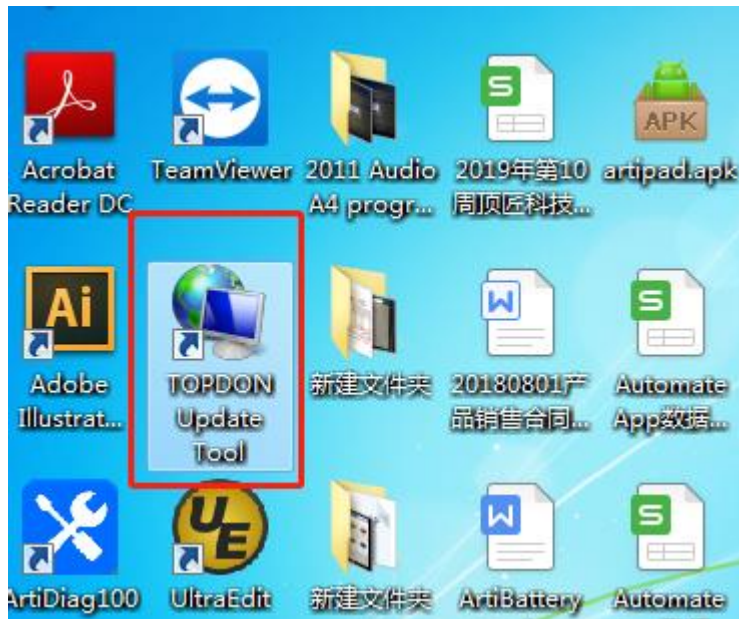


7. Click Device Upgrade to move to the next step after the update tool has retrieved the serial number automatically (please don't input the serial number manually)

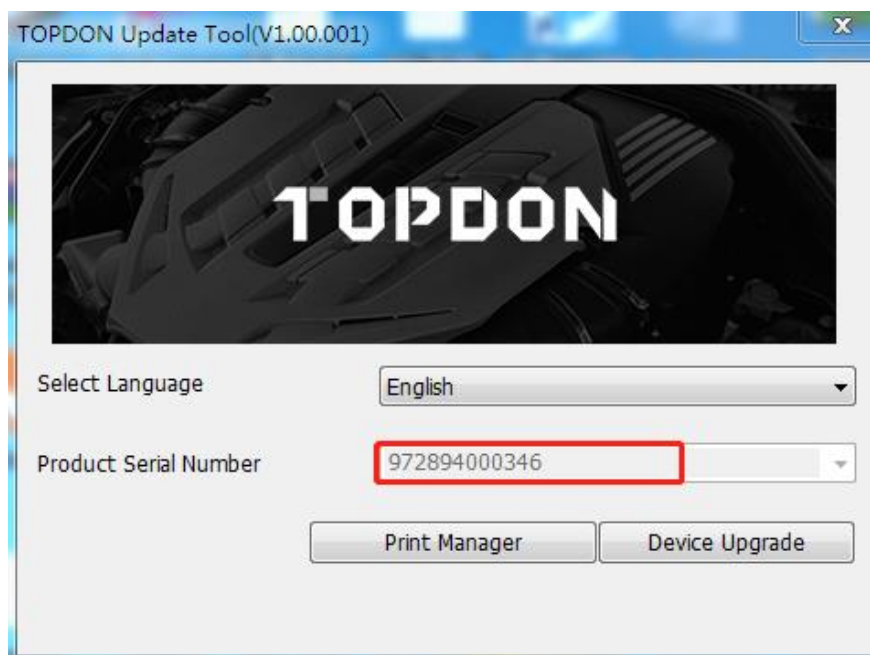

8. Registration: input the Email Address and input again to confirm(the register code will come out itself), click submit, and move to the next step (Note: registration is needed only for first update)

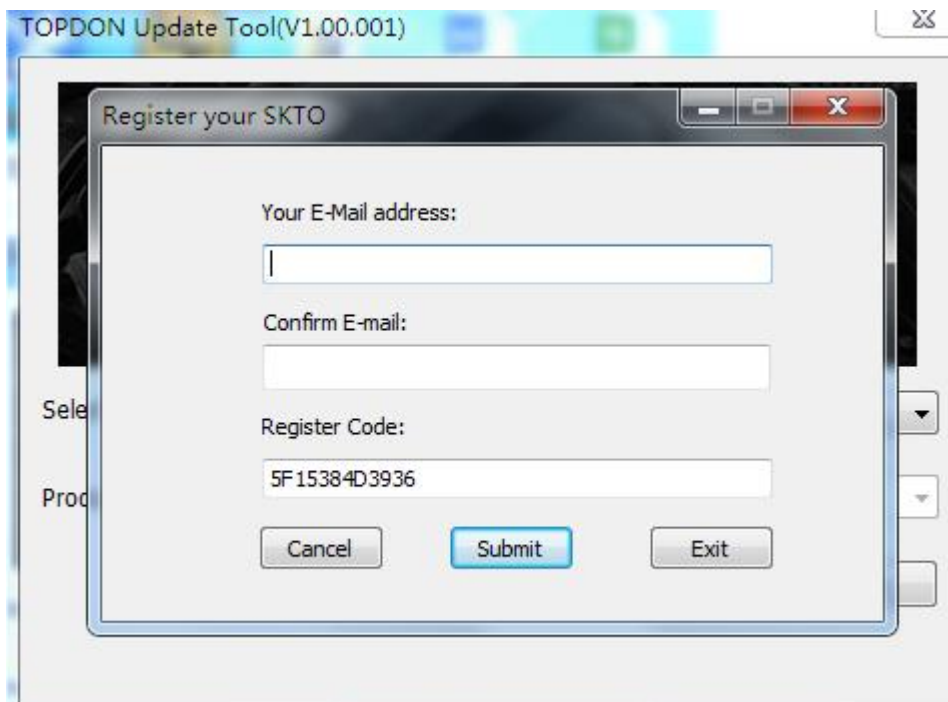

9. click Upgrade, the update tool and Artilink500 interface will both show the upgrade progress

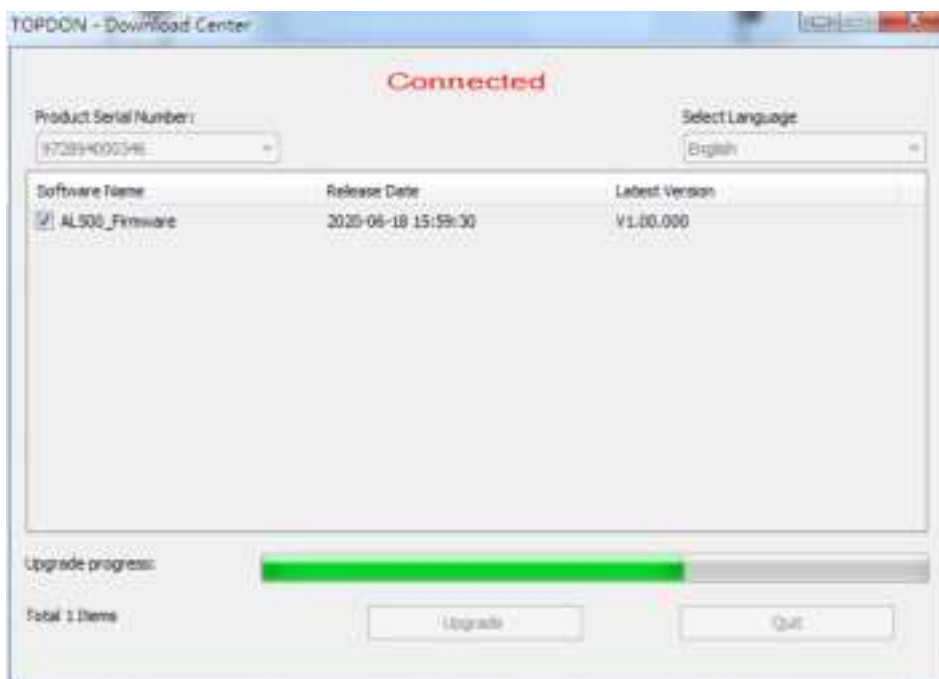



10. After the screen shows Upgrade Success, the device will restart and show the menu, hence the end of the update process.

