

To bring you a better experience, please read these Instructions carefully.

A. Bind Your Device

a. Download and Install the App

Download the InxFIT App by scanning the QR code or searching in the App Store.

Note: the operating system of your mobile phone needs to meet the following requirements:



iOS 10.0

or



Android 5.0



Bluetooth 5.0

1. Scan the QR code below to download the InxFIT App.




(The QR code may be updated.)

2. Open the App Store on your mobile phone, search for “InxFIT”, and then download the InxFIT App.

b. Binding Steps

(Note: during the binding process, InxFIT will ask you to turn on the Bluetooth of your mobile phone and authorize InxFIT to access the GPS of your mobile phone. For IOS user, when a binding error occurs, please ignore this device in the Bluetooth list of your mobile phone first.)

1. On the Home page of the App, click “+” at the upper right corner and select [**Add Device**] to search for your watch. Find your watch in the Device List and click it to bind it.

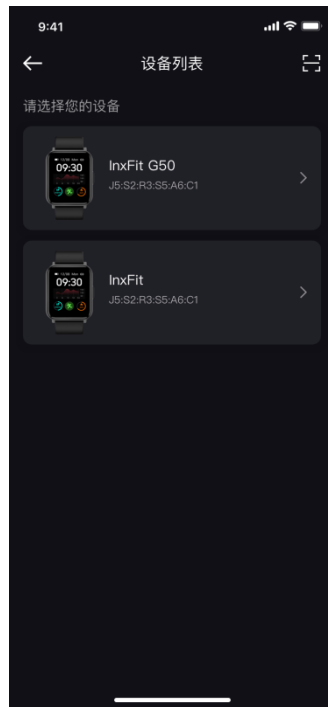


2. On the Home page of the App, click “+” at the upper right corner and select [Scan]. Then scan the QR code that is displayed on your watch when it is turned on for the first time. If you accidentally exit the QR code page, select [Device]→[Setup]→[About] to find the QR code.



B. Data Synchronization

The watch records various data on your activities when it is worn on your wrist.

You can synchronize data with the App as follows: start the InxFIT App, and pull down the page to start a data synchronization. The synchronization progress is displayed on the page.

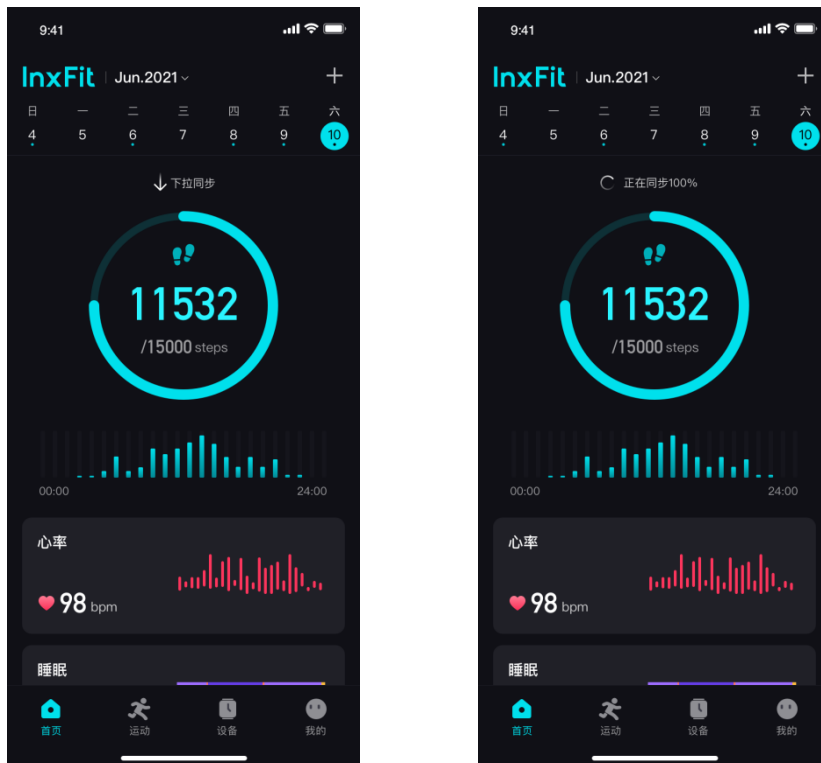


Note: please perform a data synchronization at least every 7 days, or the data will be overwritten when the memory is full.

C. Instructions for Use

a. Charging Diagram


Follow the diagram below to connect and charge your watch. We recommend that you charge your watch before turning it on for the first time.

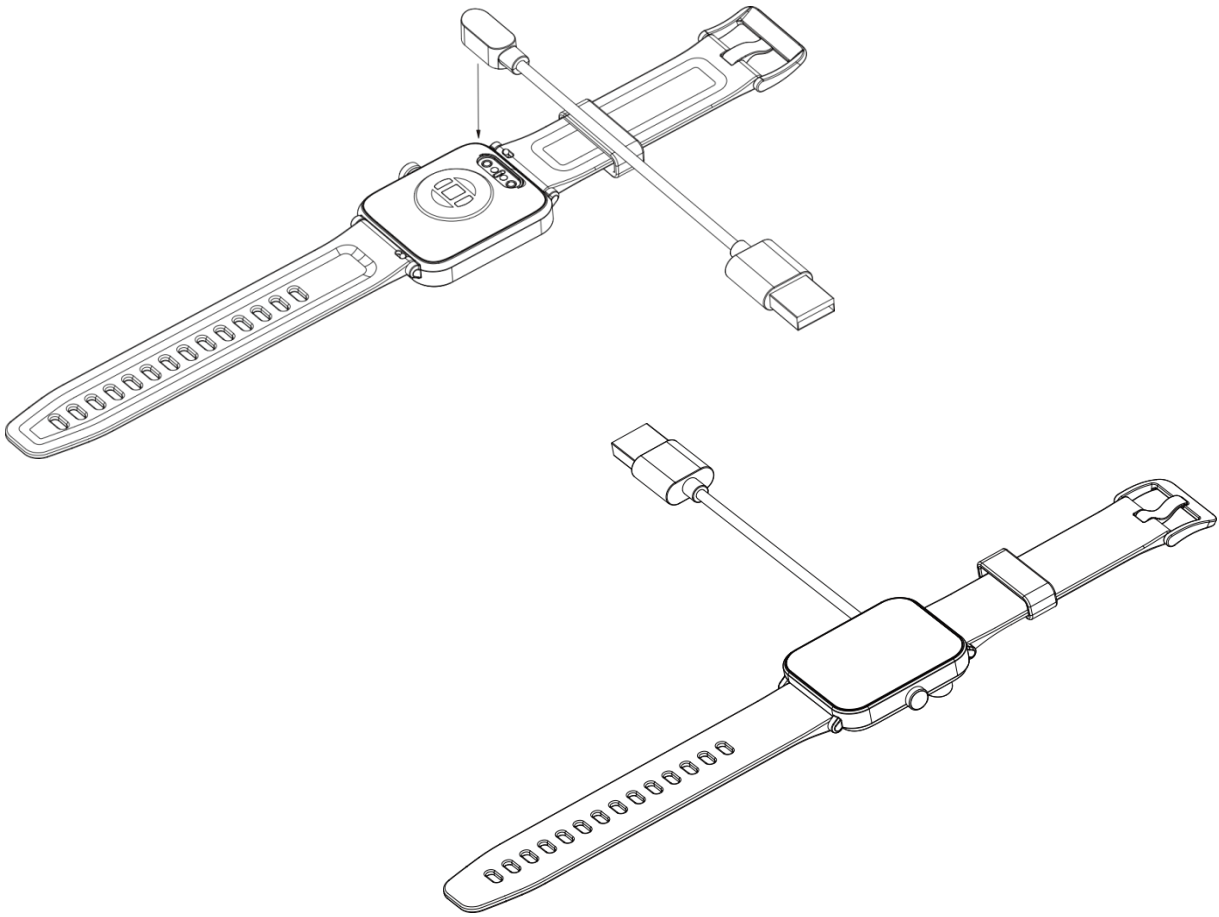

b. Wearing and Adjustment


1. Wear Your Watch

Leave one-finger gap between the watch and your wrist bone, and adjust the strap to a comfortable length.

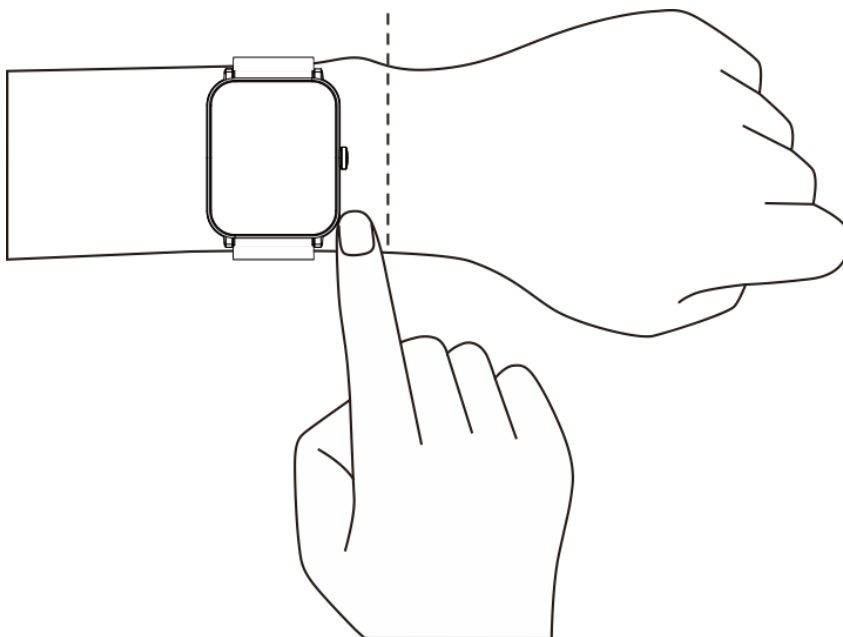

2. Replace the Strap

Push the push button horizontally to loosen the strap, and then remove the strap.

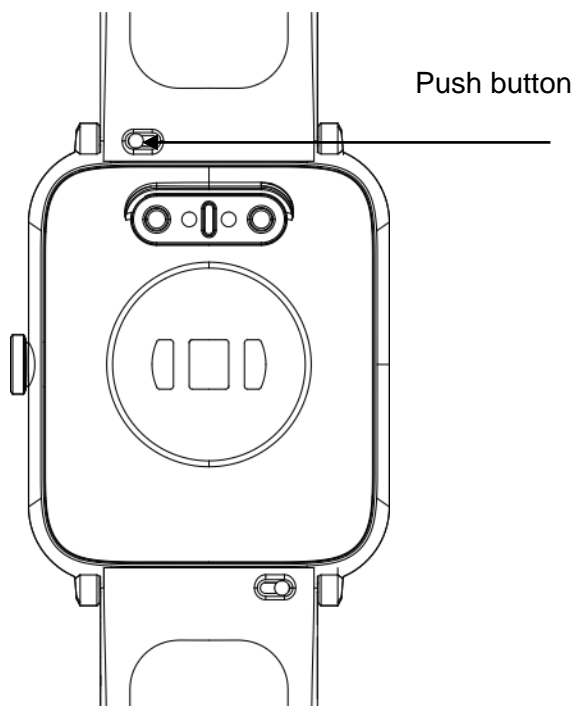

Note: too loose or too tight wearing may affect the accuracy of HR or SpO2 measurement.

D. Operating Instructions

a. Button Operations

Press the button: return to the dial, or switch between the dial and function list.

Press and hold the button: turn on/off the device.



b. Change the Dial

Press and hold the dial screen to display the dial selection list after vibration. Swipe horizontally to select the desired dial, and then click it to apply it.



c. Screen Operations


Swipe the screen to enter different interfaces as shown below.



E. Function Overview

1. Functions

Sports / HR / SpO2 / Sleep / Alarm Clock /
Breathing Exercise / Timer / Weather / Music Control / Stopwatch

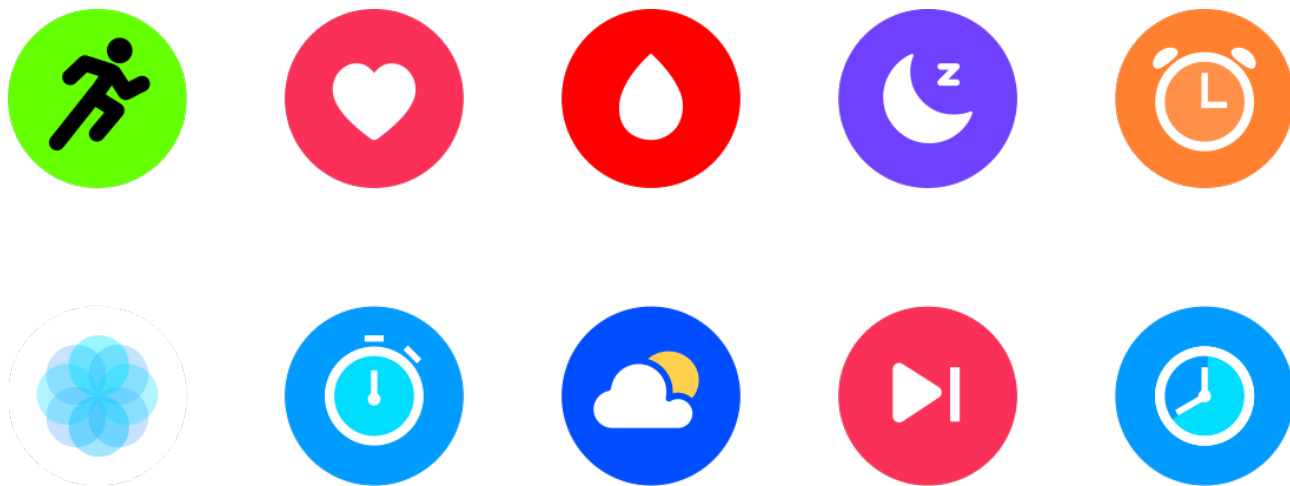

Note: the Weather function needs to be enabled on the App. More details on the functions can be found on the App.

2. Initiate an Exercise

- To start an exercise: click the “Sports” icon → select a sport → the exercise data recording will start at the end of the countdown.
- Control the exercise: press the side button to pause the exercise recording; press the side button again or click [Resume] on the screen to resume the exercise recording.
- Stop the exercise: press and hold the side button to stop the exercise, or click [Stop] on the screen to stop the paused exercise.

F. Specifications

Model	G50	Screen type	1.69 inch
Battery capacity	260mAh	Charging voltage	5V
Charging time	About 2 hours	Bluetooth Version	5.0
Waterproof level	IP68	Charging mode	Magnetic charge
Operating temperature	-20°C-45°C	Watch size	H: 249.5 W: 38.6 D: 12.45
iOS	IOS 10.0+		
Andriod	Android 6.0+		

Note: do not wear the device to take a bath, because high temperature or steam may damage the device.

G. Cleaning and Maintenance



It is recommended to wear and clean the product as follows:

1. Keep the product clean.
2. Keep the product dry.
3. Don't wear the product too tightly.

Do not use detergents to clean the device. You can use soap-free detergents.
For stains that are not easy to remove, it is recommended to clean with alcohol.

H. Safety and Certification (see the certificates)



The device meets the EU ROHS criterion.
Please refer to IEC 62321, EU ROHS
Directive 2011/65/EU and revised directive.

This device complies with Part 15 of the FCC Rules. Operation
subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received,
that may cause undesired operation.

Changes or modifications not expressly approved by the
party responsible for compliance could void the user's
authority to operate the equipment. This equipment has
been tested and found to comply with the limits for a Class
B digital device, pursuant to Part 15 of the FCC Rules. These
limits are designed to provide reasonable protection
against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio
frequency energy and, if not installed and used in
accordance with the instructions, may cause harmful
interference to radio communications. However, there is no
guarantee that interference will not occur in a particular
installation.

If this equipment does cause harmful interference to radio
or television reception, which can be determined by turning
the equipment off and on, the user is encouraged to try to
correct the interference by one or more of the following
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and
receiver.
- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician
for help.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS



Old electrical appliances must not be
disposed of together with the residual
waste, but have to be disposed of
separately. The disposal at the communal
collecting point via private persons is for
free. The owner of old appliances is
responsible to bring the appliances to these
collecting points or to similar collection
points. With this little personal effort, you
contribute to recycle valuable raw materials
and the treatment of toxic substances.

The device has been evaluated to meet general RF
exposure requirement. The device can be used in
portable exposure condition without restriction.

Shenzhen XiaoJu Intelligent Technology Co., LTD