

Programming a Remote via the Motor/Receiver

1. If your garage motor has a plastic cover over the buttons, please remove it.
2. Press and hold the blue Door Code button on the motor, or the SW1/SW2 button on the receiver board (keep it held down).
3. Press the button on the new remote you want to use for two seconds.
4. Release the button, wait two seconds, then press the same button again for another two seconds.
5. Release the Door Code or SW button from the motor or receiver.
6. Press the remote button to confirm the door operates correctly.

Programming a New Remote to a Gate via Original Remote



1. Stand within 1-2 meters of your gate's control panel.
2. Press the button on the existing remote to open or close the gate.
3. As the gate begins to move, insert a pin into the center programming hole on the original remote (center of the 4 buttons). Hold it until the LED lights up for at least 2 seconds.
4. Remove the pin from the original remote.
5. On the new remote, press and hold the button you want to use for 2 seconds.
6. Release the button and wait for two seconds.
7. Press the same button again for another 2 seconds.
8. Wait 10-15 seconds and test the new remote.

Deleting All Remotes from the Motor

1. Disconnect the power to the motor at the power socket.
2. Hold down the Door Code or SW1 button on the motor.
3. While holding the button, reconnect power to the motor. The LED will light up after a few seconds, indicating the memory is cleared.
4. Release the button and test the remote. It should no longer operate the door.

IMPORTANT

IMPORTANT: If the remote didn't program, some models may have a full memory which prevents adding new remotes. You will need to delete all existing remote codes as explained in the instructions, then reprogram each remote (old and new) one by one.

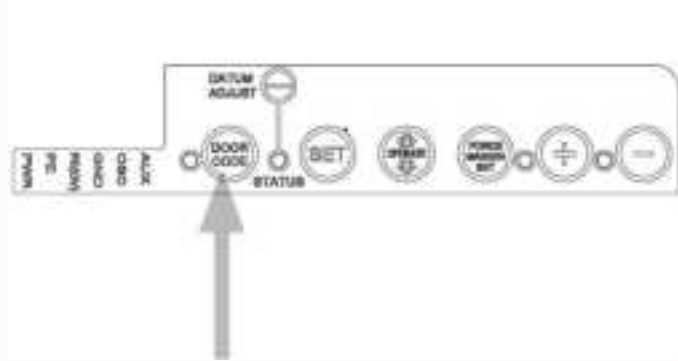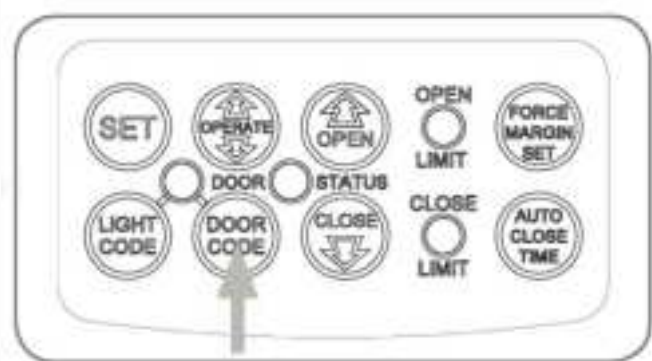

WARNING!

Product contains coin/button cell battery.
Keep product and batteries away from children. The battery is hazardous and can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside any part of the body.