
# Raychem

## **UMB**

### Universal Mounting Bracket Installation Instructions

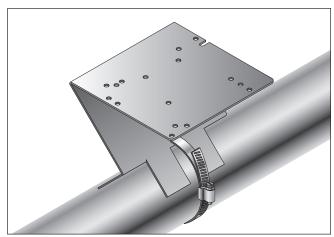

Step 1 Use Chart A to select the mouting pattern figure for installation.

**Step 2** Mount the equipment according to the figure shown on page 2.

#### **DESCRIPTION**

The Raychem Universal Mounting Bracket is used to mount the thermostats and junction boxes listed in chart A.

#### **TOOLS REQUIRED**

Flatblade screwdriver
 Adjustable wrench

#### **KIT CONTENTS**

Item	Qty	Description
A	1	Raychem UMB bracket
В	2	Hex head bolt (1/4-20 x 1 in)
С	2	Hex head bolt (#10-32 x .375 in)
D	2	Pan head screw (#10-32 x 1.25 in)
E	2	Pan head screw (#10-32 x .625 in)
F	2	Hex Nut (1/4-20)
G	2	Hex Nut (#10-32)
Н	2	Lock Washer (1/4)
Ι	2	Lock Washer (#10)
J	2	Flat Washer (#10)


#### **ADDITIONAL MATERIALS REQUIRED**


#### Chart A


	Fasteners quantity/each	Mounting pattern		
	8-32 bolt, nut #8 lock-washer (supplied with thermostat)	Hex head bolt (1/4-20 X 1 in), nut, 1/4 in lock-washer	Pan head screw (#10-32 x 1.25 in), #10-32 nut, #10 lock-washer, #10 flat-washer	
Thermostats				
AMC-1A	2			Figure 1
AMC-1B	2			Figure 1
AMC-1H		2		Figure 2
AMC-HT		2		Figure 2
E507S		2		Figure 3
AMC-F5		2		Figure 4
Junction boxes				
Adalet XIH		2		Figure 5
HAK-JBS, HAK-JB3 (Killark HKB boxes)		2		Figure 6
JBU-100-A(6), JBU-100-L-A			2	Figure 7





<sup>·</sup> Pipe strap

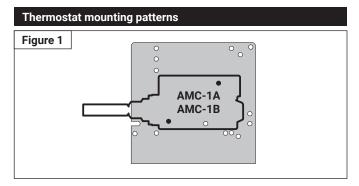


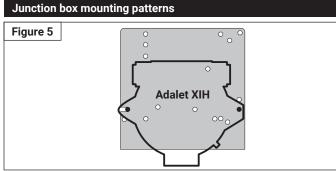


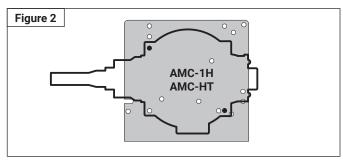

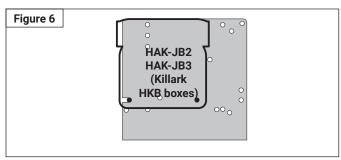

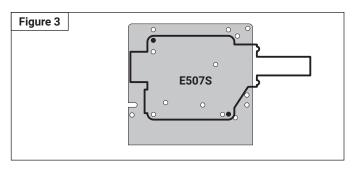

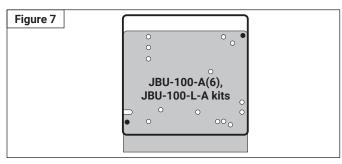

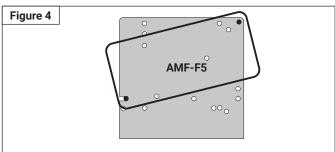

#### **North America**

Tel +1 800 545 6258 info@chemelex.com

#### **Latin America**

Tel +1 713 868 4800 info@chemelex.com

#### Europe, Middle East, Africa, India

Tel +32 16 213 511 Fax +32 16 213 604 info@chemelex.com

#### **Asia Pacific**

Tel +86 21 2412 1688 infoAPAC@chemelex.com



Raychem

Tracer

**Pyrotenax** 

Nuheat

©2025 Chemelex. All Chemelex marks and logos are owned or licensed by Chemelex Europe GmbH or its affiliates. All other trademarks are the property of their respective owners. Chemelex reserves the right to change specifications without notice.

RAYCHEM-IM-HS4170-UMB-EN-2504