Smart Zignito Tubular Motor Quick Setup for Pairing with Smart Life/Tuya App





























For further information, please contact us and we'll be happy to assist you.

Smart Zignito Tubular Motor Manual Setup for Pairing with Smart Life/Tuya App







SETTING YOUR UPPER LIMIT

Now using your remote, press the **UP button** to take the blind to the upper limit position.


Once the Blind is at the upper position, select the **"Settings"** icon.





Select "Upper limit setting" & wait for the motor to vibrate.



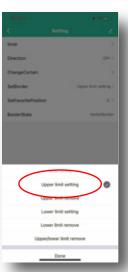




SETTING YOUR LOWER LIMIT

Now using your remote, press the **DOWN button** to take the blind to the lower limit position.

Once the Blind is at the lower position, select the **"Settings"** icon.






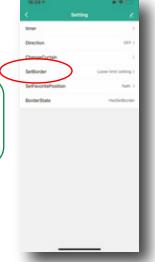





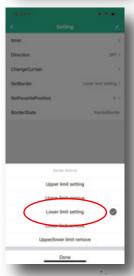

For further information, please contact us and we'll be happy to assist you.