

On/Off

- Slide the switch to the right to turn on.
- Switch² has a 10-minute auto shut-off feature. Press any button to wake from sleep mode.
- The 3 LEDs on the back of the device indicate battery level. Flashing lights indicate less than 10% remaining.



APP Connection - iOS

- Download the LabLink Browser from www.lablinkbrowser.com
- Make sure to allow any permission pop-ups during this process.
- Copy the following link and paste it into the LabLink browser to access the web app: <http://app.dabblab.com>
- Switch² must be powered on and nearby. Press "Launch" then select your device from the list. Perform any necessary firmware updates.

APP Connection - Android

- Download the Dr.Dabber Scan app from the Google Play Store.
- Make sure to allow any permission pop-ups during this process.
- Switch² must be powered on and nearby. Press "Launch" then select your device from the list. Perform any necessary firmware updates.

Change Temperature Setting

- Press the **+** button to increase temperature, and the **-** button to decrease temperature. The LEDs will change colors to indicate the selected temperature setting.



Setting	Default Temperature (°F)	LED
Setting 1	400	Purple
Setting 2	440	Blue
Setting 3	480	Green
Setting 4	500	Orange
Setting 5	540	White

• The Default and Our Recommended Setting

Activate Heating Cycle

- Press the **⏸** button once to activate. The LEDs will pulse Red to indicate heating and Green when the Switch² reaches desired temperature.
- Heating cycle can be cancelled at any time by pressing the button again.
- 3 white flashes from the LED band indicate a low battery.

Charging

- To charge, plug the charging cable into the device. The device can be used while charging. LEDs will pulse while while charging and turn solid when fully charged.

Getting Started

- Use the supplied charger to fully charge your Switch.
- Rest both hands on top of the screen and gently pull upwards from the bottom of the glass attachment with your thumbs to remove. **Never pull up from the mouthpiece to remove the glass attachment as it can break and cause injury.**
- Once the glass attachment is removed from the device, fit the attachment up to the top of the peristaltic pump with water. Filling lower than this point will affect vapor quality.
- Gently push the glass attachment back down into place, ensuring that the markings on the attachment and the device are lined up. This will align the glass with the vapor pathway.
- Put off the magnetic cam cap and load your concentrate into the insert with the supplied Drop loading tool. It is very important to avoid putting the tip of the loading tool directly in the insert. Hover the loading tool above the insert and click the button to heat the concentrate on the tip and drop it into the insert. Do not scrape the tool on the edge of the insert as the electronics in Switch can be damaged if the battery powered Drop comes in contact with the induction field.
- Place the cam cap back on the insert to seal the induction well.
- Your device is now ready to use! You can either use the +/- buttons on Switch or the app to choose your temperature, then just hit the button to begin the heating cycle.

Push Four Buttons



Alignment Lines

Cleaning Tips

- We recommend swabbing your insert with Iso-Swabs or cotton swabs after every use for optimal flavor and longevity.
- If you need to remove the insert for deeper cleaning, remove the glass attachment and set it down on a stable surface, then gently pry off the aluminum crown to reveal the induction well. Always use the supplied hex screws to remove the insert and be very careful when removing, as both the insert and the supplied inserts are very fragile and can break easily.
- Removing the insert is not required for regular maintenance and is only recommended when absolutely necessary. **NEVER** remove the insert when it is hot. Wait for the device to cool down after use before removing to avoid burns.
- We recommend using 90% isopropyl alcohol to clean the glass attachment. Ensure your attachment is thoroughly rinsed with clean water and refilled before using again.
- Do **NOT** use isopropyl alcohol on the outer shell of Switch as it will damage the Blue Drops finish. If necessary, use a damp paper towel with a small amount of dish soap to wipe down the body, making sure to avoid water entering the charging port.



Enter the same account details
you use on Dr.Dabber.com

If you do not already have an
account on Dr.Dabber.com,
create an account to use
your Switch!



Tap here to access
device settings

Tap here to access
your workflow

Press to start a remote
heating cycle


Use the plus and
minus buttons to
change temperature

This page will show
all information about how
you use your Switch!



Tap here to access your
temperature gauge

Tap here to choose
Dynamic Heating mode

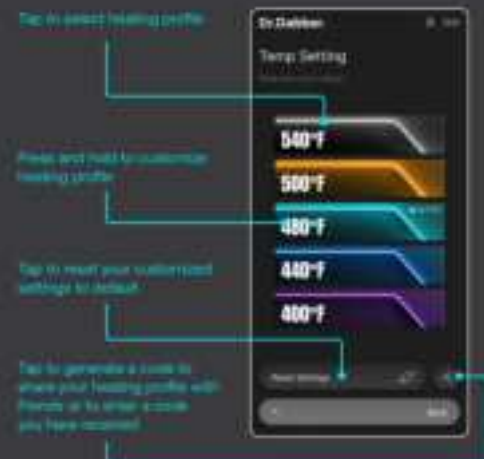



For more information go to: <https://dabberinc.net/en/usa/switch/20-switch2-knowledge-base>