

Users Manual

VORD PRO®

VORD PRO WIRELESS VACUUM
SKU: TPPO-1



ENGINEERED BY VORD LAB

1 Catalogue

1. Safe operation manual
2. Product parameters
3. Product use
4. Accessories list
5. Installation instructions
6. Method of use
7. Cleaning and maintenance
8. General fault analysis and treatment
9. Environmental protection instruction sheet

2 Safe operation manual

- Please read all contents of this manual carefully before using the product.
- Keep this manual properly. If you transfer the product to a third party for use, please attach this manual with the machine.
- Any operation inconsistent with the instructions in this manual may cause serious personal injury, property loss or damage to the product itself.
- Our company will not bear any legal liability for the loss caused by the failure to operate in accordance with the product instructions.
- Please read the instructions that are very important to your personal safety carefully to avoid accidents and possible damage to the product.
- Please be very careful when working with the product to avoid danger.
- Keep the product properly and keep it out of the reach of children and people who are unable to judge the environment.
- Do not store the product at a high place to avoid the risk of accidental fall.

3 Product Parameters

Product Model	21-66001	21-66010
Rated Voltage	140	140
Rated Input	140-14	140-14
Rated Air Capacity	0.3	0.3
Motor Type	Motor-C	Motor-C
Product Size	21.3x15.2x4.7cm	21.3x15.2x4.7cm
Product Weight	about 140g	about 170g
Accessories Model	21-660	21-660
Motor Type	DC Motor	DC Brushless Motor

4 Product use



5 Accessories list



6 Installation Instructions

Installation of main machine dust collecting bin group


1. Install the HEPA filter cover into the dust collecting cup as shown in the figure.
2. Rotate the dust collecting cup assembly counterclockwise as shown in the figure, and a "click" sound indicates that the installation is successful.



Dust collection mode



Blowing mode

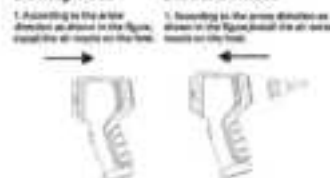

Extraction mode



7 Method of use

Precaution before use

1. Charge with a 5V 2A mobile power supply. Make sure that all parts of the power supply connector have been inserted in place. Check whether the power is sufficient to ensure the normal operation of the product.
2. Do not use the machine when charging. The red indicator light of the charging line is in normal charging state, and the blue light is always on when fully charged.
3. Insert the charging cable into the USB interface and the other end into the charging socket.

Charging instructions

1. Insert the charging cable into the USB interface and the other end into the charging socket.
2. Do not start the machine when charging. The red indicator light of the charging line is in normal charging state, and the blue light is always on when fully charged.

Start-up

The whole machine adopts a timing switch. Press the switch button, the main machine starts in the standby working mode, and the working indicator light is green and lit.

Close

Press the switch button to shut.

No switch

When using a new battery or leaving in battery for the first time for a long time, please fully charge the battery.

Please charge for about 12 hours before the first use.

Please fully charge before using again. If the battery is not fully charged, the working time will be reduced.

Please fully charge before using again. If the battery is not fully charged, the working time will be reduced.

Please fully charge before using again. If the battery is not fully charged, the working time will be reduced.

Please fully charge before using again. If the battery is not fully charged, the working time will be reduced.

8 Product disassembly and cleaning

Cleaning and maintenance

Clean the dust collecting cup

1. First, rotate the dust collecting cup in the direction of arrow in the figure and remove it from the host.



2. Take out the HEPA filter screen in the dust bin and clamp the garbage into the garbage can.

3. Separate the HEPA filter cover and dust collecting cup in sequence, and clean the HEPA filter cover with a brush. The dust collecting cup can be washed and dried before use.

4. To remove the dust bin, put the HEPA filter screen into the dust bin, and rotate and tighten it in the opposite direction according to step 1 above.

