




WT2 Edge

Operating Manual

First time usage guide

Step 01

1. Access the mobile app store to download then install APP—Timekettle
(Please check the version of phone you're using prior to downloading, Android 7 and above, IOS 12 and above are compatible)

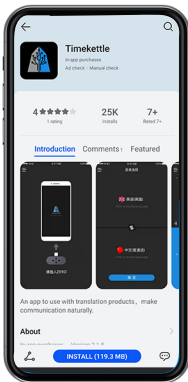


*Remarks:

①. Please don't connect the earbuds to Bluetooth in Setting module, it should be directly in APP. (You can't find WT2 Edge in Bluetooth setting.)

②. WT2 Edge is for translation purpose only, not for mobile phone calls and music.



③. Speak loud and clear to ensure the best result in translation accuracy. Try to avoid slang and non-frequent words.

④. Change your way of expression when translation is inaccurate.

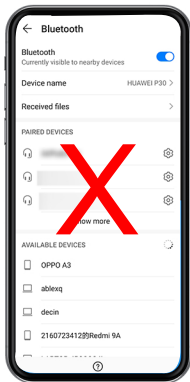


Step 02

1. Enter the APP-Timekettle, select WT2 Edge, turn on Bluetooth, agree to obtain system permissions: audio recording, device location information etc. Take out both earbuds and the green light flashes, click connect buttons of "L"&"R". If both earbuds light solid green, the connection is successful.

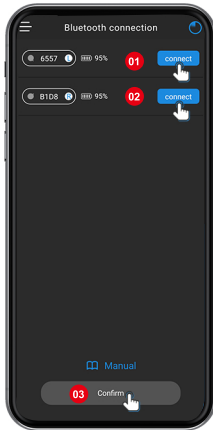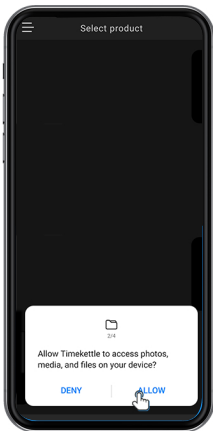


Simul mode

1. Click the main menu bar of the phone screen to select Simul mode.
2. Then click menu bar in the upper right corner of the phone screen to select the translation language for L & R earbuds.

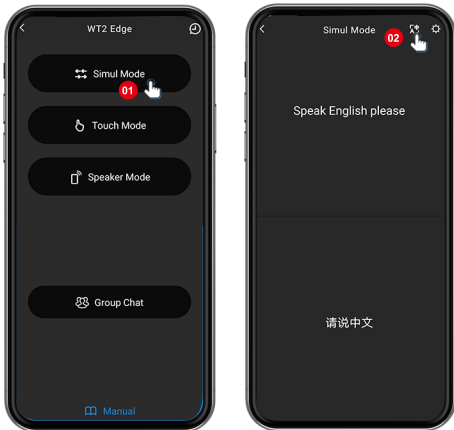

Simul mode

3. Then click "Confirm".

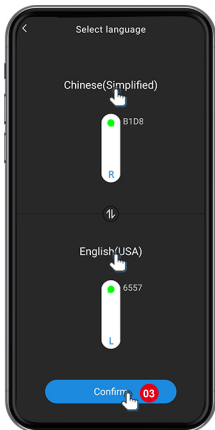

Simul mode



*Start to use Simul mode. You don't need to touch the earbuds or the phone screen, any spoken sentences will be automatically recognized, and translated to the language that the other person using. You can speak non-stop, and the translation will be played in the other person's ear continuously.

*Remarks:

1. Speak loud and clear to ensure the best result in translation accuracy. Try to avoid slang and non-frequent words.
2. Change your way of expression when translation is inaccurate.


Touch mode

1. Click the main menu bar of the phone screen to select Touch mode,
2. Then click menu bar in the upper right corner of the phone screen to select the translation language for L & R earbuds.

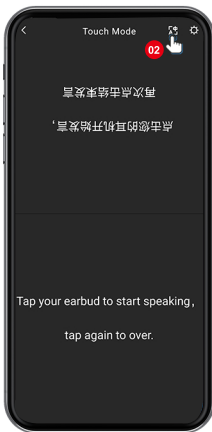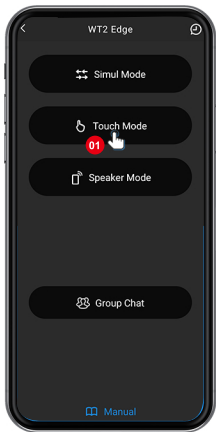

Touch mode

3. Then click "Confirm"

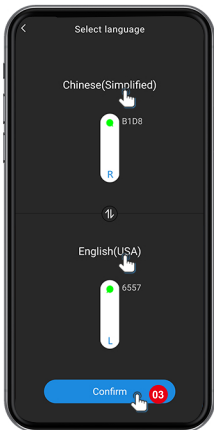


Touch mode

*Start to use Touch mode. WT2 Edge translator earbuds will only be activated by touching the sensor area with your finger. Touch once to start speaking, again after you've finished. The translation will be translated within 1-3s.



*Remarks:

1. Both Speak loud and clear to ensure the best result in translation accuracy. Try to avoid slang and non-frequent words.
2. Change your way of expression when translation is inaccurate.

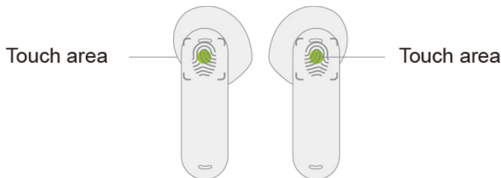

Speaker mode

1. Click the main menu bar of the phone screen to select Simul mode,.
2. Then click menu bar in the upper right corner of the phone screen to select one language for the person who wears L or R earbud, the other language for the person who speaks to the phone speaker.

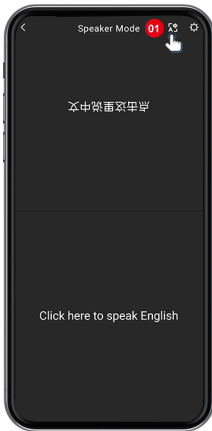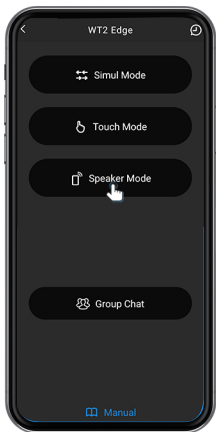


Speaker mode

3. Then click "Confirm"

*When you speak, wear an translator earphone, tap the earbud, the translation results will be played through the speaker on your mobile phone. If the other person wants to talk to you, he could answer via talking to the speaker on your phone.

***Remarks:**

- ①. In Speaker mode, only one earbud needs to be connected, you can put the other earbud in the charging case.
- ②. Speak loud and clear to ensure the best result in translation accuracy. Try to avoid slang and non-frequent words.
- ③. Change your way of expression when translation is inaccurate.

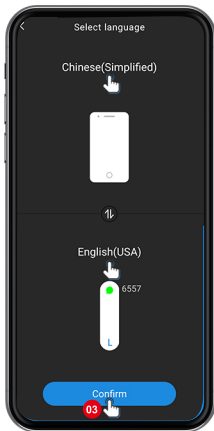





Group chat

1. Without the limitation of location, Group Chat function supports 40 people speaking 40 different languages at most in the same chat group remotely. Simply add people into the chat group, and the WT2 Edge will use voice-to-text translation for each participant.

Group chat



1. Click the main menu bar of the phone screen to select Group chat.
2. Click [Create Group], [Copy] Group Code, and [Enter Room], then to set the language you need

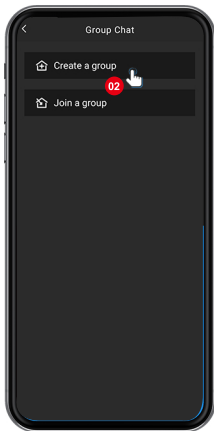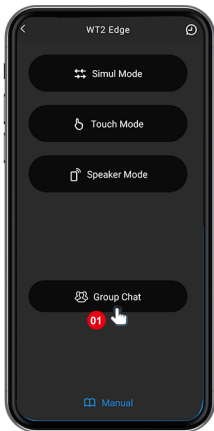

Group chat


3.[Copy] Group Code, and [Enter Room].

4.Then to set the language you need

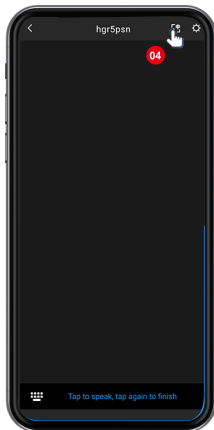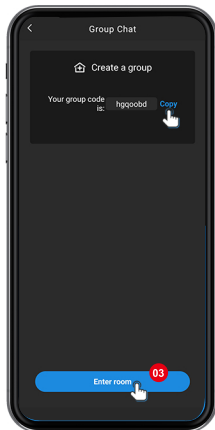


Group chat

1. In Group chat, if you wear an earbud, touch the earbud once to start speaking, again after you've finished. Then you will see your speaking words in your phone screen. Click the sound icon which is close to your partner's speaking words in APP, you will hear translation result.

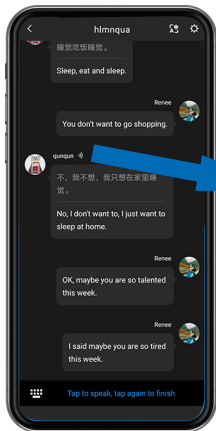

Group chat

2.If you don't wear an earbud, you need to tap the screen to start speaking, again after you've finished.And the APP will provide translated texts without a voice translation.

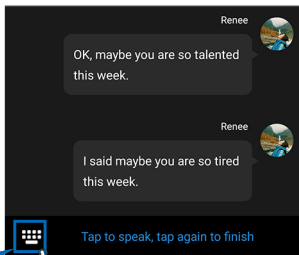

Group chat

3. No matter if you wear an earbud, in Group chat you can click keyboard at the bottom of APP to enter words.

