


Quick start guide

CL82107/CL82207/CL82257/CL82267/ CL82307/CL82357/CL82367/CL82407/ CL82467/CL82507/CL82547/CL82557

DECT 6.0 cordless telephone/ answering system with caller ID/ call waiting

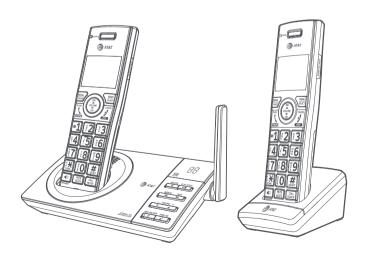

Congratulations

on your purchase of this AT&T product. Before using this AT&T product, please read the **Important safety information** section on pages 1-3 of this manual.

Both the model and serial numbers of your AT&T product can be found on the bottom of the telephone base. Save your sales receipt and original packaging in case it is necessary to return your telephone for warranty service.

For customer service, please visit our website at **https://telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.



Please refer to the online CL82107/CL82207/CL82257/CL82267/CL82307/CL82357/CL82367/CL82407/CL82467/CL82507/CL82547/CL82557 DECT 6.0 cordless telephone/answering system with caller ID/call waiting Complete user's manual for a full set of installation and operation instructions at https://telephones.att.com/manuals.

Parts checklist

Your telephone package contains the following items.



Quick start guide



Smart call blocker



Telephone base



Power adapter for telephone base



Cordless handset



Battery for cordless handset



Battery compartment



Telephone line cord



Wall-mount bracket

(1 for CL82107)

(2 for CL82207/CL82257/CL82267) (3 for CL82307/CL82357/CL82367)

(4 for CL82407/CL82467)

(5 for CL82507/CL82547/CL82557)



Charger for cordless handset with power adapter installed (1 for CL82207/CL82257/CL82267)

(1 for CL82207/CL82257/CL82267) (2 for CL82307/CL82357/CL82367)

(3 for CL82407/CL82467)

(4 for CL82507/CL82547/CL82557)

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions Ê» Á ÈÆ¼Á° Ç»¼Æ ÃŷȶÇ Ç Å,ȶ, Ç», żÆ¾ Æ

Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. In an inadequately ventilated environment, the user should not plug the phone into a power outlet, nor put a charged » ´Á·Æ¸Ç ¼ÁÇÂÇ», ¶ÅĆ·¿¸Ê»¸Å¸Ç»¸Å, ´Å, ¶ÂÁ¶,ÁÇÅĆ supporting gases. š ÆÃ´Á¾¼ÁÆÈ¶» ´Á ÁɼÂÂÁÀÂÁǶÂÈ¿·Ĝ¬È¶»¸ÁɼÂÂÁÀÂÁÇÆÀ¾Ø°»Ç¼Á¶¿È·¸À¸¼¶´¿ÈƸ¹Â ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- ÁÂÇ ÈÆ, Ç»¼Æ ÃŷȶÇ Á, ŠʴǸЊʰ, Á ÌÂÈ ÉÆ, ¼Ç¼Á ´Ê¸Ç μ´Æ¸À¸ÁÇ ÂÅ Æ»ÂʸÅ ÁŠŸËÇ Ç kitchen sink and laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquid, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- Replace batteries, only as described in your user's manual (Page 5). Do not burn or puncture batteries — they contain caustic chemicals.
- » ¼ Æ Ã Â Ê¸ Å ´·´Ã Ǹ Å ¼ Æ ¼ Á Ǹ Á·¸. Ç μ¸ ¶ Å Ÿ¶ Ç¿Ì Â mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Important safety information



CAUTIONS

- Use only the power adapter provided with this product. To obtain a replacement, visit our website at https://telephones.att.com or call 1 (800) 222-3111. In Canada. dial 1 (866) 288-4268.
- Use only the supplied rechargeable battery or replacement battery (model BT183342/ BT283342). To order, visit our website at

https://telephones.att.com, or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.



CAUTION: $-\hat{A}$ \tilde{A} \hat{A} $\hat{$

Especially about cordless telephones

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet which is not controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged, ÆÊ¼Ç¶», ÂæÂ¼¹Ç», , , , , ¶Çż¶´¿ÃÂʸ¼Æ¼ÁQ
- Potential TV interference: Some cordless telephones operate at frequencies \Cap{C} » \Cap{C} \Cap{C}
- Rechargeable batteries: This product contains nickel-metal hydride rechargeable μ´ÇǸ¼¸Æ žË¸Å¶¼Æ¸¶´Å¸¼Á»´Á·¿¼Á°μ´ÇǸ¼¸Æ circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Important safety information



The RBRC Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickelmetal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. You may call 1-800-8-BATTERY® for locations accepting spent Ni-MH batteries.

The RBRC Seal and 1-800-8-BATTERY® are registered trademarks of Call2recycle, Inc.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients:

- ¬»ÂÈ¿·¾¸¸Ã'Ÿ¿¸ÆÆÇ¸¿¸Ã»ÂÁ¸Æ´Ç¿¸´ÆÇƼЁ½
 - Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is Æ Ì Á ¶ » Å Â Á ¼ Í , · Ê ¼ Ç » Ç » , Ç , į , Ã » Â Á , μ ´Æ ,


Especially about telephone answering systems

- Ê Â ^ Ê ´ Ì Å ,¶ Š· ¼ Á ° - » ¼ Æ È Á ¼ Ç · ¸Æ Á Ç Æ Â È Á · Ê ´ Å Á ½ party that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the conversation.

SAVE THESE INSTRUCTIONS



Telephone base

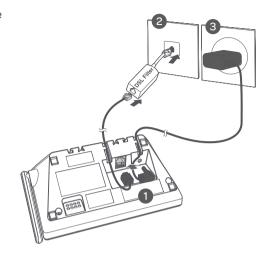




• ©¿Èº ÂÁ, Á·Â¹Ç», Ç,¿Ã»ÂÁ, ¼Á, ¶ÂÅ·¼ÁÇ ´Ç,

¢¹ ÌÂÈ »´É¸ •¬¥ »¼°»^ÆÃ¸¸ · ¢ÁǸÅÁ¸Ç ƸÅɼ¶¸ ´ •¬¹

Charger

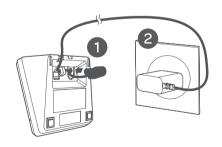

ϫÈǼÂÁ ®Æ¸ÂÁ¿ÌÇ»¸ÃÂʸÅ´∵ÃǸŋƌÃÅÅ ŸÃ¿´¶¸À¸ÁÇ É¼Æ¼ÇÂÈÅÊ,µÆ¼Ç,´Ç

https://telephones.att.com/r calfl (800) 222-311& Á œ ´ Á ´ · ´ · ¼ 1 (866) 288-4268