

RECHARGEABLE BLUETOOTH MOUSE FOR 3 DEVICES

User guide



USER GUIDE

Thank you for purchasing the Macally Bluetooth mouse. The mouse is a rechargeable Bluetooth wireless optical mouse with a 800/1200/1600 DPI switch button, two soft-click buttons and scroll wheel/button for a precise and smooth control. The ergonomic and ambidextrous design offers maximum comfort to both left-handed and right-handed users and helps to increase productivity. The 300mAh built-in rechargeable battery will power the mouse for up to 2 months before next charging is required.* No need to buy and replace batteries anymore! The Macally Bluetooth mouse works with Mac, PC, iOS/iPadOS and Android, and doesn't require any driver.

About this guide

Before you start using the Macally Bluetooth mouse, be sure to read this guide in its entirety.

Safety intructions


Please read the following carefully before using this product. Incorrect use of this product may result in reduced performance, permanent damage and void warrantly:

- 1. Do not place this product near a heat source.
- 2. Operating temperature of 0°C to 40°C. Storage temperature of -20°C to 65°C.
- 3. Do not place this product near moisture nor liquids.
- 4. Operate and store at humidity of 20% to 80% (non-condensing)
- 5. Do not place heavy objects on this product.
- 6. Do not drop this product.
- 7. Do not dispose this product in the garbage. Take it to your local recycling centre.

Package contents

- · Bluetooth mouse
- User guide

Hardware basics

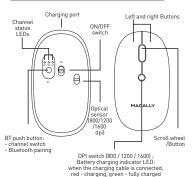

To a USB charger or computer USB port

Channel status LED Note: 1, quick flash - in pairing mode either the first time or BT button is pressed for 3 seconds; 2, slow flash - waiting to connect to the previously paired device; 3, off - connect to device and work normally, or time out in searching/connecting. When all 3 LEDs are off, press the BT button briefly to switch the channel.

Installation instructions

The Macally Bluetooth mouse only requires a computer or a mobile device with Bluetooth host. After following the steps below you are ready to go! You can set up and use one device in one channel, two or all three channels to use more devices. To switch between devices, just press the BT push button in the mouse, it is really quick and easy.

Bluetooth-pairing the mouse with Mac

- 1. To connect the mouse to your Mac computer by Bluetooth, bring it within 1 ft/25 cm range from your computer.
- 2. Then, turn on the mouse, press the BT push button
- briefly to select an unused channel B1, B2 or B3, then you will see its LED flashes quickly to indicate pairing mode.
- Click your Mac Bluetooth icon then Bluetooth Settings, ensure Bluetooth is turned on and searching Nearby Devices.
- 4. Macally Bluetooth x3 Mouse will appear, please select it and click on "Connect".
- 5. After the mouse is paired with the Mac computer. You are ready to use the mouse.

Bluetooth-pairing the mouse with Windows PC

- 1. To connect the mouse to your computer by Bluetooth, bring it within 1 ft/25 cm range from your computer.
- 2. In your Windows Settings, go to 'Devices and Printers' and select 'Bluetooth Devices'. Make sure Bluetooth is On
- 3. Then, turn on the mouse, press the BT push button
- briefly to select an unused channel B1, B2 or B3, then you will see its LED flashes quickly to indicate pairing mode.
- 4. Click 'Add a device' at the top left corner.
- 5. Macally Bluetooth x3 Mouse will appear, please select it and press 'Next'.

Bluetooth-pairing the mouse with iPad and iPhone

- 1. To connect the Bluetooth mouse to your iPad or iPhone, bring them together within 1ft range.
- 2. Then turn on the mouse, press the BT push button
- briefly to select an unused channel B1, B2 or B3, then you will see its LED flashes quickly to indicate pairing mode.
- 3. In your iPad or iPhone, go to Settings, select
 Accessibility, tap on Touch, set AssistiveTouch to on;
 In AssistiveTouch menu, tap Devices under
 POINTER DEVICES, tap on Bluetooth Devices, it
 starts searching a new Bluetooth mouse.

 4. Once Plustooth mouse is discovered select it.
- 4. Once Bluetooth mouse is discovered, select it from the list, iPad or iPhone will prompt to request

5. Once Bluetooth mouse appears as "Connected", you are ready to go. A circular pointer cursor will appear on your iPad or iPhone screen, you can move the circular cursor on the screen, do left and right click, and scroll pages with scroll wheel, everything just like what you normally do with a regular mouse.

Bluetooth-pairing the mouse with Android device

- 1. To connect the Bluetooth mouse to your Android device, bring them together within 1ft range.
- Then turn on the mouse, press the BT push button briefly to select an unused channel B1, B2 or B3, then you will see its LED flashes quickly to indicate pairing mode.
- In your Android device, go to Settings, select Connected devices, make sure Bluetooth is on, tap to open Bluetooth, tap on Pair new devices, and tap to select the discovered Bluetooth mouse to pair.
- 4. Once the Bluetooth mouse appears Connected in the list, you are ready to use the mouse.

The standard button functions are as follows:

- Left button: Set as left click, single and double clicks
- · Right button: Set as right click or menu button
- Scroll wheel: Scroll speed is set as medium
- DPI button: Press the DPI button to change the sensor resolution (800/1200/1600 DPI) and set the tracking speed and precision to your preference.

Important notes

- Macally Bluetooth Mouse will go to sleep mode if it is not in use (or inactive) for 2 hours. When it is disconnected from the device, you can click on the mouse button to wake it up and reconnect it to the device.
- Battery life may vary depending on user and computing conditions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Technical support

In USA, please call to +1 909 230 6888. or email to techsupport@macally.com.. Technical support hours in USA, Canada and South America are from 8:30 AM to 5:30 PM (PT), from Mondayto Friday.

Warrantv

Macally warrants that this product will be free from defects in title, materials and manufacturing workmanship for one year in North America from the date of the purchase. If the product is found to be defective then, as your sole remedy and as the manufacturer's only obligation, Macally will repair or replace the product. This warranty is exclusive and is limited to the Macally mouse. This warranty shall not apply to products that have been subjected to abuse abnormal electrical or environmental conditions, or any condition other than what can be considered normal use. The liability of Macally arisina from this warranty and sale shall be limited to a refund of the purchase price. In no event shall Macally be liable for costs of procurement of substitute products or services, or for any lost profits, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arisina from this warranty and sale. These limitations shall apply notwithstanding any failure of essential purpose of any limited remedy.