



White Noise Eye Mask

DCEEMB1

► User Guide


Specifications

Input	5V/1A (USB)
Charging Port	USB-C port
Battery Capacity	250mAh
Charging Time	90 minutes
Battery Life	About 1 week (1 hour of use per day)
Product Size	11.81*3.62 inch / 30*9.2 cm

Package Includes

- 1 x Eye Mask
- 1 x Charging Cord
- 1 x Storage Bag
- 1 x User Manual

Function Description

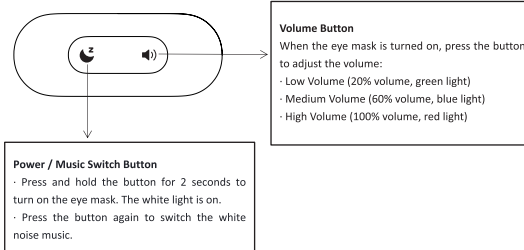

- The eye mask will automatically turn off after 60 minutes without further operation. Restarting it will default to the last used mode.
- During charging, the power button will flash. When fully charged, the light is on.

Operation Voice Prompts

Start-up voice prompt	"Welcome to use"
Battery level voice prompt	"100% battery / 75% battery / 50% battery / 25% battery"
Low battery voice prompt (lower than 25%)	"Low battery. Please charge it in time"
Volume voice prompt	"Low volume / Medium volume / High volume"
Voice prompt when pressing any button during charging	"Charging, temporarily unavailable"

Precautions

1. Washing is not recommended. Wipe and clean the surface of the eye mask with wet wipes
2. The eye mask cannot be used during charging. Please use it after fully charging in the state of low battery.

Warranty

- Dr. Prepare products are covered by a 12-month limited warranty from the original purchase date. If any problems occur, please contact our support team.
- We only provide after-sales services for products that are sold by Dr. Prepare or retailers and distributors authorized by Dr. Prepare. If you have purchased your unit from other channels, please contact your seller for more information about return and warranty.

Customer Support

- If you have any questions or concerns, please send us an email at support@drprepare.com

UK REP

Name: Sea&Mew Accounting Ltd
Address: Electric Avenue Vision 25, London, Enfield EN3 7GD
Contact Person: Billy Han
Tel: +44 7399648608
E-mail: info@seamew.net

EC REP

Name: Sea&Mew Consulting GmbH
Address: Mittenhuber Straße 4, 92318 Neumarkt
Contact Person: Yuan Li
Tel: +49 15224685061
E-mail: Compliance.EU@outlook.com

Manufacturer/Importer: Dr Prepare Global Limited
Address: HK, 999077, HONGKONG, CANTON RD TST KLN, RM 803 LIPPO SUN PLAZA 28
Contact Person: Michelle Guo
Tel: +86 152 6258 8612

