



INSTALLING THE UPLC CARRIER TO THE RX ADAPTOR*

Press the
Rx carrier center
slot onto the
Rx Adaptor post.

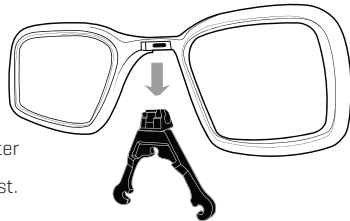

INSTALLING THE TWIST LOCK CARRIER TO THE RX ADAPTOR*

Press down
and twist
towards
nose piece.

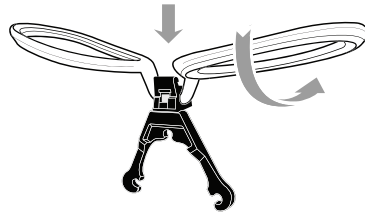

**Not all Goggles are
compatible with RX Carriers.
Please verify that your RX
carrier is compatible with
your Wiley X goggles.**

MAINTENANCE: Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow below instructions to prolong the life of your lenses and keep them performing at their best:

- Clean lenses with water only.
- Do not use solvents or special cleaners.
- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

WARNING: Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection (and void your warranty). Dirty and/or wet eyewear can impair vision and reduce safety (resulting in personal injury and/or property damage). Keep your Wiley X eyewear clean as indicated above. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.



WILEY X INC: 1.800.776.7842 // 925.243.9810 // WILEYX.COM
7800 PATTERSON PASS ROAD, LIVERMORE CA 94550 USA
WILEY X EUROPE LLC: +45 96 93 00 45 // WILEYX.EU
SØNDERGADE 8-10 7570 VEMB DENMARK

COPYRIGHT © 2022 WILEY X, INC. ALL RIGHTS RESERVED.

WILEY X, WX, BLACK OPS, logos, tag lines and product names are trademarks or registered trademarks (marcas registradas) of Wiley X, Inc. in the U.S. and other countries. Logos © 2007-2022 Wiley X, Inc. All rights reserved.




GOGGLE STYLE INSTRUCTIONS

ERX-ICGOGGLE




REMOVING GOGGLE LENS

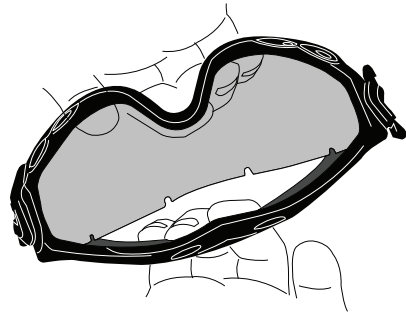


Separate the frame from the top of the lens. Grab exposed lens and pull the lens from the goggle frame.

INSERTING GOGGLE LENS

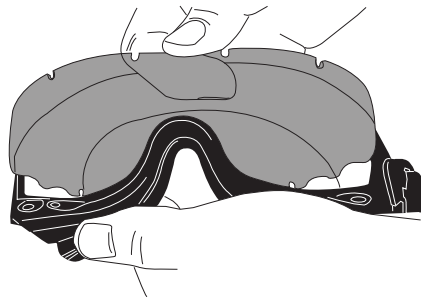


First seat the lens into the frame at nose piece, then seat the outer edges. Finish by seating the top of the lens fully into the goggle frame.

GOGGLE GASKET

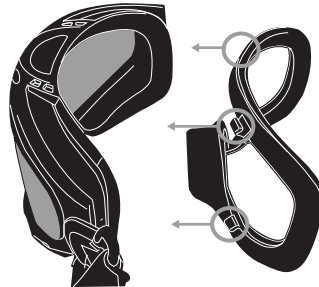


The included removable / replaceable comfort gasket is secured by four hooks, 3 of which are indicated in the graphic above. Utilization of the gasket is especially recommended for individuals requiring corrective [Rx] lenses.

REMOVE / ATTACH GOGGLE STRAP

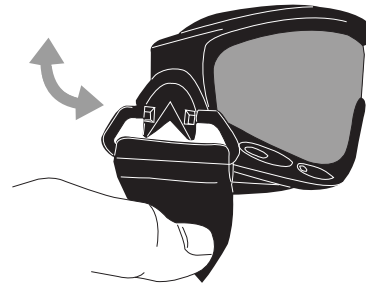

Remove or attach the goggle strap by positioning the strap perpendicular to the frame as pictured above.

ATTACHING THE RX ADAPTOR

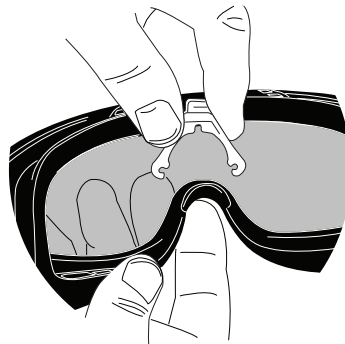

The Rx Adaptor post is pressed into the goggle frame as shown.