


Bone Conduction Headphones User Manual - English



1

Product Structure:

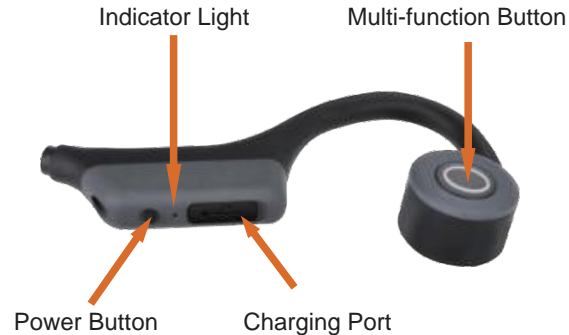

1. How to Use?

The following functions can be only operated on the **Right Multi-function Button** of headphones, please note.

1.1 Power On/Off

Long press "Power Button" for about 2-3 seconds.
(Prompt sounds "Power On"/ "Power Off").

Headphones will be turned off automatically when there is no device pairing/ connection or the battery was running out.

1.2 Play/Pause

Click the multi-function button.

2

1.3 Volume

- Increase the Volume: Click the power button.
- Decrease the Volume: Double-Click the power button.

1.4 Switch the Songs

- Previous Song: Double-click multi-function button.
- Next Song: Click the multi-function button for 3 times.

1.5 Turn ON Voice Assistant

Long press the multi-function button for 3 seconds.

Note: It requires mobile phone to support and open the voice assistant function.

1.6 Answer/End Calls

Click the multi-function button.

1.7 Reject the Incoming Call

Long press the multi-function button for 2 seconds to reject the incoming call.

1.8 Cancel the Calling

Click the multi-function button to cancel the outbound call.

1.9 Answer the Second Call and End the Current Call:

When there is a new call coming, double-click the multi-function button to end the last call and answer the second call.

3

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure conditions without restriction

2. How to Wear?



Hang the headphones behind your head with both speakers clinging to your cheekbones, and adjust it until you feeling comfortable.

3. How to Connect?

1. Turn on your phone's bluetooth and turn on the headphones
2. Search for "BS01" on the bluetooth settings of your device and click to complete the connection.

After the first connection, the headset can be automatically connected back to the last paired device (Bluetooth needs to be turned on).

4. How to Charge?



Plug in the charging cable to charge the headphones.

4

5. Headphones Indicator Status:

- Battery Enough: Blue indicator light
- Full Charge: The blue indicator keeping on
- Low Battery: Red indicator light
- Low Battery: Prompt sounds "Ding" alarm once every 120 seconds until power off.

6. Product Specifications:

Product:	Bone Conduction Headphones
Model:	BS01
Product Size:	124*93*41mm
Input Battery:	5V==165mAh
Charging Time:	About 2 hours
Working Hour:	5-7 Hours
Standby time:	10 Days / 240 Hours
Connect Type:	Bluetooth 5.0
Wireless Bluetooth Range:	10 Meter / 33 FT
Waterproof:	IP55

7. Attention:

1. Different wearing positions will affect the volume, please adjust to a position that makes you comfortable.
2. We recommend you use a medium volume instead of a louder one for a more comfortable experience.
3. No matter how loud the volume is, please do not let it prevent you from hearing the surrounding sounds. Please take care of safety when using the headphones.
4. Do not throw it in the water or press the headphones vigorously.
5. The headphones should keep away from fire, water and high voltage device.
6. It is not suit for children using as it contains small parts.

5

7. Please do not charge it for a long time, it may damage the battery.
8. Multi-function button can only be operated on the right headphones.

8. Multifunction Button:

Simple and convenient operation. Only one button easy controls to play, pause, skip, activate voice assistant, and answer calls.



6