# Treatlife ProSight PS10 Camera Setup Guide

## Download the Treatlife App


 Scan the QR code provided on the package or in the manual, or search for 'TreatLife' in the Apple App Store or Google Play Store to download the app.




## Create an Account or Sign In

- Open the Treatlife app.
- Sign in if you already have an account, or create a new one.



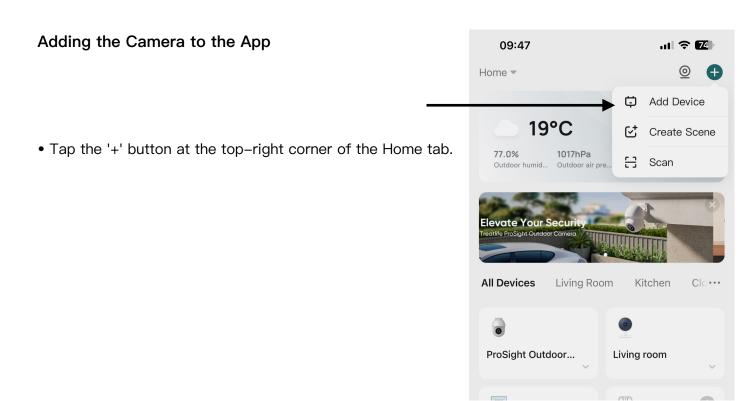

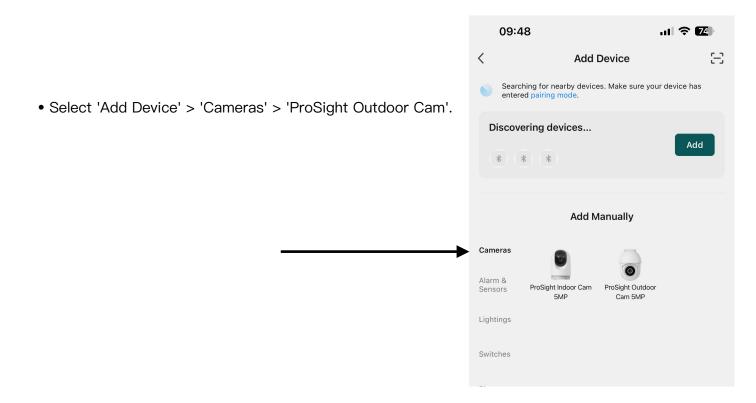


#### Power On the Device

- Connect the camera to its power source.
- Then click 'Next'

#### Reset the Camera


- Press and hold the 'RESET' button until you hear the "ready to connect" prompt.
- Then click "I heard Ready to connect" and "Next"

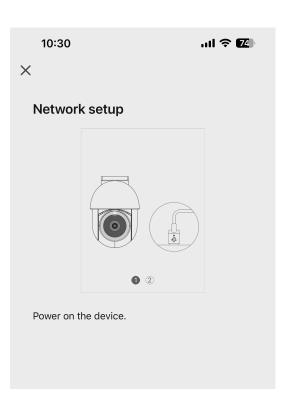



### Wi-Fi Setup

• Enter your Wi-Fi details and "Next" to generate a QR code.

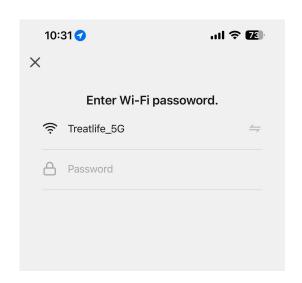



#### Scan QR Code with Treatlife Camera

• Carefully remove the protective film from the camera lens.

 Use your Treatlife camera to scan the QR code displayed on your phone's screen, maintaining a 15–20 cm distance.



• Await a confirmation prompt, and click "I heard a prompt" to complete the setup.

