

Industrial Endoscope

DE100
User Manual




1. Product Button Description




	Power Button Hold this button for 2s to power on/off the endoscope
	Click to rotate the image 180°
	Click to dim the Camera LED Lightness.
	Click to brighten the Camera LED Lightness
	Click to Zoom out
	Click to Zoom in
	Click to adjust to black and white mode. Hold this button for 2s to mirror image.
	Red Indicator on: Charging Status Red indicator off: Charging finished Blue Indicator on: Working Status


2. Charging and Reset



Short click the reset button with a pin to shut down the device.
Charge the endoscope via Type-C Cable to the DC 5V adapter

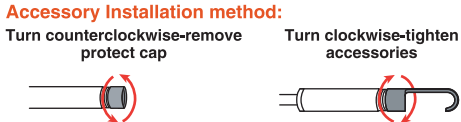

3. UI Introduction

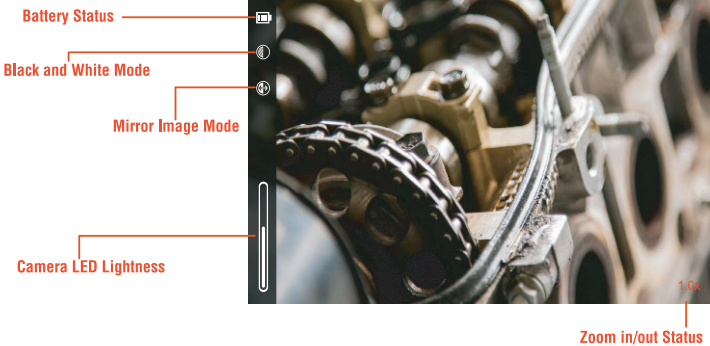

4. FAQ

- 1.The product does not output a picture and the screen turns blue
Adjust the flexible conduit joint, or restart the device.
- 2.Lags happened during the photo outputting of the product
Please check whether the product has sufficient power or restart the device.
- 3.Product crash
Please press the reset button with a pin on the side of the device to power off the device, and then press the power button to turn it on.
- 4.Imaging screen is not clear
The best imaging focal length of the product is: 4cm-10cm,please calibrate the distance to the object, or clean the front of the camera with a clean alcohol cloth.
- 5.Product charging
Please use 5V--2A charger to charge the device.The product does not support fast charging
- 6.The camera is heat
It is normal for the camera to heat up, especially when the camera LED light is on at the highest brightness.But it does not affect normal use or service life.

Operating and Storage Environments

- The device should be operated at an ambient temperature of 32~113 ℉ (0~45 ℃).
- The device should be stored in a dry, clean, oil-free and waterless place without any chemical liquid.

Contact us for help

eyatech1@gmail.com

