


MARINE TEST LAB

high quality test kits

Instruction Manual • Mode d'Emploi • Gebrauchsanweisung • Gebruiksaanwijzing

KH test

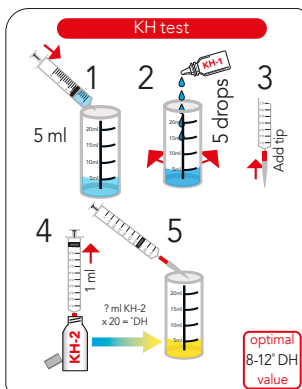

1. Add 5 ml of water to the test tube.

2. Add 5 drops of KH-1.


3. Add tip of KH-2.

4. Add 1 ml of KH-2.

5. Add 2 ml KH-2 x 20 = "DH".

optimal 8-12° DH value

Calcium test

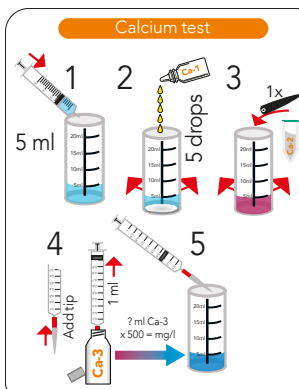

1. Add 5 ml of water to the test tube.

2. Add 5 drops of Ca-1.


3. Add 1x of Ca-2.

4. Add tip of Ca-3.

5. Add 1 ml of Ca-3.

2 ml Ca-3 x 500 = mg/l

Magnesium test

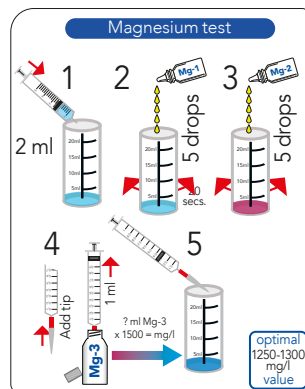

1. Add 2 ml of water to the test tube.

2. Add 5 drops of Mg-1.

3. Add 5 drops of Mg-2.


4. Add tip of Mg-3.

5. Add 1 ml of Mg-3.

2 ml Mg-3 x 1500 = mg/l

optimal 1250-1300 mg/l value

Nitrate test • range 0 - 4 mg/l

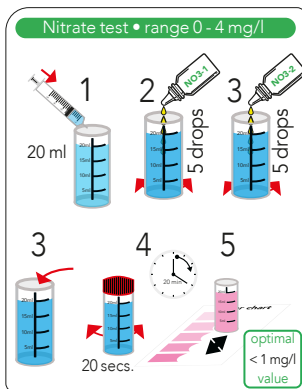

1. Add 20 ml of water to the test tube.

2. Add 5 drops of NO3-1.


3. Add 5 drops of NO3-2.

4. Wait 20 secs.

5. Compare color with chart.

optimal < 1 mg/l value

Phosphate test • range 0 - 0,8 mg/l

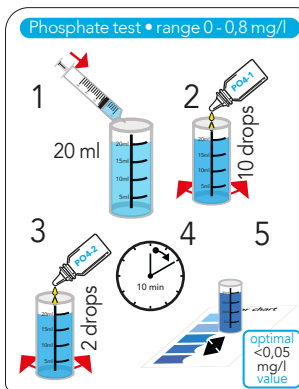

1. Add 20 ml of water to the test tube.

2. Add 10 drops of PO4-1.

3. Add 2 drops of PO4-2.

4. Wait 10 min.

5. Compare color with chart.

optimal < 0,05 mg/l value



Keep
out of reach
of children

