

marta MT-SC3600 Electronic Scales with Built In Thermometer User Manual

[Home](#) » [MARTA](#) » marta MT-SC3600 Electronic Scales with Built In Thermometer User Manual 

Contents

- [1 marta MT-SC3600 Electronic Scales with Built In Thermometer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Parts list](#)
- [5 IMPORTANT SAFEGUARDS](#)
- [6 BEFORE FIRST USE](#)
- [7 USING THE DEVICE](#)
- [8 CLEANING AND MAINTENANCE](#)
- [9 SPECIFICATION](#)
- [10 WARRANTY](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

marta

marta MT-SC3600 Electronic Scales with Built In Thermometer



Product Information

The product is an electronic scale with the model number MT-SC3600. It is manufactured by Cosmos Far View International Limited, located at Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China. The scale is made in China.

Specifications:

- **Measuring Range:** 5-180 kg
- **Graduation:** 50g
- **Net Weight / Gross Weight:** 1 kg / 1.04 kg
- **Package Size (L x W x H):** 265 mm x 265 mm x 37 mm

Important Safeguards:


Before using the device, please read the user manual and follow the safety instructions provided.

Product Usage Instructions

1. Before first use, make sure to read the user manual and follow the safety instructions.
2. Place the scale on a flat and stable surface.
3. Step on the scale with bare feet.
4. The LED display will show your weight measurement.
5. To turn off the scale, simply step off it. The scale will automatically shut down after a few seconds of inactivity.
6. For accurate measurements, ensure that the scale is clean and free from any debris or moisture.
7. To clean the scale, use a soft cloth dampened with water or a mild cleaning solution. Do not immerse the scale in water.
8. Store the scale in a dry and safe place when not in use.

If you encounter any issues or have further questions, please refer to the user manual or contact Cosmos Far View International Limited at the provided contact information.

Parts list

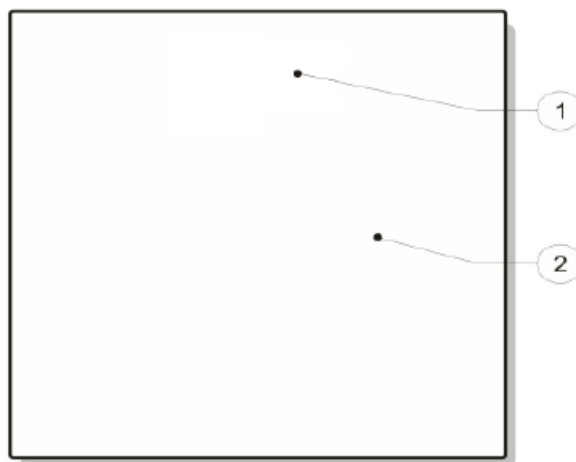

1. LED Display
2. Weighting zone

GBR Real set of the appliance could be different from listed in the User manual. Check once buy.

IMPORTANT SAFEGUARDS

Read this manual carefully before using the appliance and save it for future reference

- Use only for domestic purposes according to the instruction manual. It is not intended for industrial use
- For indoor use only
- Never attempt to disassemble and repair the item by yourself. If you encounter problems, please contact the nearest customer service center
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- During storage, make sure there are no objects on the scales
- Do not lubricate the internal mechanisms of the scales
- Keep the scales in a dry place
- Do not overload the scales
- Carefully put products on the scales, don't hit the surface
- Protect the scales against direct sunlight, high temperatures, humidity and dust

BEFORE FIRST USE

- Please unpack your appliance. Remove all packing materials
- Wipe the surface with a damp cloth and detergent

USING THE DEVICE

START WORK

- Use two batteries of 1,5 V AAA type (included)
- Set measurement unit kg or lb.
- Place the scales on a flat, stable surface (avoid carpet and soft surface)

WEIGHING

- To turn on the scales carefully step on it, wait a few seconds until the display shows your weight.
- During weighing stand still so weight is fixed correctly

AUTO SWITCH-OFF

- Scales automatically switches off after 10 seconds downtime

INDICATORS

- «oL» – overload indicator. Max capacity is 180 kg. Do not overload the scales to avoid its breakage.
- «Lo» – battery charge indicator.
- «16°» – room temperature indicator

BATTERY LIFE

- Always use the recommended battery type.
- Before using the device, make sure that the battery compartment is tightly closed.
- Insert new batteries, observing polarity.
- Remove the battery from the scales, if they are not used for a long time.

CLEANING AND MAINTENANCE

- Use a damp cloth for cleaning. Do not immerse in water
- Do not use abrasive cleaning agents, organic solvents and corrosive liquids

SPECIFICATION

Measuring range	Graduation	Net weight / Gross weight	Package size (L x W x H)	Producer:
5-180 kg	50g	1 kg / 1,04 kg	265 mm x 265 mm x 37 mm	Cosmos Far View International Limited Room 701, 16 apt, Lane 165, Rainbow North Street , Ningbo, China Made in China

WARRANTY


WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)

Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month,

the 6th and 7th indicate the year of device production.

Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.

Documents / Resources

	marta MT-SC3600 Electronic Scales with Built In Thermometer [pdf] User Manual MT-SC3600 Electronic Scales with Built In Thermometer, MT-SC3600, Electronic Scales with Built In Thermometer, Scales with Built In Thermometer, with Built In Thermometer, Built In Thermometer
---	---

References

-  [Multimarta - интернет-магазин бытовой техники MARTA](#)