

MBJ Imaging A6 Rails Clamp with Mounting Instructions

Home » MBJ Imaging » MBJ Imaging A6 Rails Clamp with Mounting Instructions




Contents


- 1 MBJ Imaging A6 Rails Clamp with Mounting
- 2 Filter holder Mounting with clamp rails
- 3 Documents / Resources



MBJ Imaging A6 Rails Clamp with Mounting

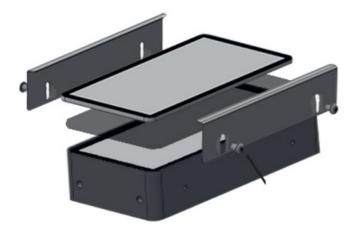

Filter holder Mounting with clamp rails

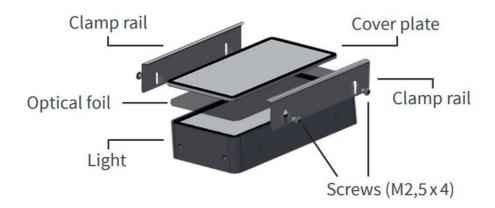


- 1. Protective Foils are marked with a sticker. Please handle foils and cover plates with care avoid scratches and touching of the surface. We suggest to wear gloves.
- 2. Attach one clamp rail loosely with screws.
- 3. Insert optical foil. (If more than 1 foil is used please refer to the schematic overview to the right)
- 4. Insert cover plate.
- 5. Attach the second clamp rail.
- 6. Hand-tighten screws, lightly pressing down the clamp rails onto the cover plate.

Cover plate

- Polarizer
- Collimator
- Diffusor
- LED

Mounting with clamps

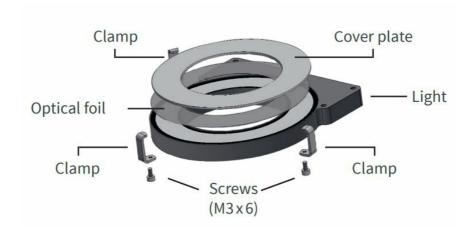

- 1. Protective Foils are marked with a sticker.
- 2. Please handle foils and cover plates with care avoid scratches and touching of the surface. We suggest to wear gloves.
- 3. Place filter on the luminous area of the lighting. (if more than 1 foil is used please refer to schematic overview to the right)
- 4. Place the cover plate on top.

- 5. Attach clamps with screws. The back of the lighting has small indentions indicating where thescrews need to be placed.
- 6. Tighten screws, hand tight only.

Documents / Resources



MBJ Imaging A6 Rails Clamp with Mounting [pdf] Instructions

A6 Rails Clamp with Mounting, A6, Rails Clamp with Mounting, Clamp with Mounting, Mounting

Manuals+,