



microtech Footswitch for MDS Windows APP Instruction Manual

[Home](#) » [microtech](#) » microtech Footswitch for MDS Windows APP Instruction Manual 

Contents

- [1 microtech Footswitch for MDS Windows APP](#)
- [2 Footswitch for MDS Windows APP](#)
- [3 FOOTSWITCH SETTING](#)
- [4 CONNECTION](#)
- [5 ENERGY SAVING MODE](#)
- [6 SPECIFICATION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



microtech Footswitch for MDS Windows APP



Footswitch for MDS Windows APP




FOOTSWITCH SETTING

1. Install the actual software for setting Footswitch from USB drive with MDS v.5.0
2. To setup Footswitch connection – connect Footswitch to PC using USB cables (from set) and run installed Foot


switch software

3. On “Custom Key” tab necessary to hold Ctrl+Enter keys at the same time.
4. Click “Save to key” to complete the setting.

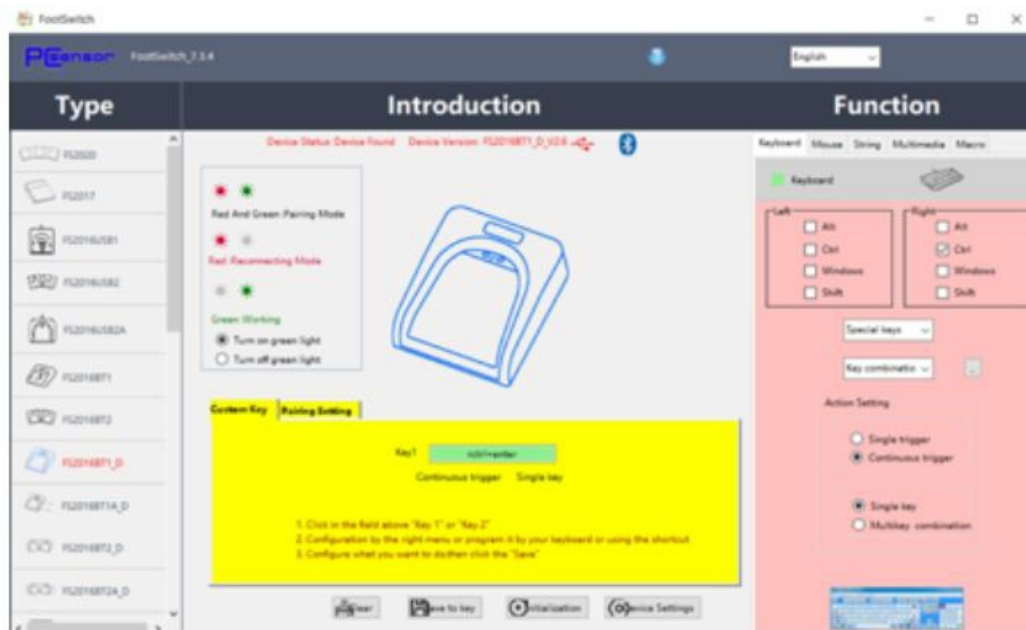

CONNECTION

1. It's possible to use USB or Wireless footswitch connection
2. To activate Wireless Footswitch connection – add new Bluetooth device in Windows system and pair.
3. Once connected it, it will be works for your device hands-free.
Note: Red Led: Reconnect status
Green Light: Working status
Red & Green :Pairing mode
4. Launch MDS App and save measurements values by bushing the Foot switch pedal

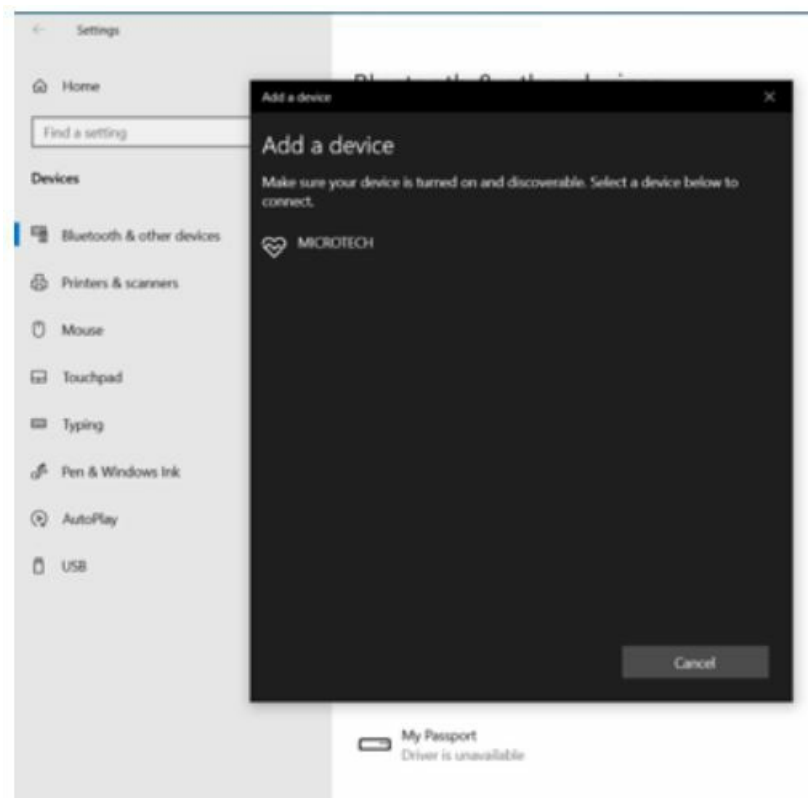

ENERGY SAVING MODE

1. Foot pedal switch will enter into sleep mode if there is no operation or disconnection for 10 minutes to save energy.
2. For activating your sleeping ,just press pedal to wake it up and reconnect automatically with the previously paired device.

SPECIFICATION

- **Single Pedal Size:** 5.55»x5.15»x1.38» / 141x131x35mm
- **Weight:** 8.46oz (240g)
- **Length of the USB cable:** 1.5M/4.9FT
- **Battery:** 2x AA batteries




MICROTECH

- innovative measuring instruments
- 61001, Kharkiv, Ukraine, str. Rustaveli, 39
- tel.: +38 (057) 739-03-50
- www.microtech.ua.
- tool@microtech.ua.

since 1995 www.microtech.ua ISO 17025 ISO 9001:2015.

Documents / Resources

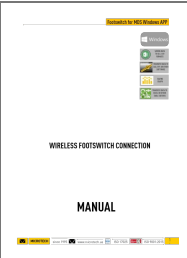	microtech Footswitch for MDS Windows APP [pdf] Instruction Manual Footswitch for MDS Windows APP, MDS Windows APP, Windows APP, APP
---	--

References

-  [Main page - MICROTECH - Innovative measuring instruments](#)