


Miele APFD 201 Complement

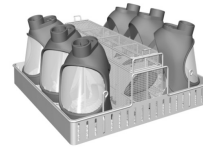

Miele APFD 201 Complement Instruction Manual


[Home](#) » [Miele](#) » Miele APFD 201 Complement Instruction Manual 

Contents

- [1 Miele APFD 201 Complement](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Operating instructions Insert](#)
- [5 Definition of terms](#)
- [6 Items supplied](#)
- [7 Warnings and safety notes](#)
- [8 Areas of application](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Miele APFD 201 Complement

Miele

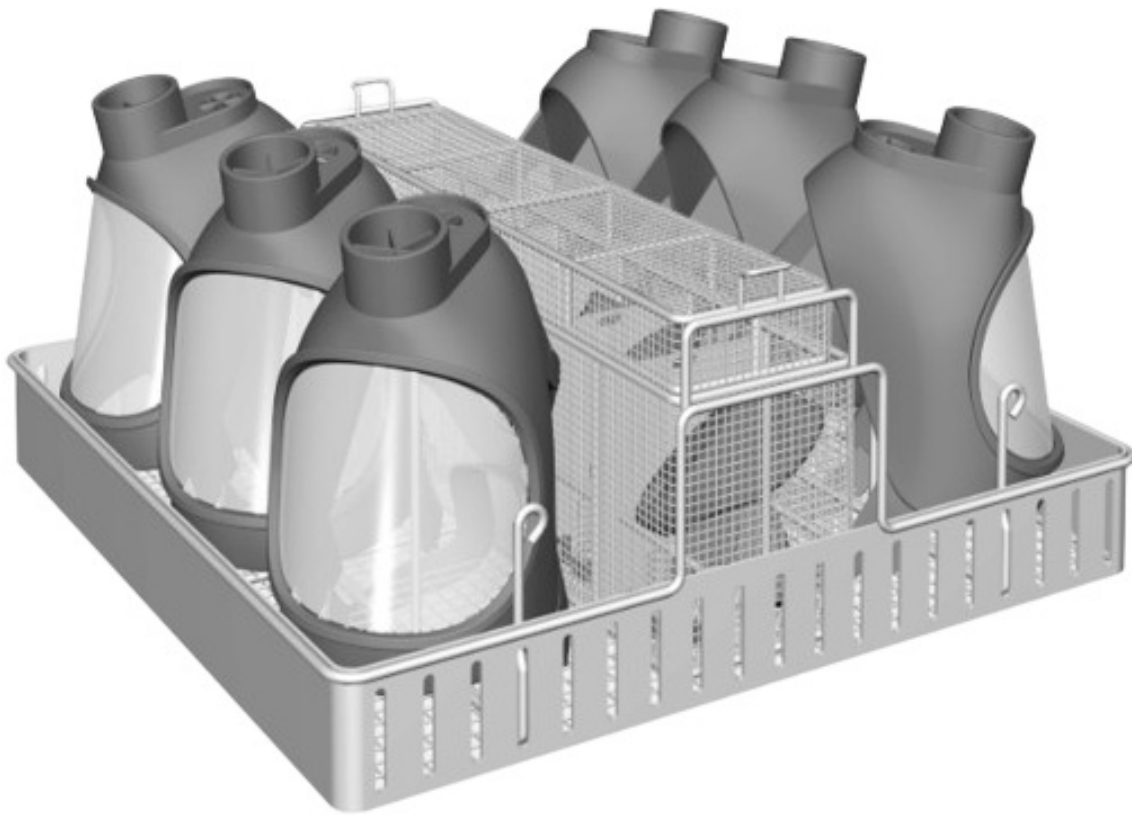

Product Information

Specifications

- **Model:** APFD 201
- **Dimensions:** 219mm x 470mm x 480mm
- **Includes:** 2 x Small parts tray, divided into three sections

Product Usage Instructions

Safety Instructions and Warnings

Read all warnings carefully to ensure safety during product use. Highlighted text indicates important information. Additional instructions and notes provide guidance on actions to take.

Preparing for Use

1. Pre-clean the respiratory mask before use.
2. Disassemble the mask following the manufacturer's guidelines.
3. Sort the respiratory masks into the small parts tray according to color codes.

Using the Product

1. Fill the tray with all necessary items.
2. Insert the tray into the designated module or compartment.
3. Remember the color-coding of the tray sections for easy identification during mask placement.

FAQ

- **Q: What should I do if I encounter technical issues?**

- **A:** Refer to the user manual's technical problem section for troubleshooting steps. If issues persist, contact customer support for assistance.

- **Q: How do I clean the product?**

- **A:** Use a damp cloth to wipe the product clean. Avoid using harsh chemicals that may damage the product's surface.

Operating instructions Insert

Notes about these instructions

Symbols and conventions used in this document

Warnings :

Warnings contain information that is important for safety. This alerts you to the potential danger of injury to people or damage to property.

Read these warning notes carefully and observe the procedural instructions and codes of practice they describe.

Notes: Notes provide information of particular importance that must be observed.

Additional information and comments: Additional information and comments are contained in a simple frame.

Operating steps: Operating steps are indicated by a black square bullet point.

Example

- Select an option using the arrow buttons and save your choice with OK.

Example:

- Select an option.

Display: Display text can be identified from the special font

Example: Save

Definition of terms

- **Cleaning machine:** In these operating instructions, the dishwasher or the washer-disinfector is referred to as "the machine".
- **Load items:** The term "load items" is used wherever the items to be processed are not defined in any further detail.
- **Wash water:** The term "wash water" is used for the mixture of water and process chemicals.

The APFD 201 insert can be used to reprocess machine-reprocessable breathing masks in a Miele dishwasher or a machine. Follow the operating instructions for your dishwasher or the machine as well as the instructions issued by the manufacturer of the breathing masks.


The APFD 201 insert can be used together with the A 151 lower basket.

Queries and technical problems

If you have any queries or technical problems that you would like to discuss please contact Miele. Contact details can be found at the back of the Operating Instructions for your washer-disinfector or go to www.miele-professional.com.

Items supplied

Load carriers

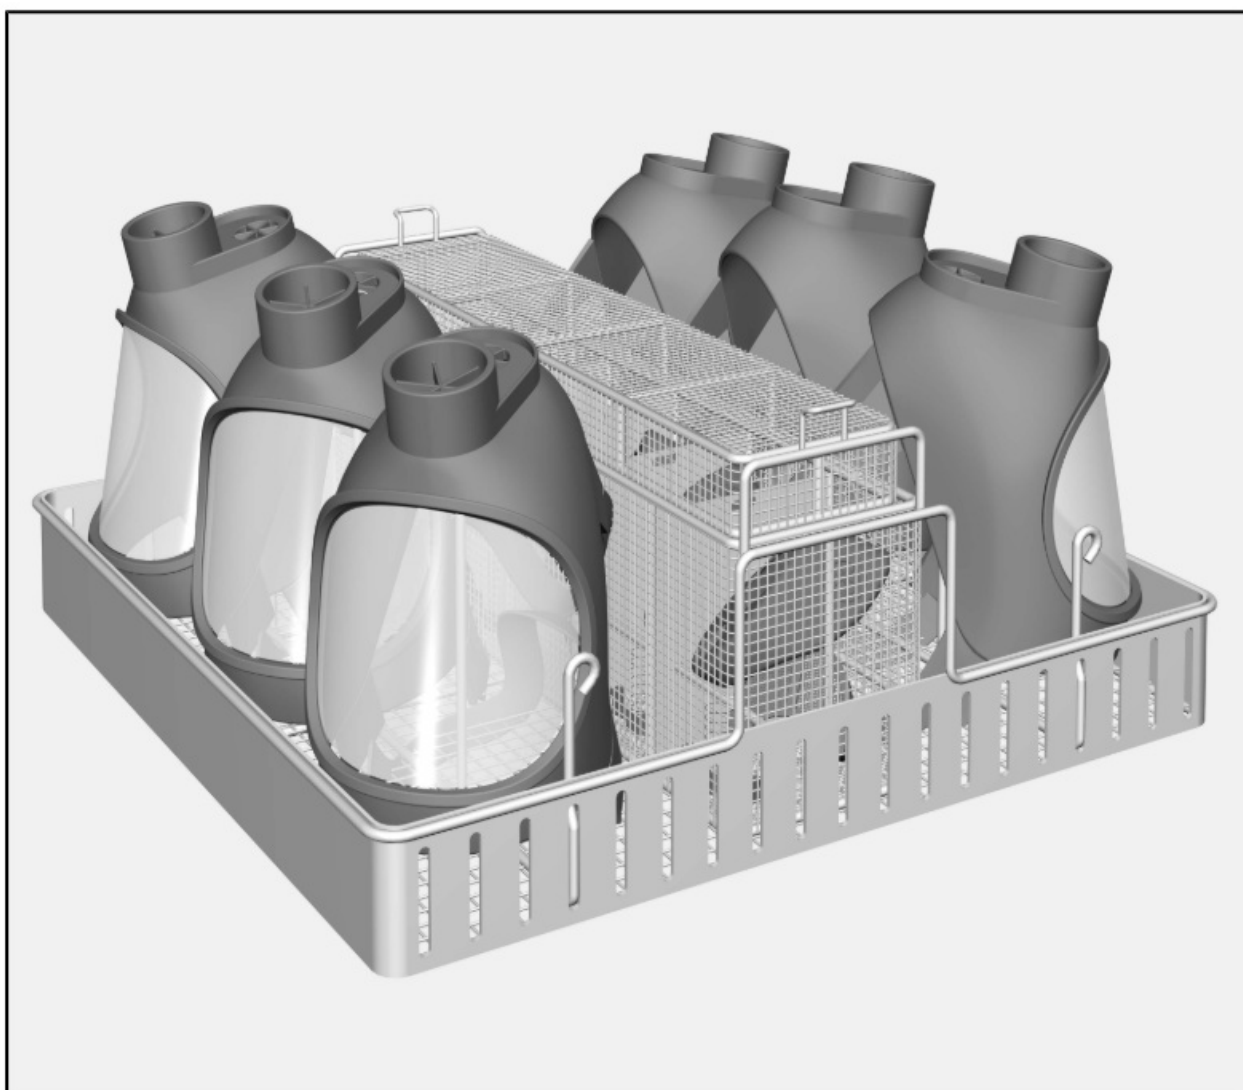

- APFD 201 insert, height 219 mm, width 470 mm, depth 480 mm

Items supplied – 2 x compartments for small parts, two-piece, divided into three parts

Disposal of the packing material:

The packaging is designed to protect against transportation damage. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

- **Optional accessories:** The following and other accessories are available to order from Miele:
 - APFD 202, 6 adapters for loading specially shaped air regulators, e.g. from Interspiro.

Warnings and safety notes

Read the operating instructions carefully before using this insert. Keep these operating instructions in a safe place.


Please also read the operating instructions for your washer disinfectant and pay particular attention to the Warning and Safety instructions.

- The inserts are only approved for use in the applications stated in the operating instructions. Applications that go beyond those listed and use of the inserts with additional components from the Miele range of components are described in the operating instructions of the components or are to be agreed with Miele. Conversions, modifications and any other use are not permitted.
- Prior to being used for the first time, new inserts must undergo thorough cleaning in the washer-disinfectant without loading items.
- Inspect all mobile units, baskets, modules and inserts as described in the "Maintenance" section of the operating instructions for your machine.
- Only items which have been declared by their manufacturer as suitable for machine reprocessing may be processed. The manufacturer's specific reprocessing instructions must be observed.
- Follow the warnings and instructions provided by the breathing apparatus manufacturer.
- Any seals on the load items should be protected against prolonged contact with wash water. Therefore, always close unused connections with protective caps or blind covers.
- The last rinse, as a minimum, must be carried out with DI water.
- Disposable items must not be reprocessed.

Areas of application

- **Color coding**

The small parts of a dismantled breathing mask are reprocessed in a compartment of the small basket. Color-code the compartments and the load item carriers to ensure that the small parts can be assigned to the right breathing mask after reprocessing. Colored tags (2 in each color) are provided with the inserts for this purpose.

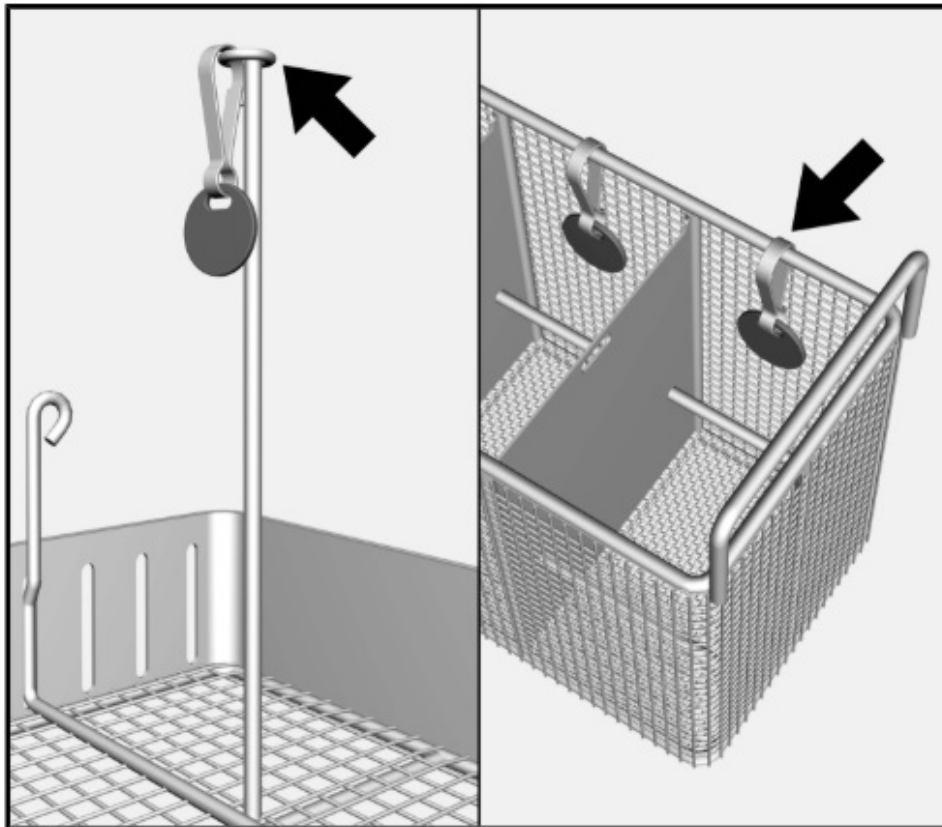


Preparing the load

- **Preparing the insert:** Place the insert on the worktop and ensure that it is securely positioned.
 - Lift the top insert out of the small-part basket.
 - Place the top insert next to the insert and open the lid. The insert holders and the adjacent compartments of the small-part basket must have the same color.
- **Pre-cleaning breathing masks:** Check whether the breathing mask requires manual pre-cleaning, e.g. to remove soot.
- Check whether the breathing mask requires manual pre-cleaning, e.g. to remove soot.
- If required, carry this pre-cleaning out in line with the manufacturer's instructions.

Areas of application


Dismantling the breathing mask: Dismantling the breathing mask in line with the manufacturer's instructions.

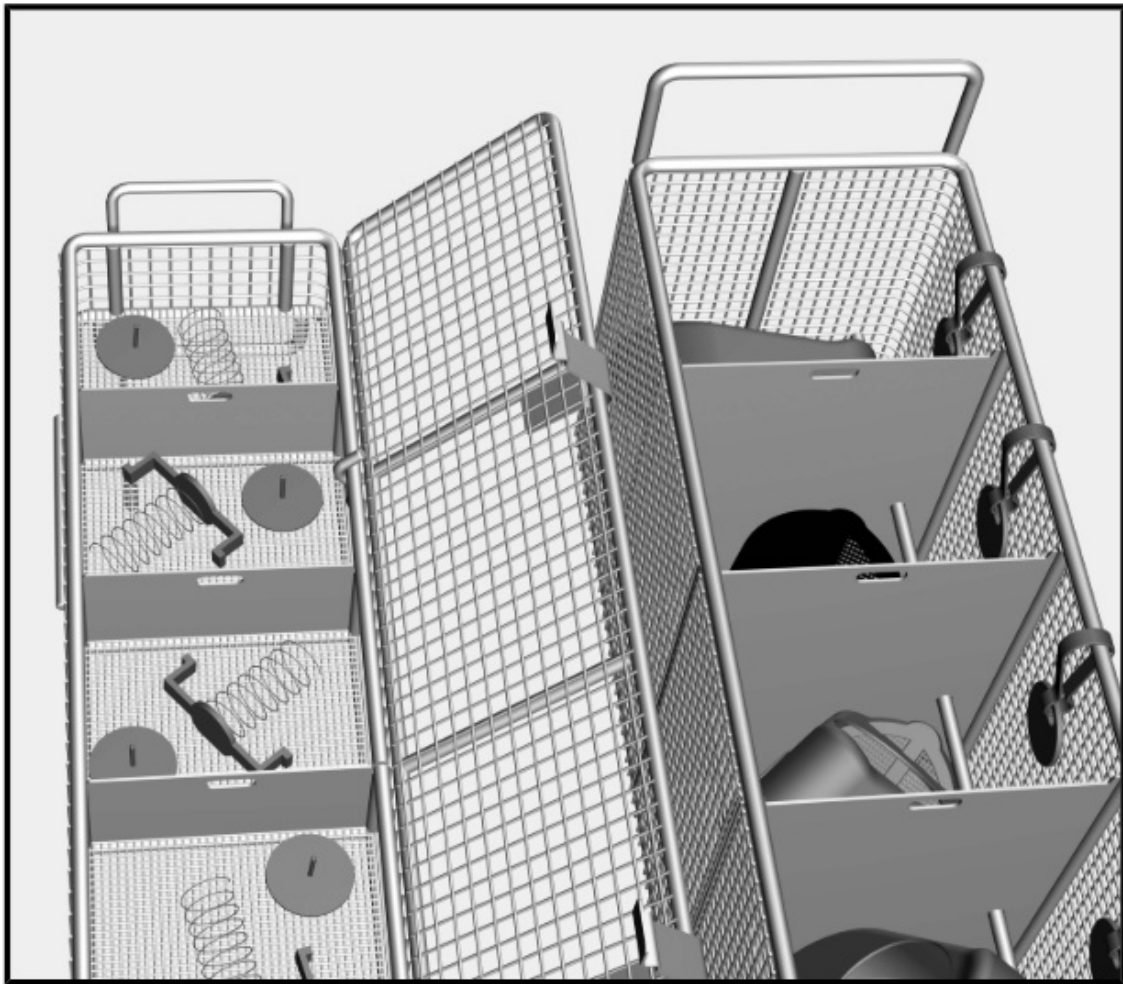

- Place the small parts in a compartment of the top insert of the small-part basket.
- Place the inner mask in the compartment in the small-part basket with the curved hollow side facing down.

Note the colour coding for the small-part basket compartment to place the breathing masks in the same color in the insert.

Arranging breathing masks:

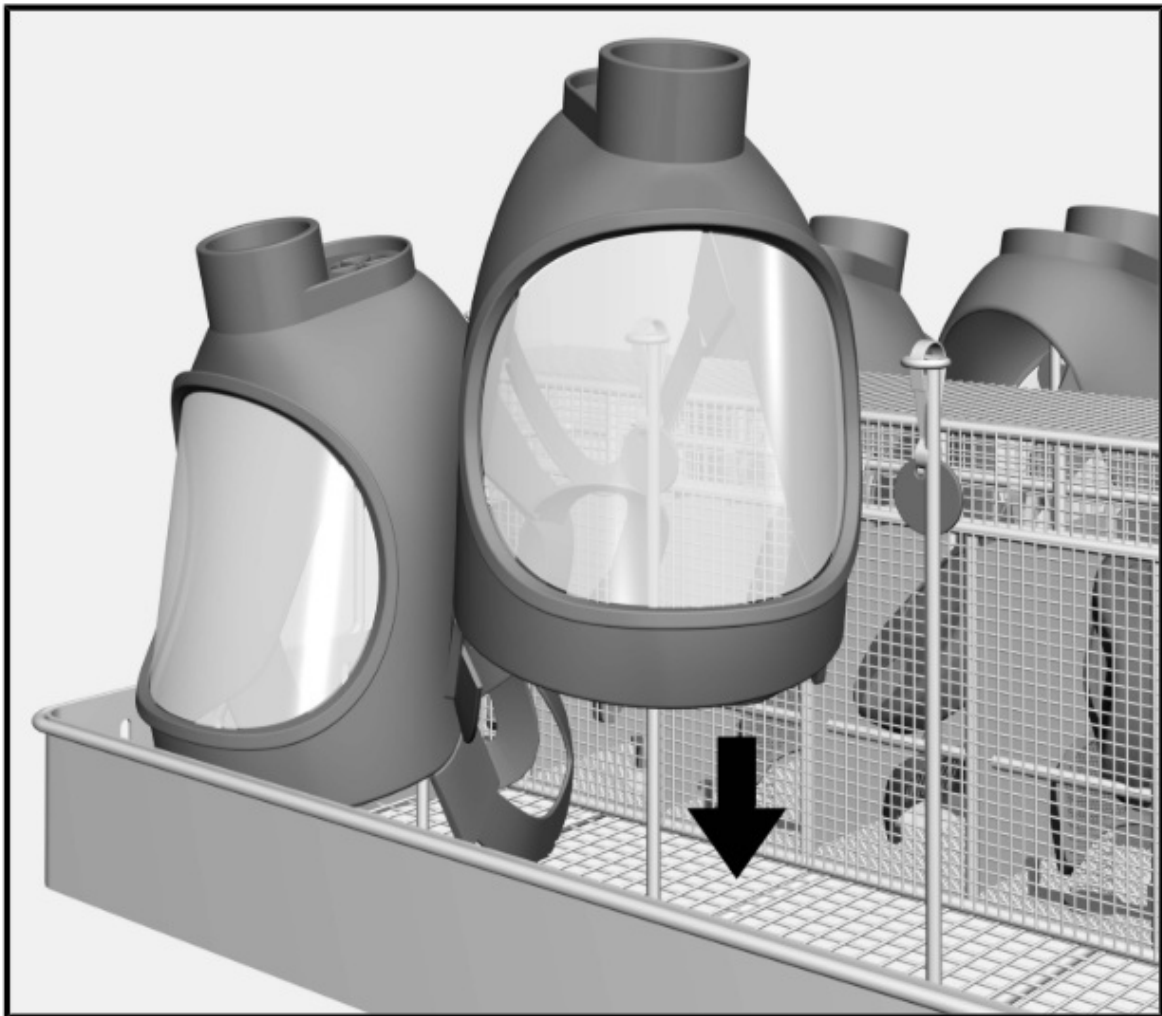

- Place the breathing masks on the holders on the APFD 201 insert.
- Ensure that the colour coding for the holder corresponds to that for the compartment in the small-part basket.
- Arrange the masks in such a way that as little wash water as possible can collect in curved hollow areas. Risk of damage to visors.
- Touching visor panels can become scratched during the loading and unloading process.
- Arrange the masks in such a way that the visor panels do not touch.

Completely loading the insert:

- Equip the remaining positions of the insert in the same way.
- Close the lid on the top insert of the small-part basket.
- Place the top insert on the small-part basket.

Placing the insert in the load carrier

- Lift the insert at the side handles.
- Place the insert in the load carrier of the machine.

After reprocessing

It is essential that you pay attention to the “Application technology” chapter in the operating instructions for the dishwasher or the machine and the instructions specified by the manufacturer of the breathing masks.

Manufacturer:


Miele & Cie. KG

- Carl-Miele-Straße 29 33332 Gütersloh Germany








Manufacturing site:

- Miele & Cie. KG Mielestraße 2 33611 Bielefeld Germany
- Internet: www.miele.com/professional

Documents / Resources

	Miele APFD 201 Complement [pdf] Instruction Manual APFD 201 Complement, APFD 201, Complement
--	---

References

-  Professional.com
-  [Professional](#)
-  [Miele Professional FI | Tutustu ratkaisuihimme ammattilaisille](#)
-  [Miele Professional PT | Descubra as nossas soluções industriais](#)
-  [Professional](#)
-  [Miele A/S er leverandør af førsteklasses hårde hvidevarer.](#)
-  [Miele Professional – Üdvözöljük weboldalunkon](#)
-  [Miele Professional | Soluzioni per il Lavaggio Professionale](#)
-  [Miele Professional NO | Se våre profesjonelle løsninger](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.