



Narvitech AT-C Click Casting Accessories User Guide

[Home](#) » [Narvitech](#) » Narvitech AT-C Click Casting Accessories User Guide 


Narvitech AT-C Click Casting Accessories



Contents

- 1 Connection Connections and Indicators
- 2 Pairing
- 3 Usage Instructions
- 4 LED Indicators
- 5 Documents / Resources
- 5.1 References

Connection Connections and Indicators

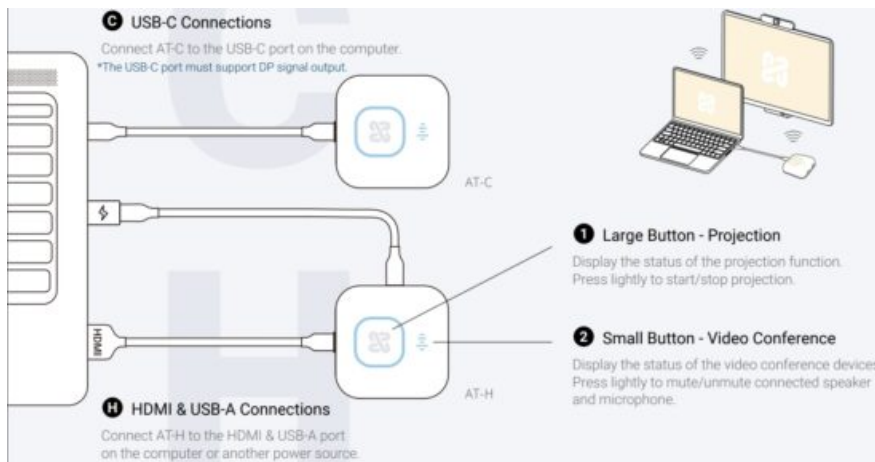

Copyright 2024 Narvitech Corp.

All rights reserved. All trademarks and registered trademarks are the property of their respective owners and are used under the fair use doctrine.

www.narvitech.com/AVA




OnCollab AT-C/AT-H Product Registration

When using the AT-C/AT-H for the first time, please pair the unit with your OnCollab device.

Pairing


1. USB 3.0 Connections

Connect the AT-C/AT-H to the USB 3.0 port of the OnCollab device. The device will enter pairing mode.

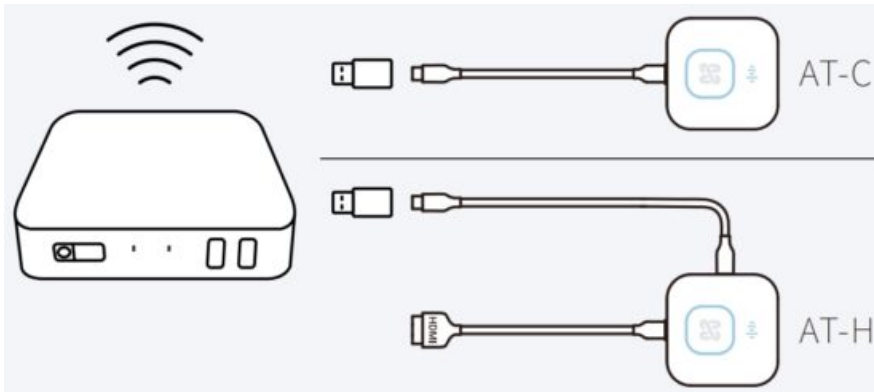


2. Enter the Wifi password

After entering the password, the device will start pairing.

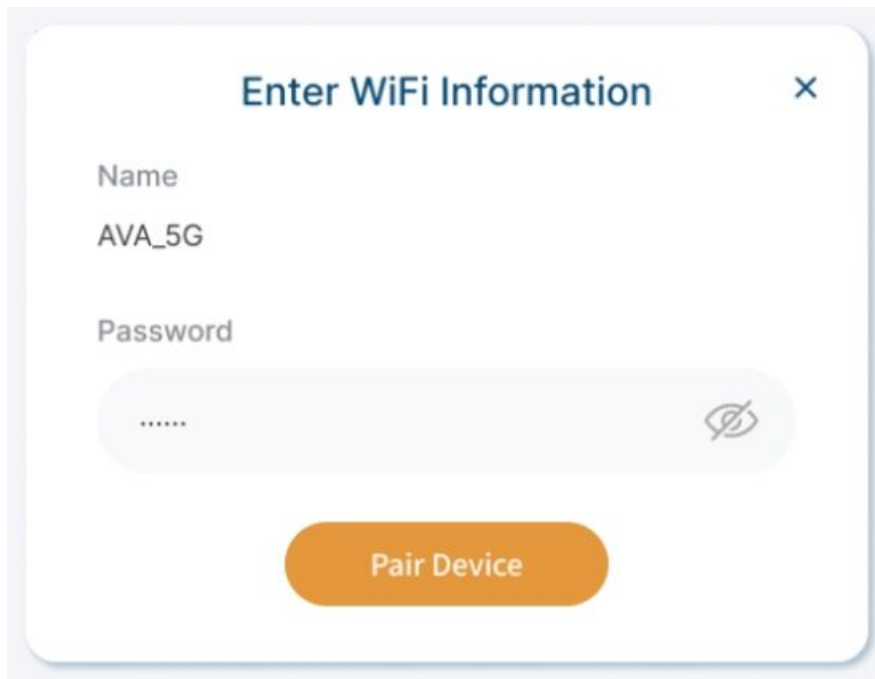

3. Pairing Successful


When the device has successfully paired, unplug the AT-C/AT-H.

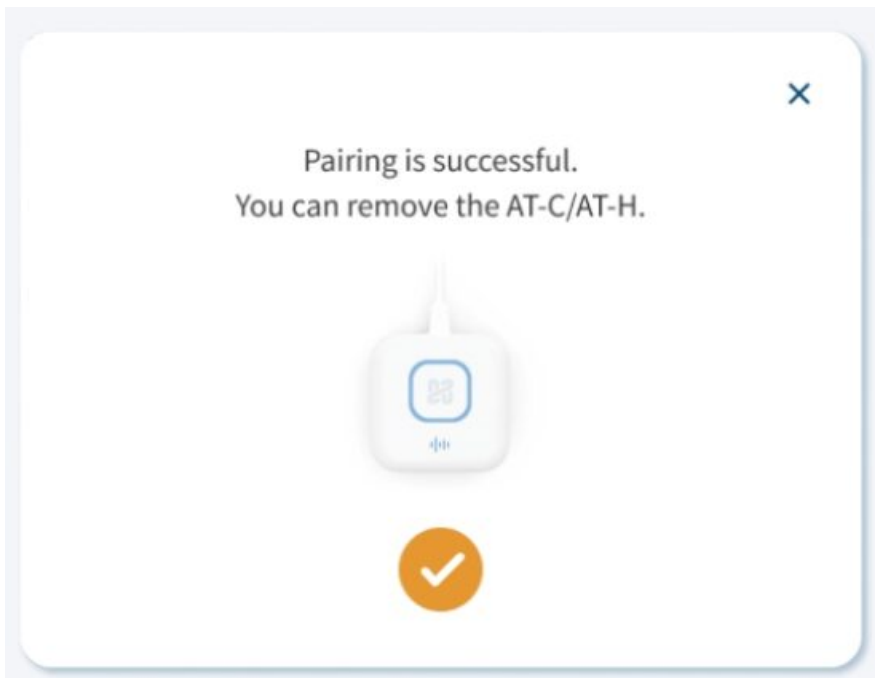

Usage Instructions

1. Setup your OnCollab Device


Turn on and setup the OnCollab Device that has been paired with AT-C/AT-H.

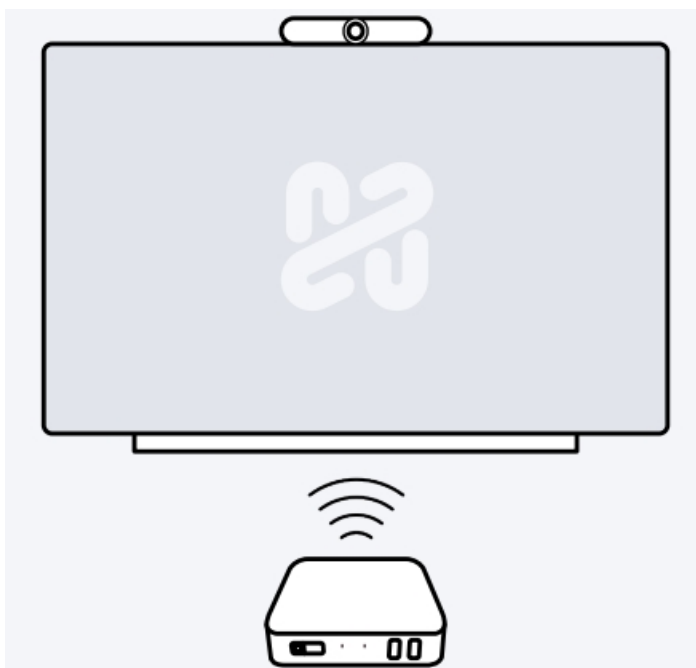

2. USB-C/HDMI Connections

Connect the AT-C to the USB-C port.

Connect the AT-H to the HDMI & USB port.

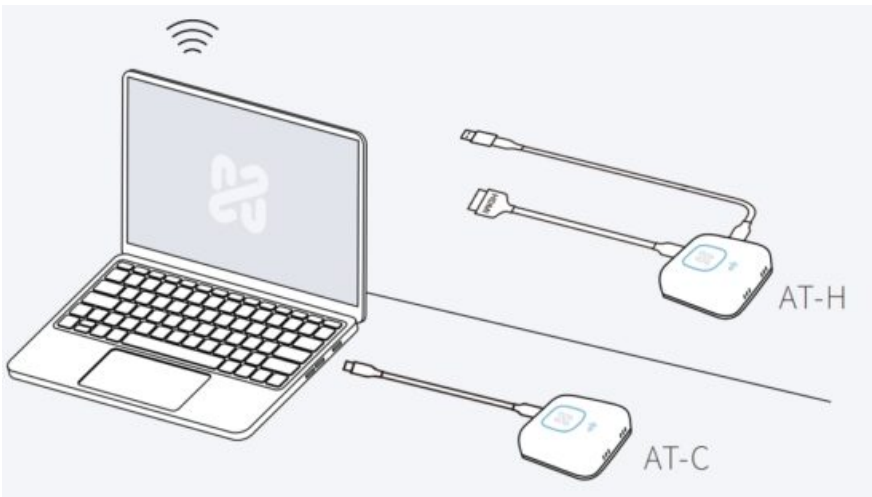







3. Wait for the Light Indicator

Wait until the large button emit a constant blue light before using it.






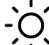









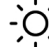

LED Indicators

1. Large Button – Projection







 Blue	 Constant Light	 Orange	 Pulsing Light	 Orange	 Blinking Light
Standby, ready for projection		Projection in progress		Moderator Control Activated	

2. Small Button – Video Conference


 Blue	 Constant Light
Standby	

 Orange	 Constant Light	 Orange	 Pulsing Light 		
OnCollab camera detected.		OnCollab camera is in use.			
 Green	 Constant Light	 Green	 Pulsing Light 	 Red	 Constant Light 
OnCollab speaker & microphone detected.		OnCollab speaker & microphone are in use.		OnCollab microphone is muted.	

3. Small and Large Button – Other Status

 Blue	 Pulsing Light	 Blue	 Blinking Light	 Yellow	 Blinking Light
Establishing connection with Wi-Fi.		Searching for OnCollab devices.		No audio/video output from the computer's USB-C/HDMI port.	
*If the connection cannot be established continuously, please check if the network is normal or the password is entered correctly during pairing.		*If OnCollab devices cannot be found continuously, please check if the OnCollab device is connected to the correct network or repair it.			



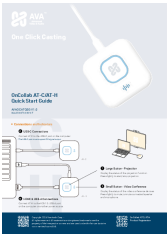

[Narvitech AT-C Click Casting Accessories](#) [pdf] User Guide
AT-C, AT-H, AT-C Click Casting Accessories, AT-C, Click Casting Accessories, Casting Accessories, Accessories

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.