

Neomounts FPMA-D700DD4 Monitor Desk Stand Instruction Manual


[Home](#) » [Neomounts](#) » Neomounts FPMA-D700DD4 Monitor Desk Stand Instruction Manual 

Neomounts®

Contents


- [1 Neomounts FPMA-D700DD4 Monitor Desk Stand](#)
- [2 PARTSINSTALLATION](#)
- [3 CAUTION](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Neomounts FPMA-D700DD4 Monitor Desk Stand

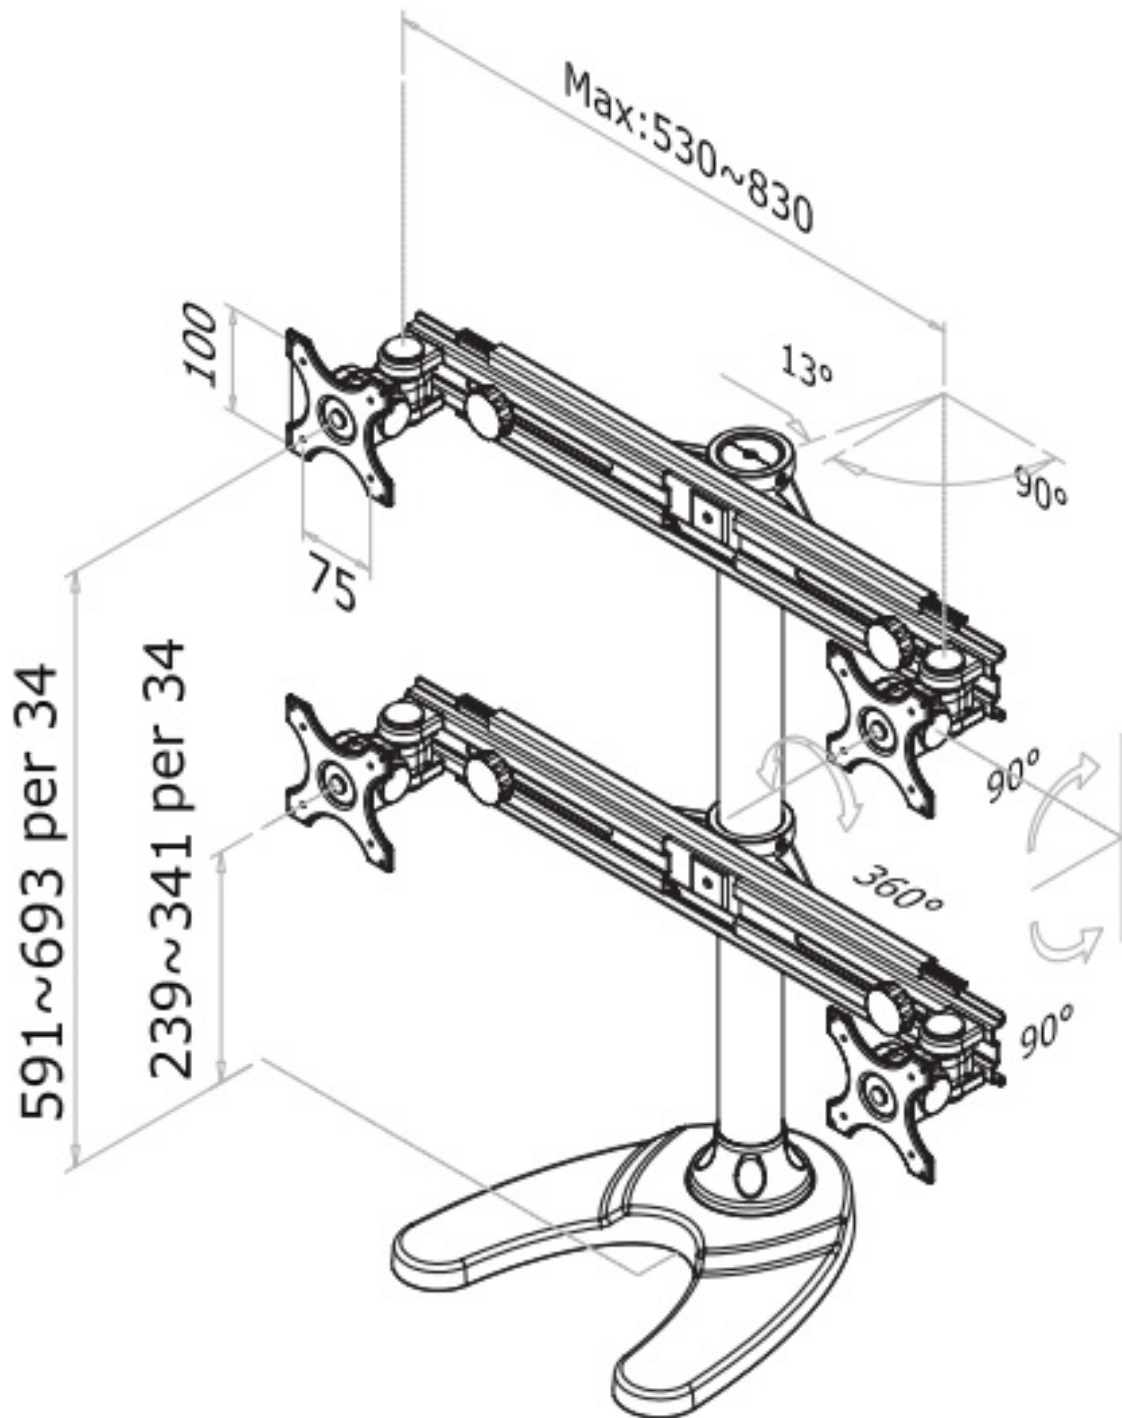


Neomounts FPMA-D700DD4 Monitor Desk Stand

PARTS

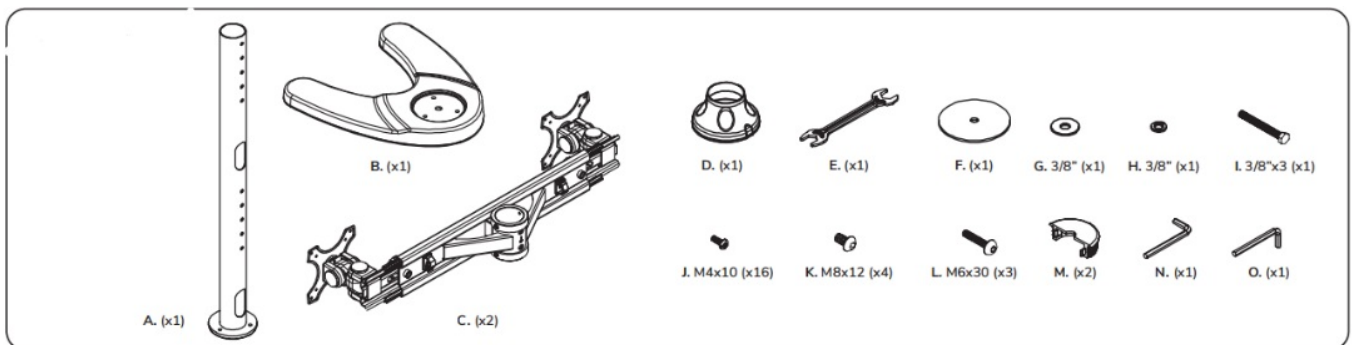


INSTALLATION


1. Mount the desk clamp to the rod. Install the clamp to the desk
- 2.

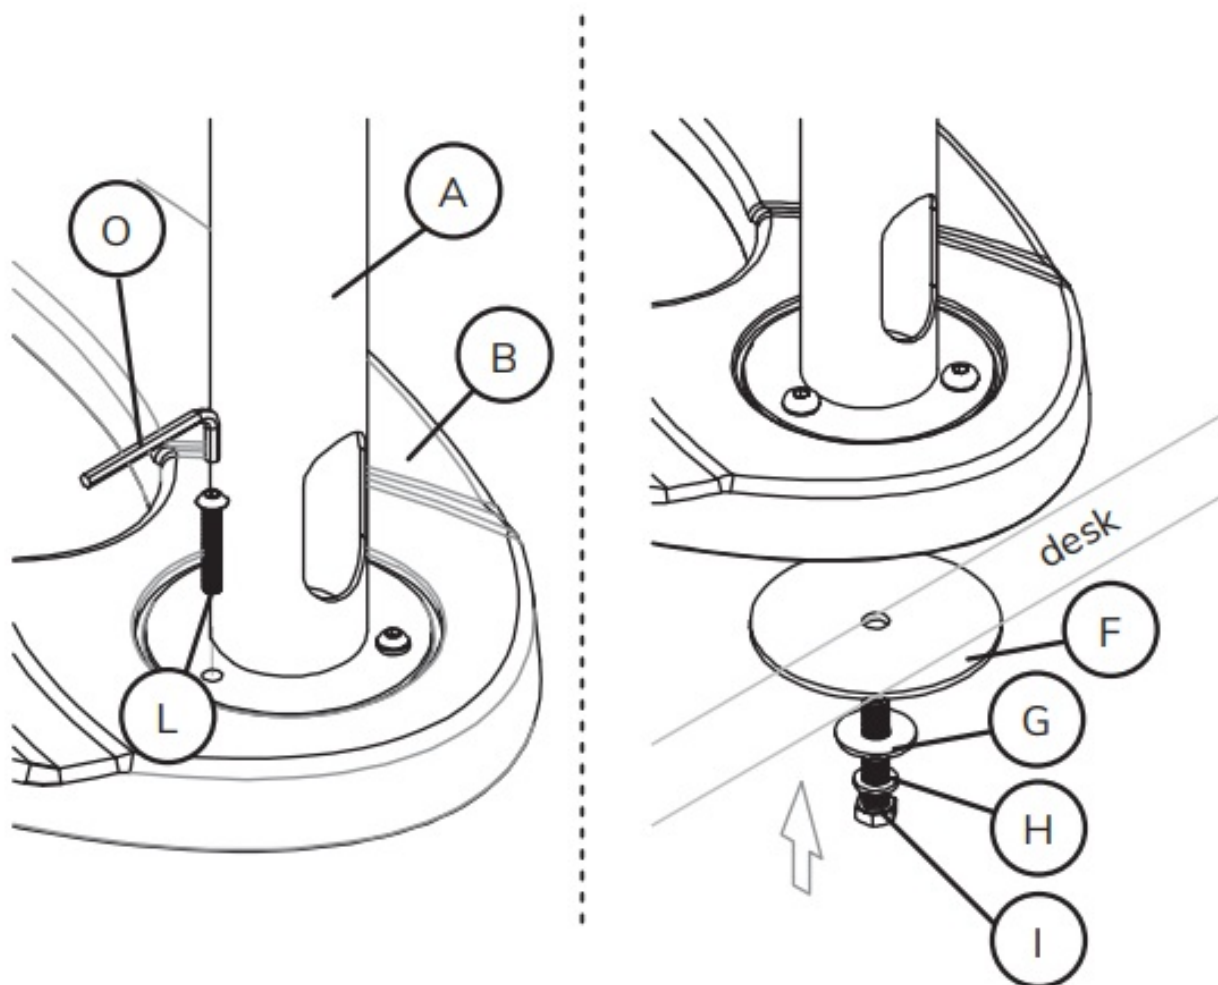


Attach the arm to the rod, adjust the height and tighten

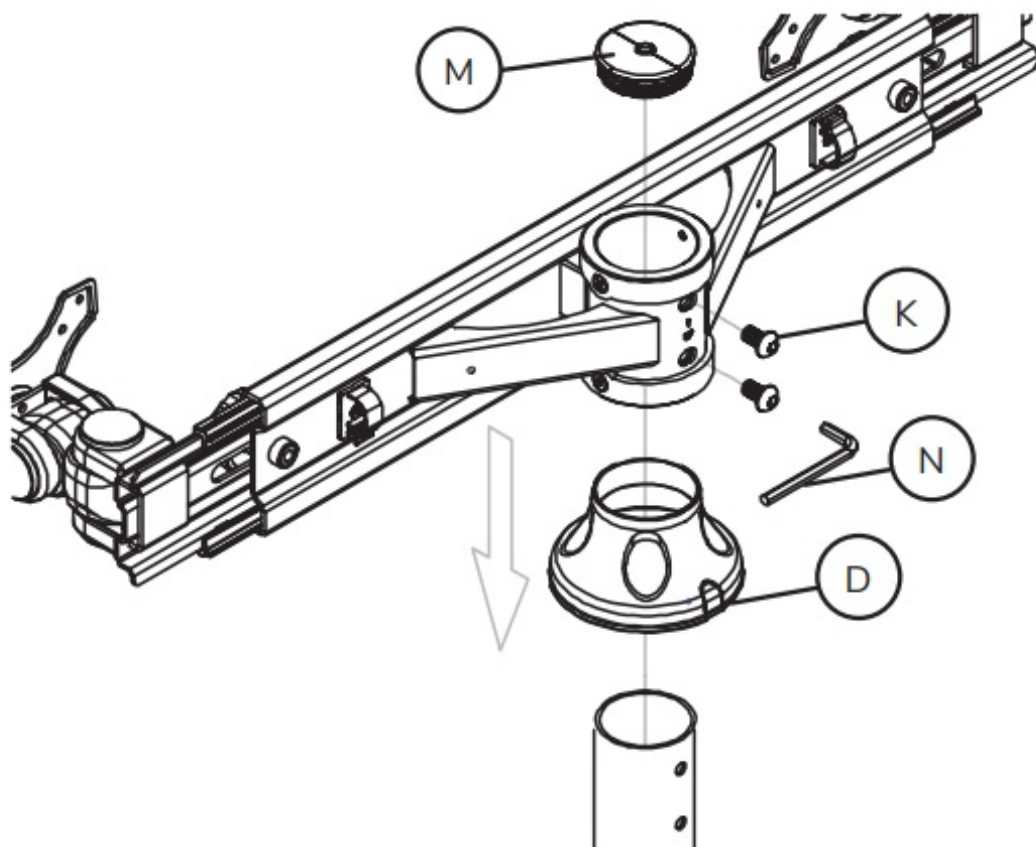


3. Install the monitors

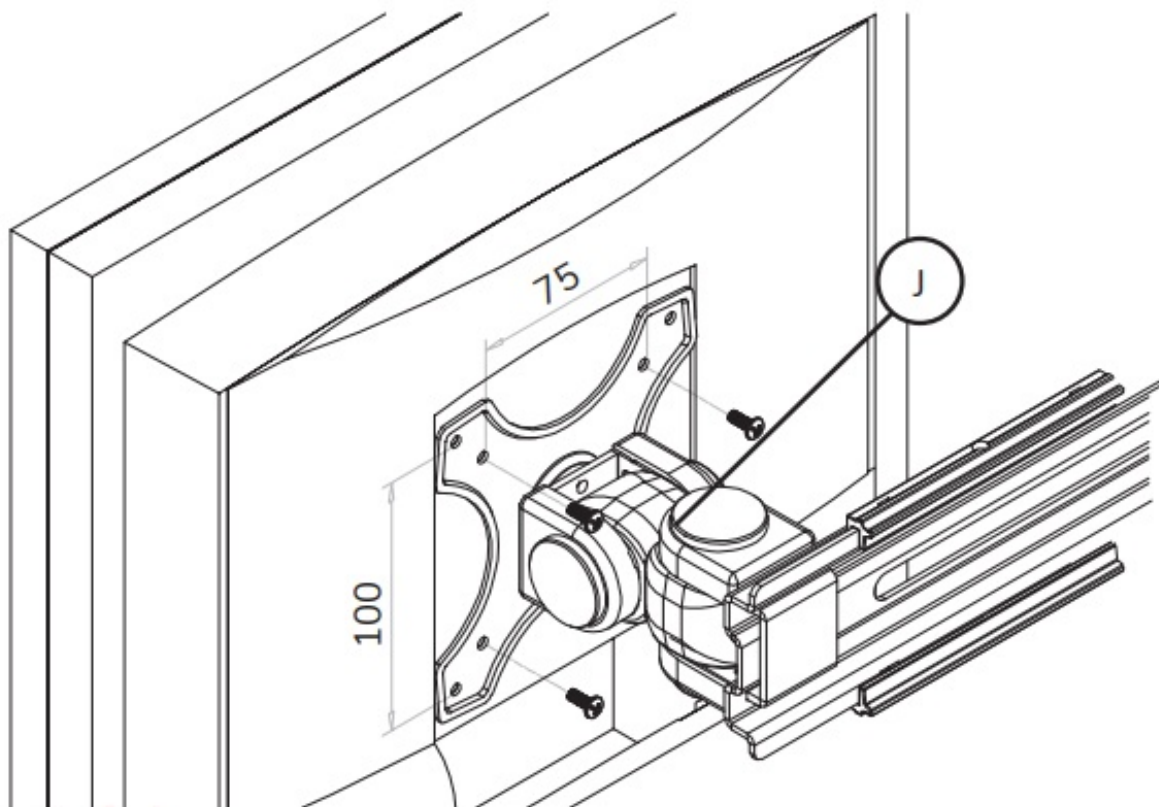

4. Adjust the torque

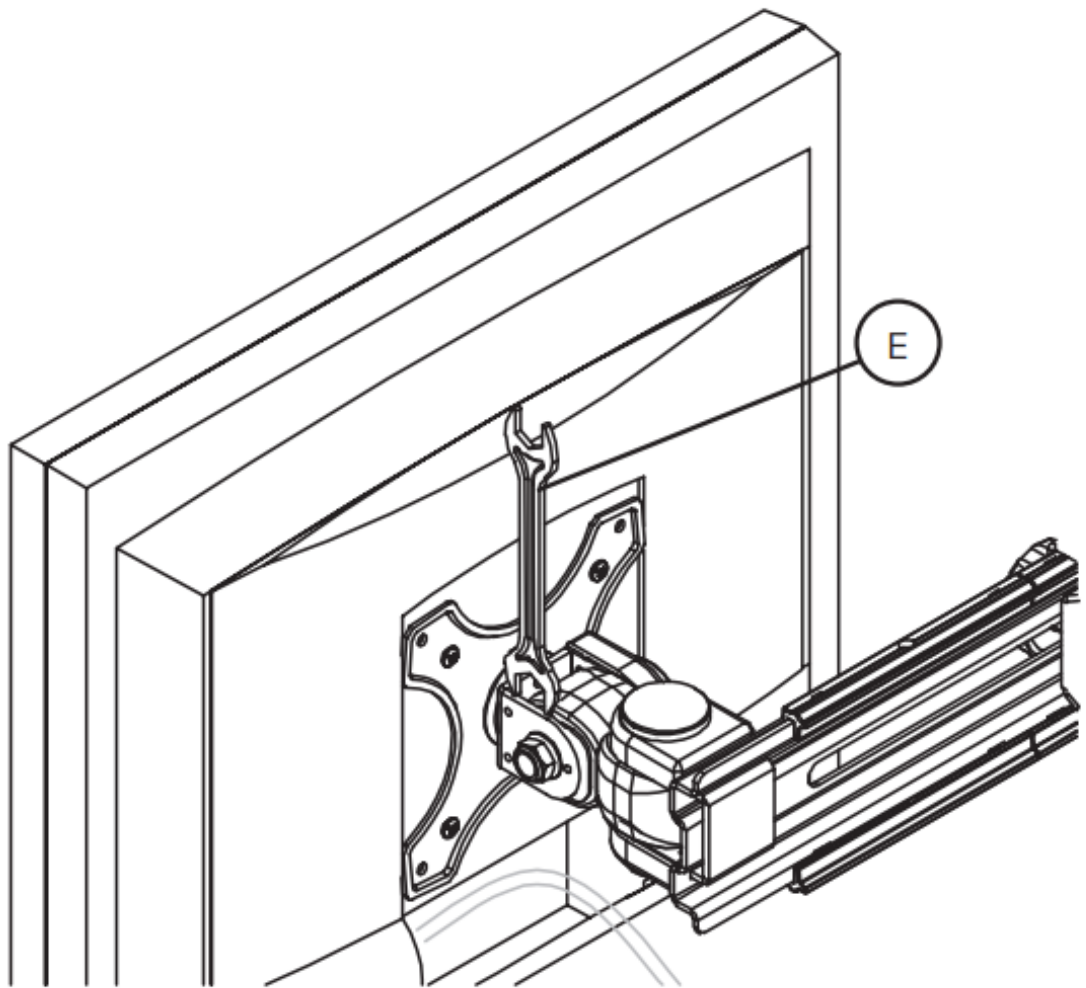

5. Route the cables

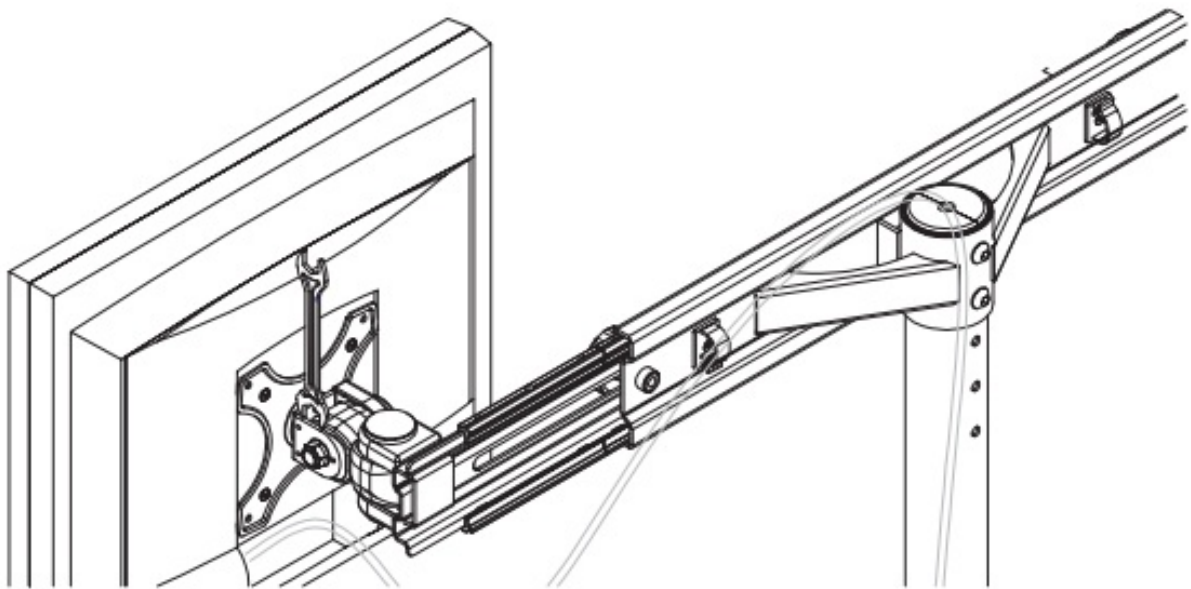


CAUTION

1. To ensure safety, please read this manual carefully before installation and follow the instructions. Store this manual in a secure place for future reference.
2. The manufacturer shall not be legally responsible for any equipment damage or personal injury caused by

incorrect installation or operation other than that covered in this manual.

3. The mount is designed for easy installation and removal. The manufacturer shall not be liable for damage to equipment or personal injuries arising out of human factors or acts of nature, such as earthquakes or typhoons.
4. It is recommended that the mount be installed by qualified personnel only.
5. At least two persons are needed to install or remove the product to avoid the hazard of falling objects.
6. Please carefully inspect the area where the mount is to be installed:
 1. Avoid places that are subject to high temperature, humidity, or contact with water.
 2. Do not install the product near air conditioning vents or areas with excess dust and fumes.
 3. Only install on vertical walls and avoid slanted surfaces.
 4. Do not install in places subject to any shock or vibration.
 5. Do not install in places subject to direct exposure to bright light, as it may cause eye fatigue when viewing the display panel.
7. Maintain sufficient space around the display to ensure adequate ventilation.
8. To ensure a safe installation, first, check the structure of the wall, ceiling or floor and select a secure mounting location.
9. The wall, ceiling or floor should be strong enough to sustain a weight of at least four times of the display and mount combined. The mounting location must be able to withstand an earthquake or another strong shock.
10. Do not modify any accessories or use broken parts. Contact your dealer with any questions.
11. Tighten all screws (do not exert excessive force to avoid breaking the screw or damaging its thread).
12. Drill holes and bolts will be left in the wall, ceiling, or floor once the display and bracket are removed. Stains may occur after extended use.
13. Since the manufacturer has no way to control the wall, ceiling, or floor type and installation of the mount, the warranty of the product shall only cover the body of the mount. The warranty period of the product is 5 years.

Documents / Resources

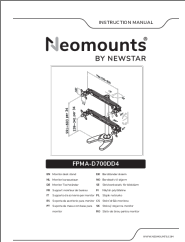	<p>Neomounts FPMA-D700DD4 Monitor Desk Stand [pdf] Instruction Manual FPMA-D700DD4, Monitor Desk Stand</p>
---	--

References

- [N Neomounts](#)