



## niceboy SMART-SCALE-BLACK Smart Scale User Manual

[Home](#) » [niceboy](#) » niceboy SMART-SCALE-BLACK Smart Scale User Manual 


niceboy SMART-SCALE-BLACK Smart Scale



## Contents

- [1 PRODUCT INTRODUCTION](#)
- [2 PACKAGE CONTENTS](#)
- [3 SAFETY PRECAUTIONS](#)
- [4 OPERATION INSTRUCTIONS](#)
- [5 INFORMATION OF DISPLAY LED](#)
- [6 SCALE ACCURACY](#)
- [7 MAINTENANCE](#)
- [8 SPECIFICATIONS](#)
- [9 TIPS](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

## PRODUCT INTRODUCTION

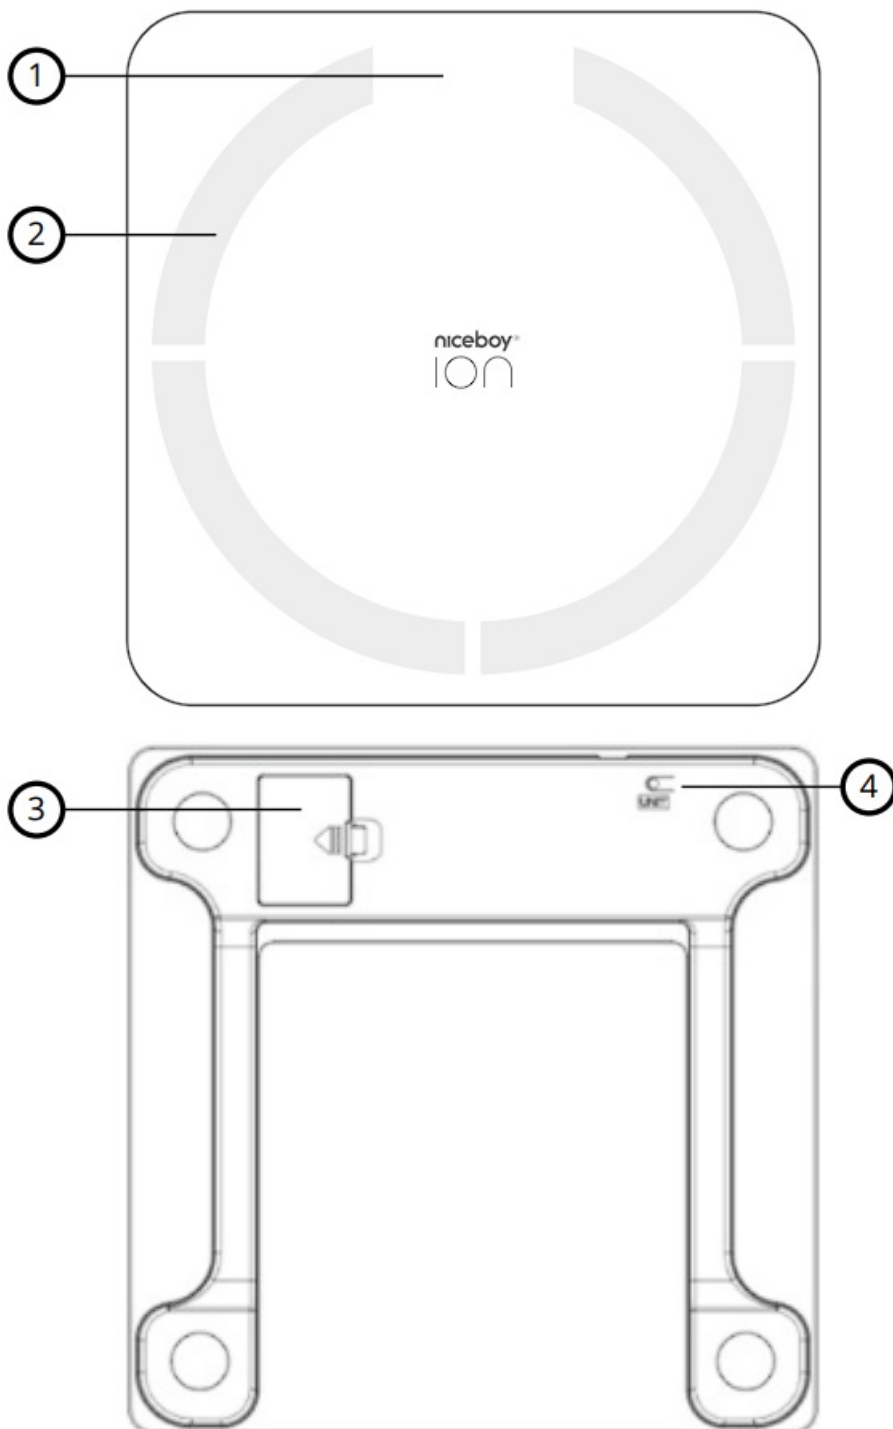

1. Display
2. Sensors
3. Battery storage
4. Mode unit button

## PACKAGE CONTENTS

Niceboy ION SmartScale  
User manual

## SAFETY PRECAUTIONS

- Do not use it on the carpet or soft ground.

- Do not use the scale when your body or feet are wet.
- Do not use it to weigh your pet or baby.
- Do not step on the edge of the scale while getting on or off.
- Do not jump on the scale.
- Do not submerge the scale in water or use chemical cleaning agents.
- Do not use this scale for medical intention.
- Do not use it if you are pregnant or under 10 years old.

## OPERATION INSTRUCTIONS




1. Install the 3pcs AAA Batteries to get it power on.
2. Download Niceboy ION app
3. Register an account: Open the downloaded Niceboy ION app, follow the instructions to log in or register account information.
4. Add device – Ensure that the Bluetooth is on. Enter the main interface, click “Home” at the bottom, click “+” at the top, click “ Niceboy ION SmartScale”, then, “Reset The device first.”
5. Select the user and add personal information, please input gender, Birthday, height and other data correctly (this data will affect body Analysis index) and click “Save” at the top right corner.
6. Body fat measurement – Before you stand on the scale, make sure your feet are dry and clean. Stand barefoot on the 4 metal pieces on the surface of the scale to measure, stand firmly until the “test is complete”, the scale will display the weight value and send the data to the APP.

Meanwhile, you need to claim data, just click “View” and “Distribution”, then, choose user name accurately and click “Save” at the top right corner. Then, click “Back” on the top left corner to measurement page, then, click “Data details” on the bottom left corner, you will see all the body analysis index.

### Warm reminder

- \* Leave the scale too early will result in incomplete readings and Unable to display datas.
- \* After using the scale for the first time or moving the scale body, you need to place the scale on a flat and hard ground for use.

## INFORMATION OF DISPLAY LED
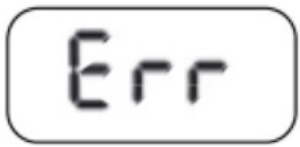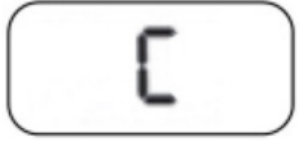
| Error   | Description   | Solution   |
|---|---|--|
|  | Overload. The device will be power off.                       | Stop using this scale for measurement.   |
|  | Zeroing. Appears when gravity is unstable.                    | Step off and re-step on the scale.   |
|  | Low battery. The device will be power off in about 4 seconds. | Replace all 3 batteries at the same time. Please use authorized batteries for replacement. |

## SCALE ACCURACY

Follow the recommendations below to maintain accuracy:


1. Weigh yourself in the morning (either daily or weekly) to get your weight before you start the day.
2. Be sure to perform the self-calibration on the scale any time that it is moved or stored without use for extended periods of time.
3. To receive the most accurate results, please remove all articles of clothing and jewelry.
4. Only use your scale to measure your progress. Ideally, users should consult with doctors in setting long term fitness plan.
5. Make sure to test yourself at the same time of the day under the same conditions.

## MAINTENANCE

1. Keep away from wet/slippery/hot/strong microwave place.



2. Remove batteries when not use in a long time or power off.

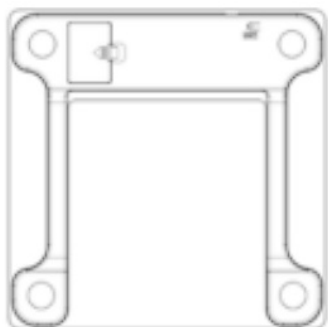

3. Use a soft damp cloth or sponge and avoid getting any water into the electrical systems inside. For strains or residue use a cloth with rubbing alcohol.



Slightly damp cleaning.

## SPECIFICATIONS

|                             |  |
|-----------------------------|--|
| Model Name                  | Niceboy ION SmartScale                 |
| Dimension                   | 30 x 30cm                              |
| LED Display Size            | 2.4 x 1.2 inch / 60mm x 31mm           |
| Measurement Unit            | Pound (lb) / Kilogram (kg)             |
| Weight Capacity             | 400lb / 180kg                          |
| <b>Working Environment</b>  |  |
| Operating temperature range | 0~40 °C                                |
| Operating humidity range    | ≤90%RH                                 |
| Storage temperature         | -20 °C ~60 °C                          |
| Power Supply                | 4.5V, 3 x AAA batteries (not included) |
| Operation                   | Auto ON/OFF                            |

RTB Media s.r.o. hereby declares that the type of radio equipment SMARTSCALE complies with Directives 2014/53 / EU, 2014/30 / EU, 2014/35 / EU, and 2011/65 / EU. The full content of EU Declaration of Conformity is available on the following websites: <https://niceboy.eu/cs/podpora/prohlaseni-o-shode-mM38CtmYvX693IHvvu4CWpk3vJGrvnC>

## TIPS

1. This product is specially designed for body fat analyzer as well as weight measurement. It should NOT be used by anyone during the process of transaction for verification of goods' weight.
2. If the fat percentage shows 0%, please moisturize the soles of the feet with moisturizer to keep the soles of the feet moist before measuring on the scale.
3. Please try to measure at the same time and under the same conditions every day (The measured value will be affected by the change of moisture in the receptor and body temperature)
4. After overeating and strenuous exercise, the measured value will be affected when there are symptoms of extreme dehydration.
5. When measuring moisture and fat percentage, please keep the soles of your feet dry and clean, and stand barefoot on the left and right sensors, otherwise the body fat percentage will be unable to be tested or the measurement will be inaccurate.
6. The maximum weighing value is 180kg, if it exceeds, the scale will display "Err", please leave the scale immediately to avoid damage the sensors.
7. When not in use, do not place anything on the scale, and do not place this product in direct sunlight, near heating appliances or in humid places.
8. When the screen displays 'LO', it means that the battery is low and should be replaced.
9. Please take out the battery if it will not be used for a long time.
10. It is forbidden to use this product if there is a pacemaker and other medical devices in the body!

## USER INFORMATION FOR DISPOSING ELECTRICAL AND ELECTRONIC DEVICES (HOME USE)



This symbol located on a product or in the product's original documentation means that the used electrical or electronic products may not be disposed together with the communal waste. In order to dispose of these products correctly, take them to a designated collection site, where they will be accepted for free. By disposing of a product in this way, you are helping to protect precious natural resources and helping to prevent any potential negative impacts on the environment and human health, which could be the result of incorrect waste disposal.

You may receive more detailed information from your local authority or nearest collection site. According to national regulations, fines may also be given out to anyone who disposes of this type of waste incorrectly. User information for disposing electrical and electronic devices.

(Business and corporate use)

In order to correctly dispose of electrical and electronic devices for business and corporate use, refer to the product's manufacturer or importer. They will provide you with information regarding all disposal methods and, according to the date stated on the electrical or electronic device on the market, they will tell you who is responsible for financing the disposal of this electrical or electronic device. Information regarding disposal processes in other countries outside the EU. The symbol displayed above is only valid for countries within the European Union.

For the correct disposal of electrical and electronic devices, request the relevant information from your local authorities or the device seller.

# niceboy | ON<sup>®</sup>


Importer to EU: RTB media s.r.o., 5. Kvetna 1746/22

Prague 4, 140 00, Czech Republic, ID: 294 16 876



Made in China.

**RoHS**    

## Documents / Resources

|   |   |
|---|---|
|  | <a href="#">niceboy SMART-SCALE-BLACK Smart Scale</a> [pdf] User Manual<br>SMART-SCALE-BLACK, Smart Scale, SMART-SCALE-BLACK Smart Scale, Scale |
|---|---|

## References

-  [Niceboy - IT'S YOUR DAY!](#)
-  [Niceboy - IT'S YOUR DAY!](#)