



[Home](#) » [Norwii](#) » **NORWii N95 Presentation Clicker Power Point User Manual** 

Contents [[hide](#)]

[1 NORWii N95 Presentation Clicker PowerPoint](#)

[2 FEATURES](#)

[3 FUNCTION CUSTOMIZE AND PAIR](#)

[4 SETUP](#)

[5 CONNECT VIA BLUETOOTH](#)

[6 Specification](#)

[7 CUSTOMER SERVICE](#)

[8 Documents / Resources](#)

[8.1 References](#)



NORWii N95 Presentation Clicker PowerPoint



FEATURES



1. LED

- Feedback on battery and working status.

2. Backward

- Click to navigate backwards.
- Long-press to start slide show from the current slide/Esc.

3. ON/OFF

4. Forward

- Click to navigate forward.
- Long press to black screen/Esc.

5. Laser

- Long-press to activate the laser.

6. Tab/Alt-Tab


- Click is Tab.
- Long press is Alt-Tab.

7. Enter

- Click is Enter.
- Long press is Alt-F4.

8. USB receiver


FUNCTION CUSTOMIZE AND PAIR

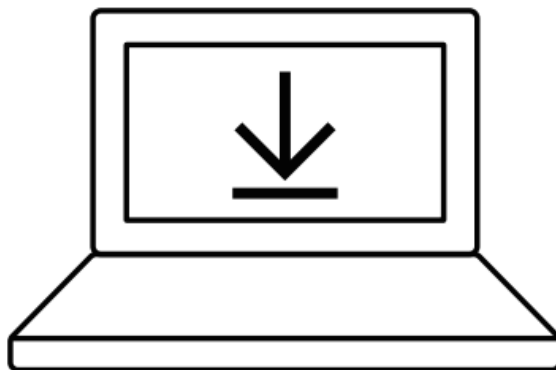




- Download and install the software www.norwii.com/downloaden/list-168-en.html
- Search the user Manual of Norwii Presenter on www.norwii.com for more information.

SETUP

1. Remove the USB receiver.

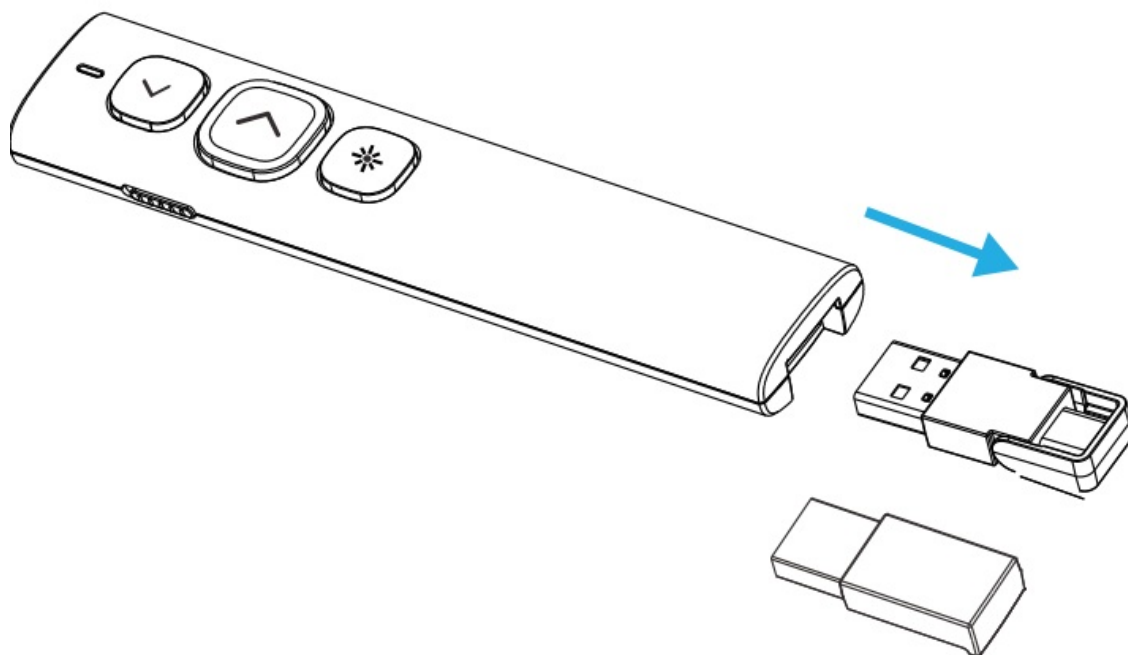



2. Plug the receiver into the USB port or connect via Bluetooth.

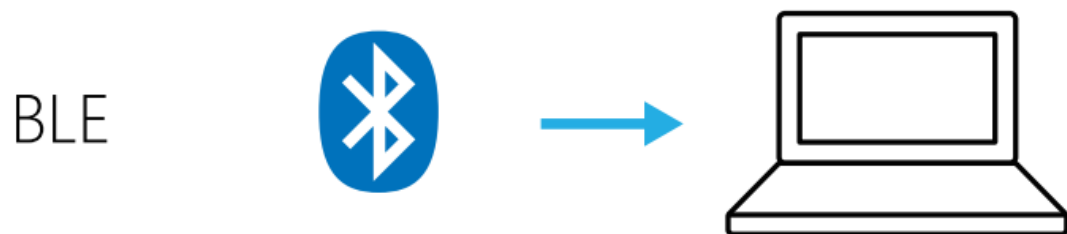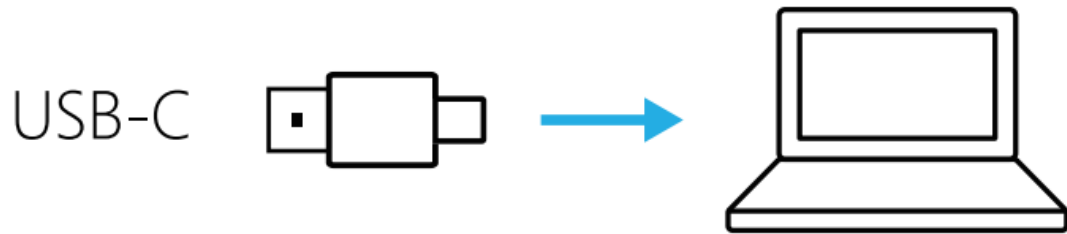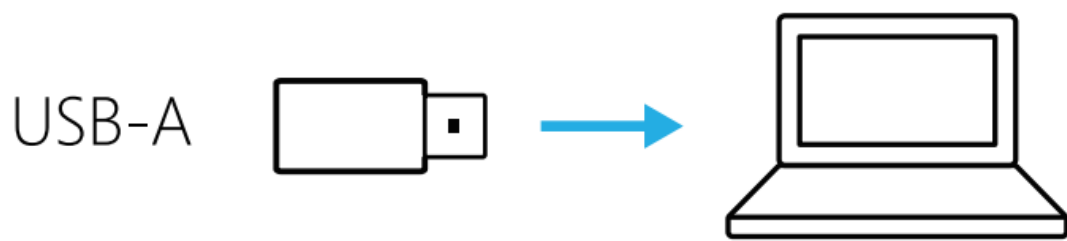

- All the connection methods supported by the N95 series are listed here.
- Depending on your purchase choice, it may include one or more of them.

CONNECT VIA BLUETOOTH

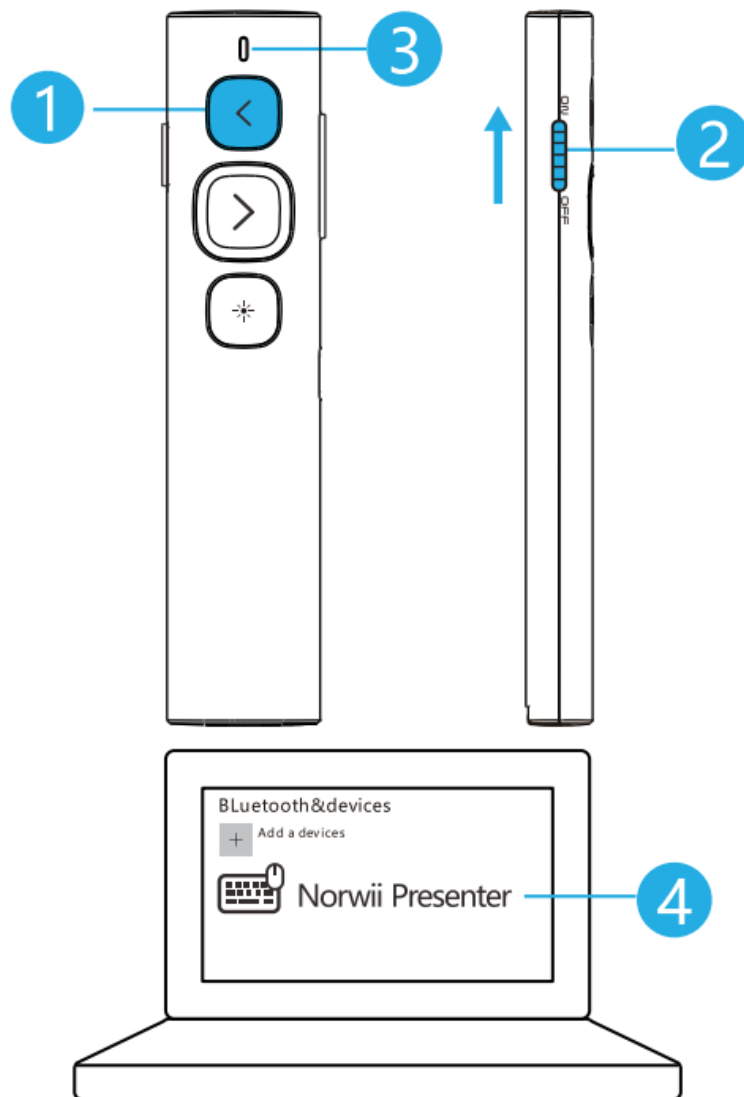

1. Long-press the backwards key. 
2. Turn on the power switch.
3. LED blinking rapidly blue.
4. Click to pair.

- USB receivers have higher priority than the computer's Bluetooth.

Specification

LED

LED BEHAVIOR	INDICATION
Steady blue when press keys	Battery is good and works fine
Blinking rapidly blue	Waiting for Bluetooth pairing
Pulsing blue	Low battery
Steady red	Charging
Steady green	Full charged


- **Operating range:** 328 Feet

- **Compatibility:** Mac |  | iOS | 

CUSTOMER SERVICE

- **Shanghai Norwii Technology Co., Ltd.**
- **Add:** No.277, Jinfeng Road, Pudong New Area,
- **Shanghai, China 201201**
- **Tel:** +86-21-51872080
- **Email:** supports@norwii.com
- **Web:** www.norwii.com

Documents / Resources

	NORWii N95 Presentation Clicker Power Point [pdf] User Manual N95 Presentation Clicker Power Point, N95, Presentation Clicker Power P oint, Clicker Power Point, Power Point
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.