




[Home](#) » [OCXU Note](#) » **OCXU Note HE-V02 OCXU Voice Recorder User Guide** 

OCXU Note

Real-time translation | Recoder | Transcribe | Summarize
User Guide

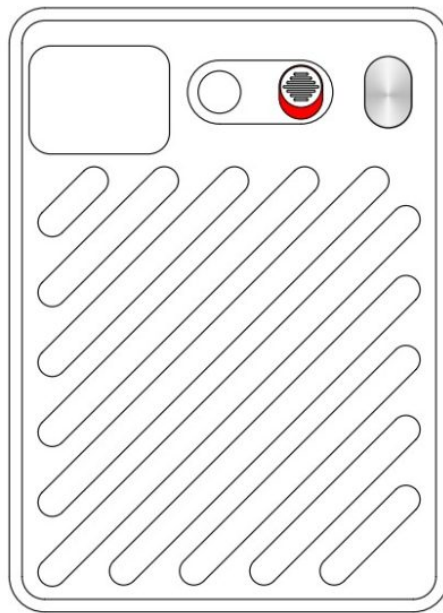

Contents [[hide](#)]

- 1 HE-V02 OCXU Voice Recorder
- 2 App Download
- 3 Power On
- 4 App Binding
- 5 Recording Mode
- 6 Recording
- 7 Pause/resume Recording
- 8 End Recording
- 9 Real-time Translation
- 10 Screen Tips
- 11 Ailith Web
- 12 Parameter Information
- 13 Documents / Resources
 - 13.1 References


HE-V02 OCXU Voice Recorder

Welcome to use OCXU Note



<https://qr10.cn/FJoPtW>

Please scan the QR code to download the Ailith App for activation when using it for the first time.

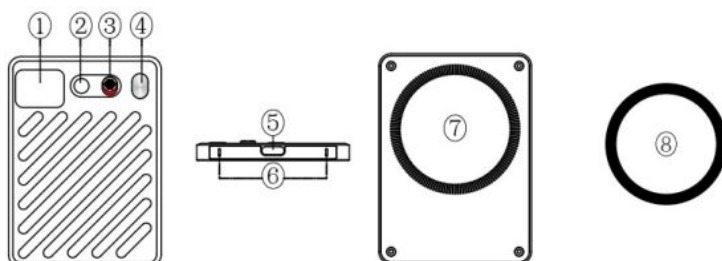


<ul style="list-style-type: none"> ① Screen ② Recording button ③ Mode switch button ④ Real-time translation button 	<ul style="list-style-type: none"> ⑤ Charging port ⑥ Sound pickup hole ⑦ Magnetic zone ⑧ Magnetic ring
--	--

Quick Guide


App Download

- ▶ Search for Ailith in the App Store or Google Play and download it.
- ▶ Create your Ailith account.

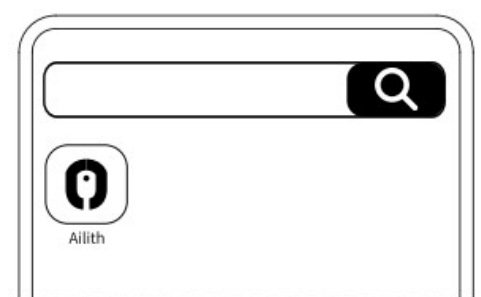


Power On

- ▶ Press and hold the record button for 3 seconds to turn on the device.

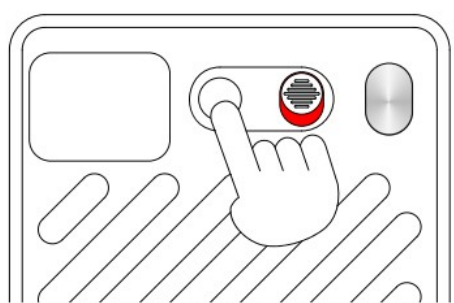


App Binding

- ▶ Open the Ailith App and follow the on-screen instructions to complete the binding process.

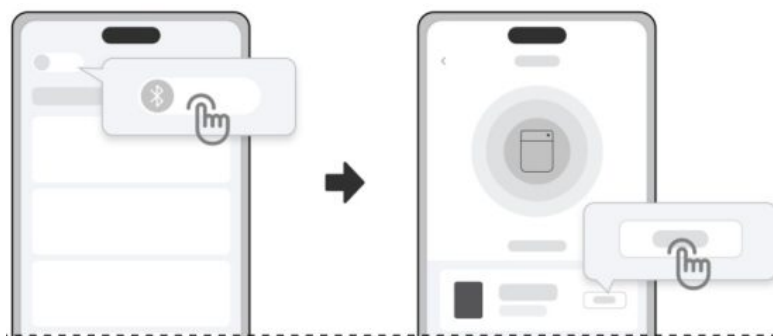

Recording Mode


► Slide the mode switch upwards for call mode and downwards for note mode.

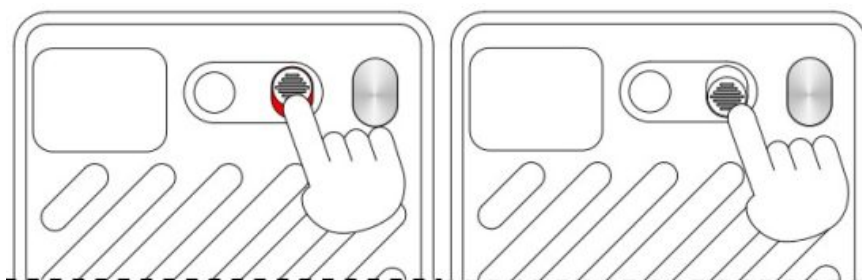

Note:


When using for the first time, please charge and bind the App before recording.

When recording a phone call, make sure your recording device is in call mode and attach the recording device to the back of the phone through the magnetic ring.

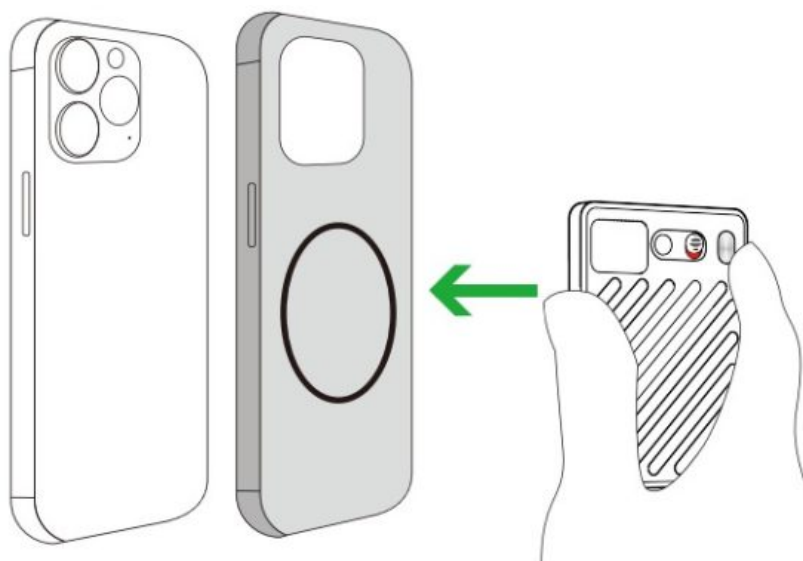

Recording

► After turning on the device, click the record button to start recording. The device will vibrate once and start recording.

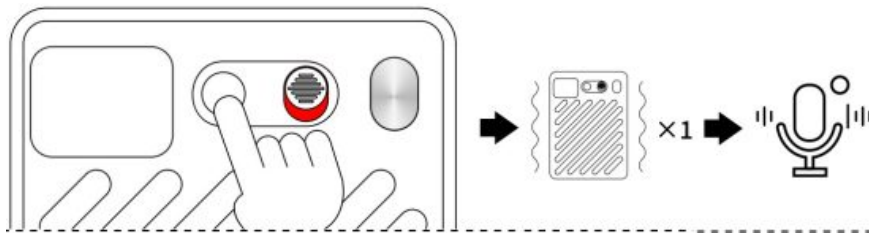

Pause/resume Recording

► During recording, double-clicking the recording button will pause the recording. After pausing, double-clicking the recording button again will resume recording.




Note:

The real-time translation function is not supported during recording. When you click the real-time translation button during recording, the following page will be displayed on the screen as a prompt.




End Recording

► If you click the record button during recording, the device will vibrate twice and end recording.

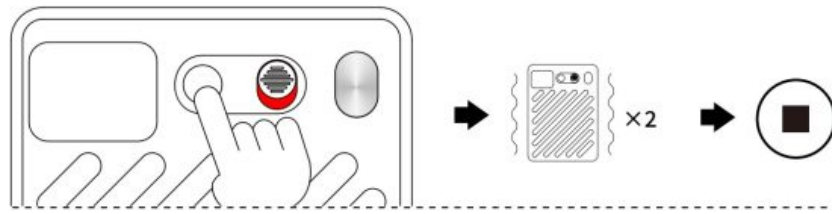

Real-time Translation

► When the recording device is connected to the App, long-press the real-time translation button to record the content to be translated. After completing the recording, release the real-time translation button, and the recording will be translated into the set language on the App and broadcast from the App device in the form of voice. (You can set whether to broadcast the translated voice on the app)

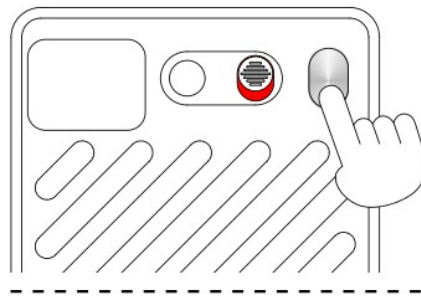


Note:

During real-time translation, the content to be translated is recorded through the device where the App is located. Please place the device where the App is located, close to the voice source.

Real-time translation requires staying connected to the App; otherwise, the recording device screen will prompt you to connect to the App, as shown below.




Screen Tips

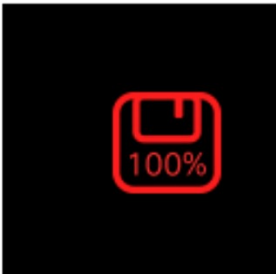	
Low battery warning	Memory full warning

Ailith Web

► Enter on the browser side "<https://wincloudaitech.com/>", open the webpage.

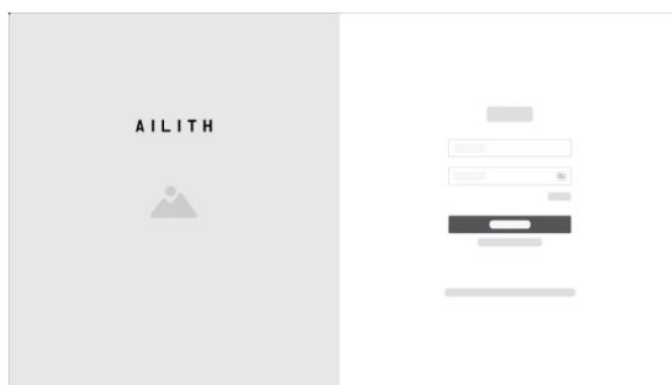

► Enter your email account and password to log in, and you can view and transcribe audio files on your computer.



Parameter Information

Model: Revoic R1

Wireless Version: V5.4

Display Module: 0.6 inch

Battery: 800mAh

Input: 5V/0.7A



FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.


IC warning:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s).


Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

The power delivered by the charger must be between min 0.5 Watts required by the radio equipment, and max 3.85 watts in order to achieve the maximum charging speed.

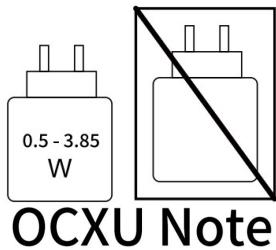

Documents / Resources

 OCXU Note <small>Read this to understand the device's operation and use.</small>	OCXU Note HE-V02 OCXU Voice Recorder [pdf] User Guide 2A2BYHE-V02, 2A2BYHEV02, HE-V02 OCXU Voice Recorder, HE-V02 OCXU, Voice Recorder, Recorder
--	---

References

- [User Manual](#)

OCXU

Note

2A2BYHE-V02, 2A2BYHEV02, HE-V02 OCXU, HE-V02 OCXU Voice Recorder, OCXU Note, Recorder, Voice Recorder

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.