



Contents [[hide](#)]

- [1 Palintest Kemio Single Use Sensor](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Register Your Kemio](#)
- [5 Add Batch Information](#)
- [6 Perform a Test](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Palintest

Palintest Kemio Single Use Sensor




Specifications

- Product: Kemio
- Manufacturer: Palintest Ltd
- Measurement Platform: Next generation
- Country of Manufacture: United Kingdom

Product Usage Instructions

Register Your Kemio


1. Register your Kemio instrument online at www.palintest.com/product/kemio/.
2. Fill out the required fields in the form, including your instrument's serial number located at the bottom of the instrument.

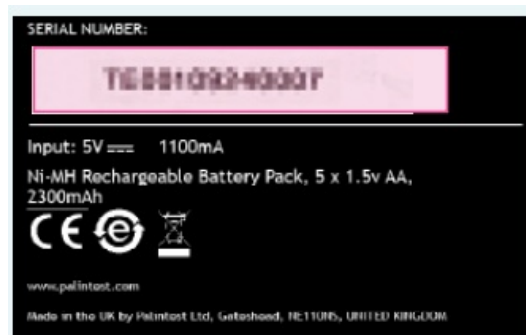


3. Check the boxes to sign up for news and updates from Palintest.
4. Press 'Register your product' to submit the form.

Add Batch Information

1. Press CONFIGURATION, then BATCH INFORMATION on the instrument.
2. Add new batch information as needed.

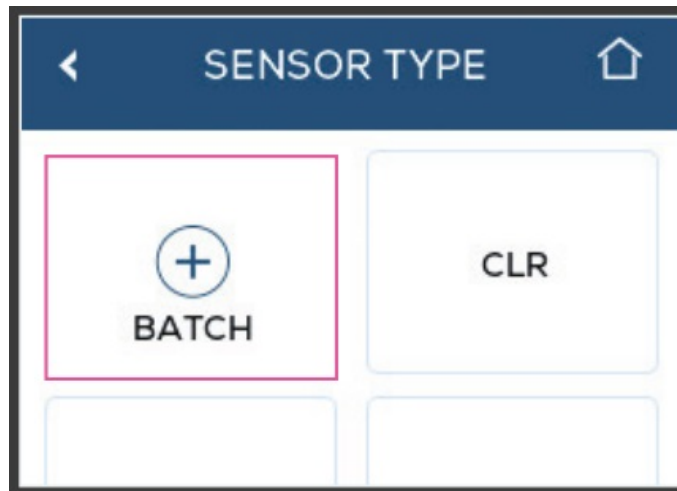


3. Scan the QR code on the side of the sensor box.

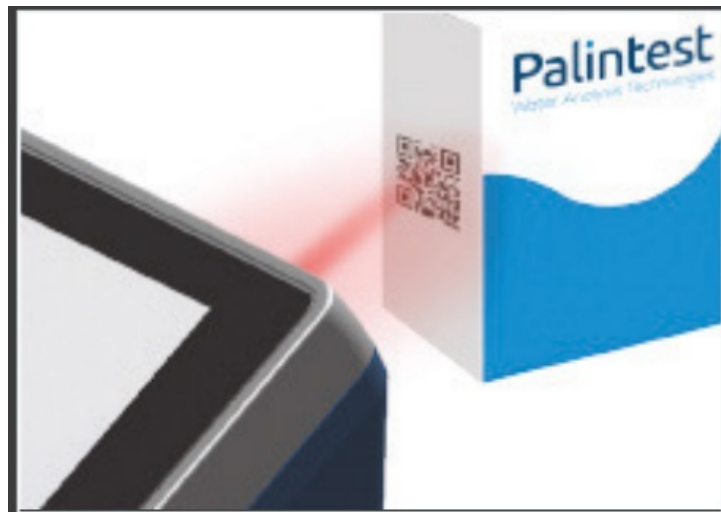


4. Press the  home button to return to the home screen.

Perform a Test

1. Turn on the instrument by pressing the power button.

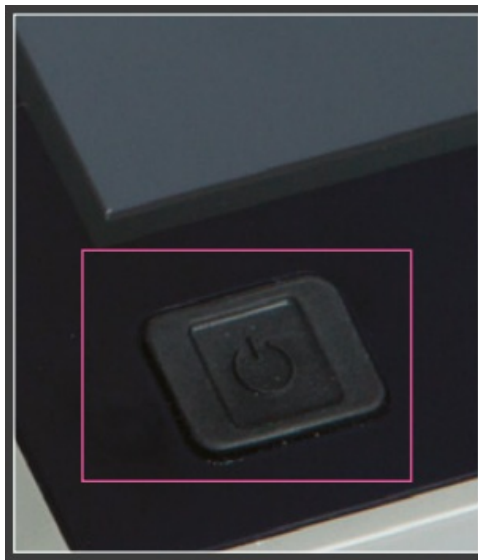


2. Press PERFORM TEST on the display screen.

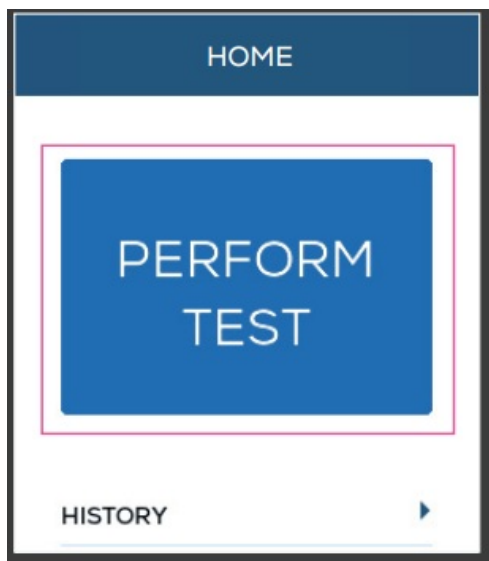

3. Follow the on-screen test instructions provided.



4. After the countdown, view the test results displayed on the screen.

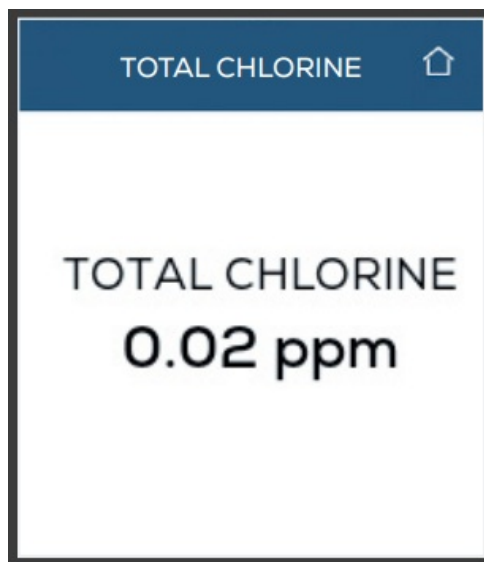

Kemio is the next generation measurement platform which can be tailored to suit your application needs.

- Enrich your test results.
- Simplify your decision making with pass/fail results.
- Protect your data.

Download the full instrument manual from the product page at www.palintest.com

Register your product to receive the latest software updates. Kemio is manufactured in the UK by Palintest Ltd, please see the technical support contacts by region below

Technical Support Head Office

T: +44 (0)191 491 0808 E: sales@palintest.com

Palintest House Kingsway Team Valley Gateshead Tyne and Wear NE11 0NS United Kingdom

APAC

T: +61 1300 13 15 16 E: apac@palintest.com

Palintest 17 Maud Street Newstead QLD 4006 Australia

Americas

T: +1 720 221 6878 E: info@palintestusa.com

Palintest 600 Corporate Circle Suite F Golden 80401 USA

Register your Kemio instrument online to receive the latest software, instructions and

updates from Palintest.



Scan the QR code or visit: www.palintest.com/product/kemio/

FAQs

Q: How can I download the full instrument manual?

A: You can download the full instrument manual from the product page at www.palintest.com.

Q: How can I contact technical support?

A: You can contact technical support based on your region:

- **Head Office (UK):** T: +44 (0)191 491 0808, E: sales@palintest.com
- **APAC (Australia):** T: +61 1300 13 15 16, E: apac@palintest.com
- **Americas (USA):** T: +1 720 221 6878, E: info@palintestusa.com

Documents / Resources

	Palintest Kemio Single Use Sensor [pdf] User Guide 2025, Kemio Single Use Sensor, Kemio, Single Use Sensor, Use Sensor, Sensor
---	--

References

- [User Manual](#)

2025, Kemio, Kemio Single Use Sensor, Palintest, Sensor, Single Use Sensor, Use

Palintest Sensor

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.