



PEIKO TRBOX-X9 Two Way Translator Device User Guide

[Home](#) » [PEIKO](#) » PEIKO TRBOX-X9 Two Way Translator Device User Guide 

PEIKO



INTELLIGENT APP ENABLED
Translator
TRBOX-X9
Quickstart
INSTRUCTIONS

Contents

- 1 TRBOX-X9 Two Way Translator Device
- 2 ENGLISH USAGE INSTRUCTIONS
- 3 TRANSLATOR SPECIFICATIONS
- 4 TRANSLATOR OVERVIEW
- 5 CHARGING INSTRUCTIONS
- 6 USER INSTRUCTIONS
- 7 COMMON ISSUES WITH TRANSLATOR USE
- 8 **PACKAGING LIST**
- 9 Documents / Resources
 - 9.1 References

TRBOX-X9 Two Way Translator Device

Manufacturer:

Peiko science and technology co limited

Manufacturer Address: Room 0522 HaiAn ShiDai Building East, ShenNan DaDao Avenue No12069, NanShan district, ShenZhen, Guangdong, CN(China)

Manufacturer E-mail: peiko@peiko.cn

Model No: Trbox X9

EC REP

Name: Sea & Mew Consulting GmbH

Address: Mittenhuber Straße 4, 92318 Neumarkt, Neumarkt i.d.OPf., Bayern, DE (Germany)

E-mail: Compliance.EU@outlook.com

UK REP

Name: Sea&Mew Accounting Ltd

Address: Electric Avenue Vision 25, Mittenhuber Straße 4, London, City of London, UK(United Kingdom)

E-mail: info@seamew.net

ENGLISH USAGE INSTRUCTIONS

Welcome to the Peiko Voice Translator. To help you better understand and use the product quickly, it is recommended that you read the manual carefully before using the voice translator.

Product Features

- Large-capacity battery with long standby time;
- High-power speaker with high-fidelity sound, loud volume, suitable for noisy environments; can be used as a BT speaker;
- Supports multilingual translation, with accurate translation and responsive performance;
- Simple app interface for easy operation;

TRANSLATOR SPECIFICATIONS

BT Version: 5.2


Transmission Range: 33 Feet (10m)

Battery: 500mAh LiPolymer DC 5V, Approx 2 Hour

Charge Time: 2h

Use Time: Up to 24Hours/ 55 Hours Standby

TRANSLATOR OVERVIEW

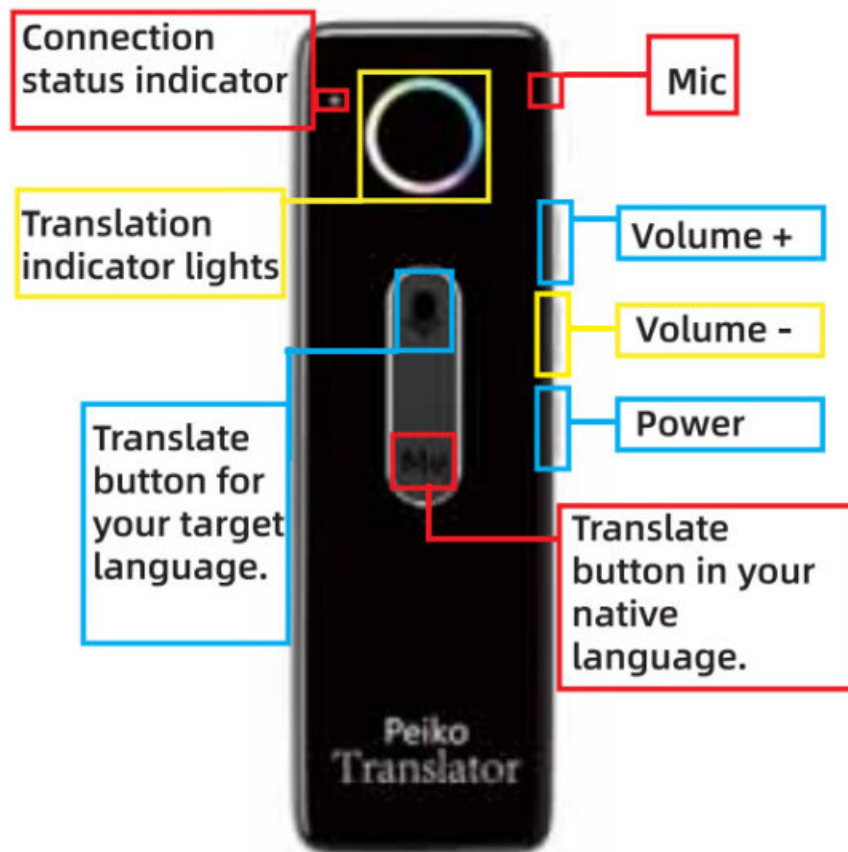

CHARGING INSTRUCTIONS

Input voltage: DC 5V/1A, charging time is approximately 2 hours. The red light is on during charging, and the white light is on when charging is complete. A prompt sound will indicate low battery.

USER INSTRUCTIONS

1. Scan the QR code or download the APP from the app store. You can search for "byteengine translator" in the Google Store & IOS Store for download.

SCAN THE QR CODE TO DOWNLOAD THE APP




<http://www.peiko.net/>

2. Long press the power button on the translator to turn it on (you will hear a prompt sound). After powering on, the blue light will flash, indicating that it is waiting for BT pairing.
3. After opening the APP, click on the homepage to select "Trbox X9," which will redirect you to the phone's BT settings or device list.
4. Turn on your phone's BT, find and connect to the "Trbox X9" device. You will hear a prompt sound once the connection is successful, and the BT indicator light will become steady.(01)



(01)

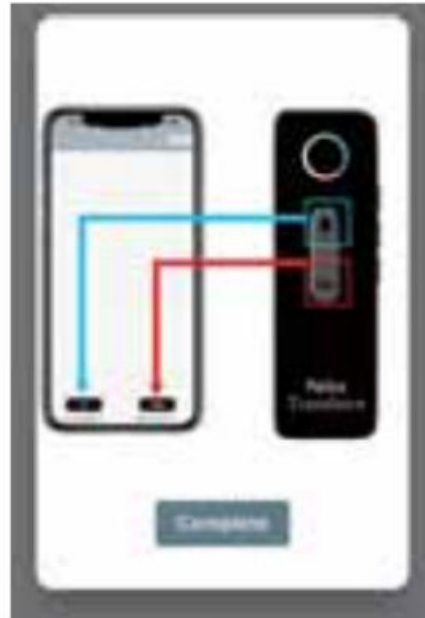

(02)

5. Returning to the APP will display “Connection Successful” and redirect you to the translation interface. The device’s indicator light will turn solid green (the light changes from blue to green, indicating that the translation function is available; a blue light means BT is connected, while a green light indicates a successful link with the APP and the translation function can be used normally. You can determine the working status of the translator by the color of the light). (If the connection is unsuccessful, please close the APP and repeat the steps above to try connecting again.)
6. Select the corresponding translation languages for the “Microphone” button and the “ME” button on the translator as prompted by the APP.(02)
7. To improve voice recognition accuracy, after pressing the translation button on the translator, please wait until the colorful light ring lights up before speaking. Try to speak clearly, loudly, and in a standard voice to enhance recognition accuracy. (Please ensure that you release the button after completing each sentence; otherwise, there may be incomplete recognition. Try to keep each sentence under 15 seconds.)
8. After releasing the button, the translation will be automatically processed and the results will be announced (translation speed depends on the network, so please ensure a stable internet connection).
9. Click on the translation conversation history in the translation interface to have the results read out again.
10. You can adjust the volume using the volume buttons on your phone and the translator (the translator will emit a prompt sound when it reaches maximum volume, but there will be no sound at minimum volume).

****Photo Translation****

Select the language you need to translate, take a picture of the target, and the translation results will be displayed.

****Offline Translation****

In offline translation mode, download offline text and offline voice files from the APP. Please note that these two files are separate, and both need to be downloaded!

In offline translation mode, you can use it without a network, and when a network is available, it will not use the current network or data.

COMMON ISSUES WITH TRANSLATOR USE

****DEVICE WON'T POWER ON****

1. Please try charging it and check if the charging indicator light is red.

2. Long press the power button for 10 seconds to reset the translator.

****APP CANNOT CONNECT TO TRANSLATOR?****

1. Please ensure you are connecting correctly according to the instructions.
2. Make sure the translator is not connected to another phone. If it is, disconnect it; if no other phones are connected, go to the BT menu in your phone's settings, click on paired devices, unpair, and delete the BT name, then reconnect according to the prompts.
3. Try restarting the APP or your phone.

****NO TRANSLATION RESULTS ANNOUNCED?****


1. When the network signal is poor, the translation may be sluggish. It is recommended to enable airplane mode and restart the network.

****PACKAGING LIST****

- 1 Translator
- 1 Manual
- 1 Charging Cable

PEIKO

Documents / Resources

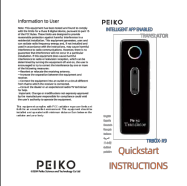	<p>PEIKO TRBOX-X9 Two Way Translator Device [pdf] User Guide</p> <p>TRBOX-X9, TRBOX-X9 Two Way Translator Device, Two Way Translator Device, Translator Device, Device</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.