

## Contents [ [hide](#) ]

- [1 Perixx PB-725 Wireless Keyboard](#)
- [2 Product Usage Instructions](#)
- [3 Product Illustration](#)
- [4 Specification](#)
- [5 Multimedia keys Please press “Fn + Fn Lock” before using multimedia keys.](#)
- [6 Gesture functionality](#)
- [7 Frequently Asked Questions](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



## Perixx PB-725 Wireless Keyboard



## Product Usage Instructions

## Pairing the Keyboard

1. Ensure the keyboard is turned on.
2. Press and hold the Connect Button for five seconds until the corresponding indicator light flashes rapidly.
3. Once pairing is complete, the indicator light will turn off, indicating successful pairing.


## Charging and Battery Indicator

The Low Battery Indicator will alert you when the battery is running low. Make sure to replace the AAA batteries promptly.

## Using Bluetooth Connectivity


You can connect the keyboard via Bluetooth 1 or Bluetooth 2. Follow the pairing instructions for your desired connection.

## Product Illustration

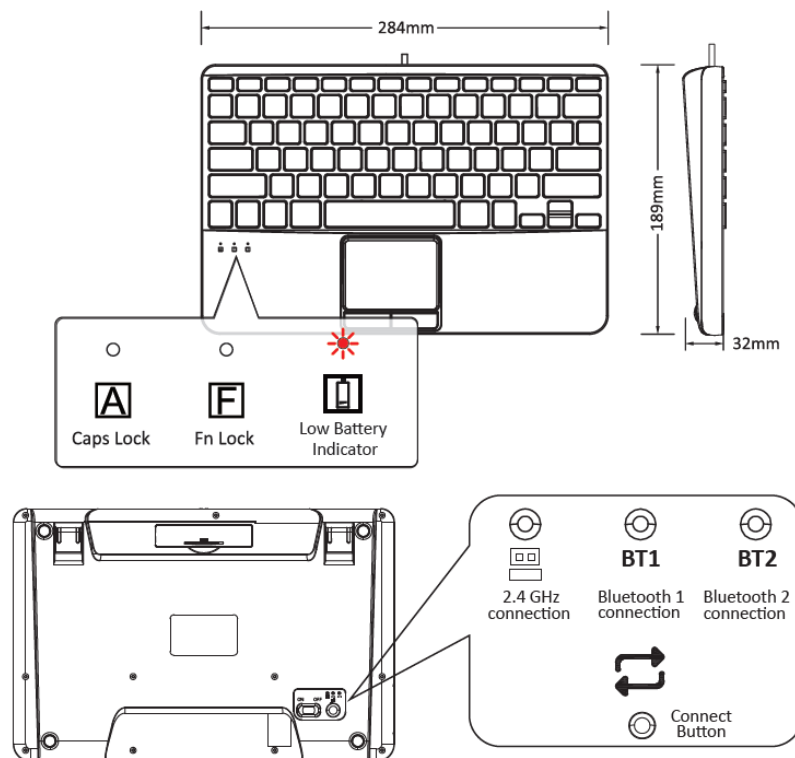


## How do you connect PERIBOARD-725?

### 2.4GHz connection

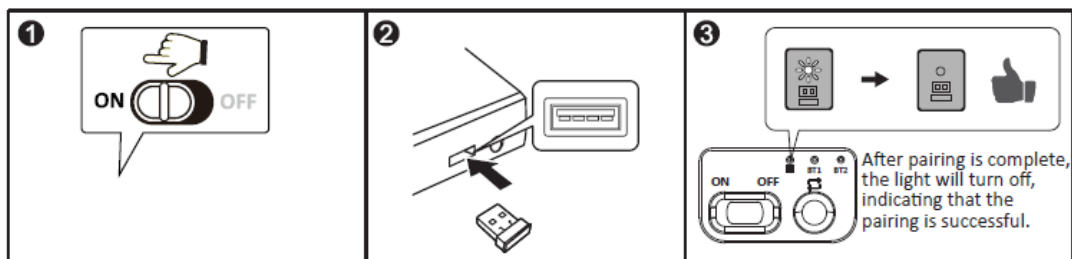

#### Windows Bluetooth

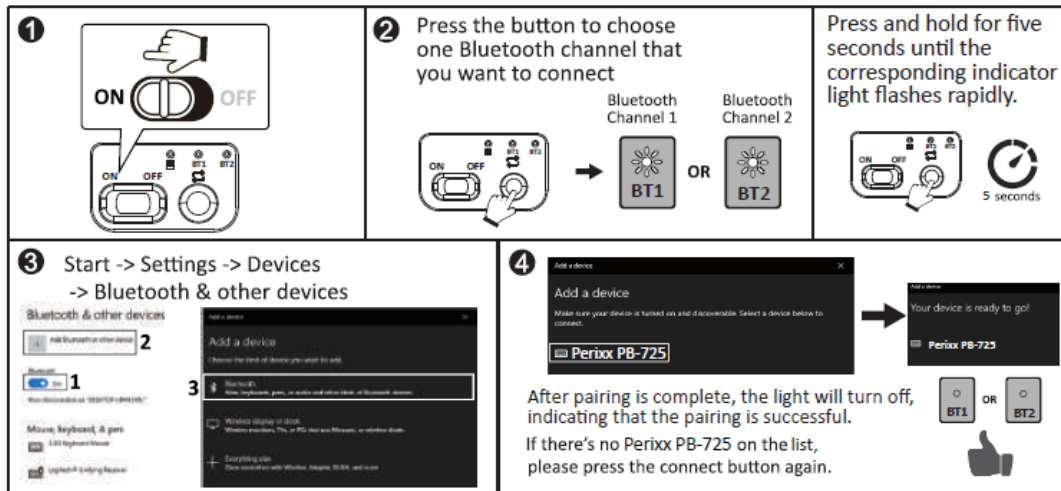

If the Bluetooth pairing fails, please remove Perixx PB-725 from the list of paired devices and redo it from Step 1.

### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

#### NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **NOTE 2:**

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: Z2G-PERIBOARD725

#### **CE Caution**

- Hereby declares that this Product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the internet address:

<https://perixx.com/pages/download-user-manual>

- This product is intended for sale and application in a business environment.
- RED Article 10 2-This product can be used across EU member states
- RED Article 10 10-The product is a class 1 product, No restrictions
- Ensure that the product has undergone SAR testing at the appropriate distance and complies with the requirements of EN 62479:2010.
- Frequency Range: 2405- 2474MHz
- Max.RF Output Power: 3.11 dBm (EIRP)

#### **English(US/UK)**

#### **Caution**

The manufacturer and resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:

- Any attempt to dismantle, change, or modify the product in any manner
- Malfunction or damage is due to misuse or improper alteration, or repair.
- Malfunction or damage caused by external influences, such as falling
- Malfunction or damage is caused by fire, salt, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
- Malfunction or damage is caused by other devices connected to the products.
- Malfunction or damage is caused by a high temperature, humid, greasy, dusty, and hazardous environment.
- You are cautioned that changes or modifications not expressly approved by Perixx Computer GmbH could void your authority to operate the equipment.
- All brand names, trademarks, and logos are the properties of their respective owners.

**Please note:** Long-term repetitive use of any keyboard and mouse could cause injury to the user. Perixx recommends users avoid excessive use of this or any keyboard and mouse.

#### Important Safety Instructions:

- Avoid dropping,
- Do not disassemble.
- This product is suitable for moderate climates only.
- The maximum ambient temperature during use of this product must not exceed 40 degrees.
- Open flame sources, such as candles, must not be placed on this product.
- Only use a dry cloth or brush to clean this product.

Perixx offers a one-year limited warranty with an optional one-year extension.


## Specification

Interface	2.4GHz/BT 5.0	Number of keys	78 keys (US layout)
Size	284*189*32mm	Type of keyboard	Scissor-Switch
Weight	484±10g	Actuation distance	1.35±0.1mm
Input current	3V/15mA	Total travel distance	2.00+0.30/-0.2mm
Battery required	AAA batteries 2pcs	Durability	3 million keypresses
Material	ABS	Operating Temperature	-5°C ~ 45°C
Operating system requirements	Win 7 or later	Storage Temperature	-20°C ~ 60°C

(US/UK)

## Multimedia keys

Please press “Fn + Fn Lock” before using multimedia keys. 

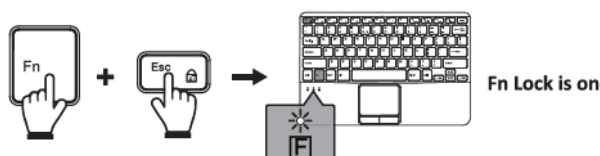

	Volume up		Play/Pause		Scroll Lock
	Volume down		Next Track		Pause
	Mute		Touchpad on/off		Insert
	Previous Track		Print Screen		



## Gesture functionality

	Single-finger tap and move: Move the cursor		Three-finger swipe up simultaneously: Open the Mission Control window
	Two-finger swipe outward or inward: Zoom in/out		Three-finger swipe left/ right simultaneously: Switch between active windows
	Two-finger swipe up and down/left and right simultaneously: Scrollbar moves vertically/horizontally		Three-finger double tap quickly: Search
	Three-finger swipe down simultaneously: Back to desktop		Four-finger double tap quickly: Open the active center


Equipment name		PERIBOARD-725 Type designation (Type)				
Unit	Restricted substances and its chemical symbols					
	(Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium Cr <sup>+6</sup>	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
	○	○	○	○	○	○
	○	○	○	○	○	○
	○	○	○	○	○	○
	○	○	○	○	○	○
<p>Note 1 : "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>Note 2 : "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>Note 3 : The " - " indicates that the restricted substance corresponds to the exemption</p>						

- <https://eu.perixx.com/>
- Perixx Computer GmbH
- Heerdter Landstrasse 189e, 40549 Düsseldorf, Germany +49-211-569488-00
- Manufacturer: Perixx Technology (Shenzhen) Co., Ltd.
- Address: #A509-510 JuChuangJinGu Building,
- Xinguang Road 43, Xili Street, Nanshan District,
- Shenzhen City, China
- Customer Service: [shop@perixx.com](mailto:shop@perixx.com)

## Frequently Asked Questions

- **Q: How do I know if the pairing was successful?**  
A: The indicator light will turn off, indicating a successful pairing process.
- **Q: What are the battery requirements for this keyboard?**  
A: The keyboard requires two AAA batteries for operation.
- **Q: What operating systems are compatible with the PERIBOARD-725?**  
A: The keyboard is compatible with Windows 7 or later operating systems.

## Documents / Resources

 <p>PERIBOARD-725 Wireless Keyboard</p>	<p><a href="#">Perixx PB-725 Wireless Keyboard [pdf]</a> User Manual</p> <p>PB-725, PB-725 Wireless Keyboard, PB-725, Wireless Keyboard, Keyboard</p>
--	---

## References

- [User Manual](#)

📁 Keyboard, PB-725, PB-725 Wireless Keyboard, perixx, Wireless

📁 Perixx Keyboard

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos



are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.