




perixx Periduo-715 Keyboard and Mouse Combo User Manual


[Home](#) » [Perixx](#) » perixx Periduo-715 Keyboard and Mouse Combo User Manual 

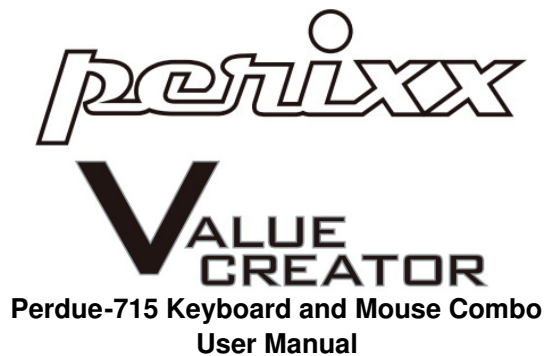



Contents

- [1 Product Illustration](#)
- [2 Keyboard Indicators](#)
- [3 How do you connect PERIDUO-715?](#)
- [4 Important Safety Instructions:](#)
- [5 Specification](#)
- [6 Multimedia keys](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)


Product Illustration

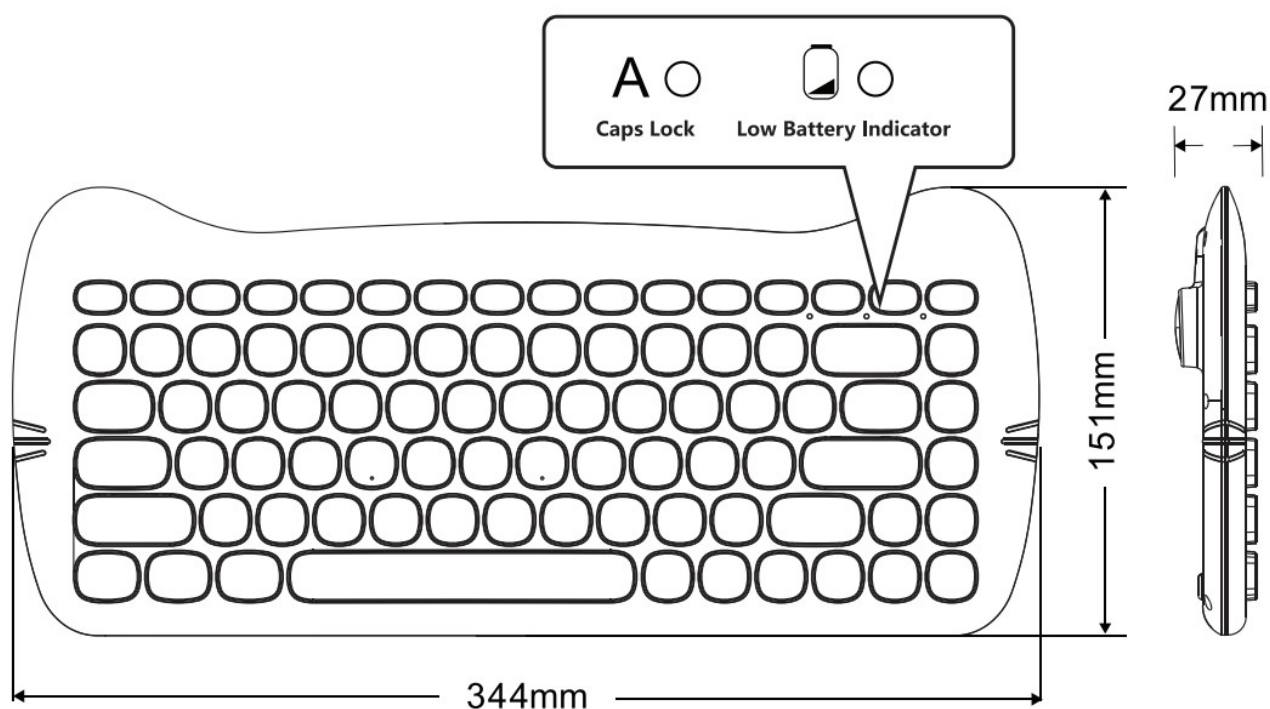


Keyboard Indicators

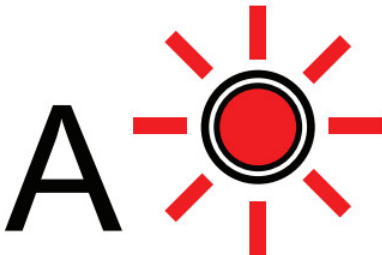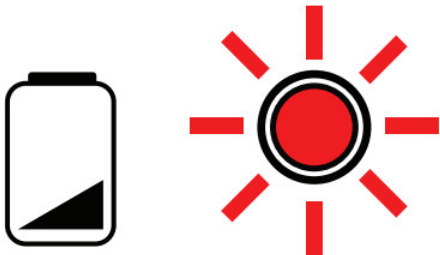	
Cap Lock On	Low Battery Indicator (LED keeps flashing)

Product Illustration

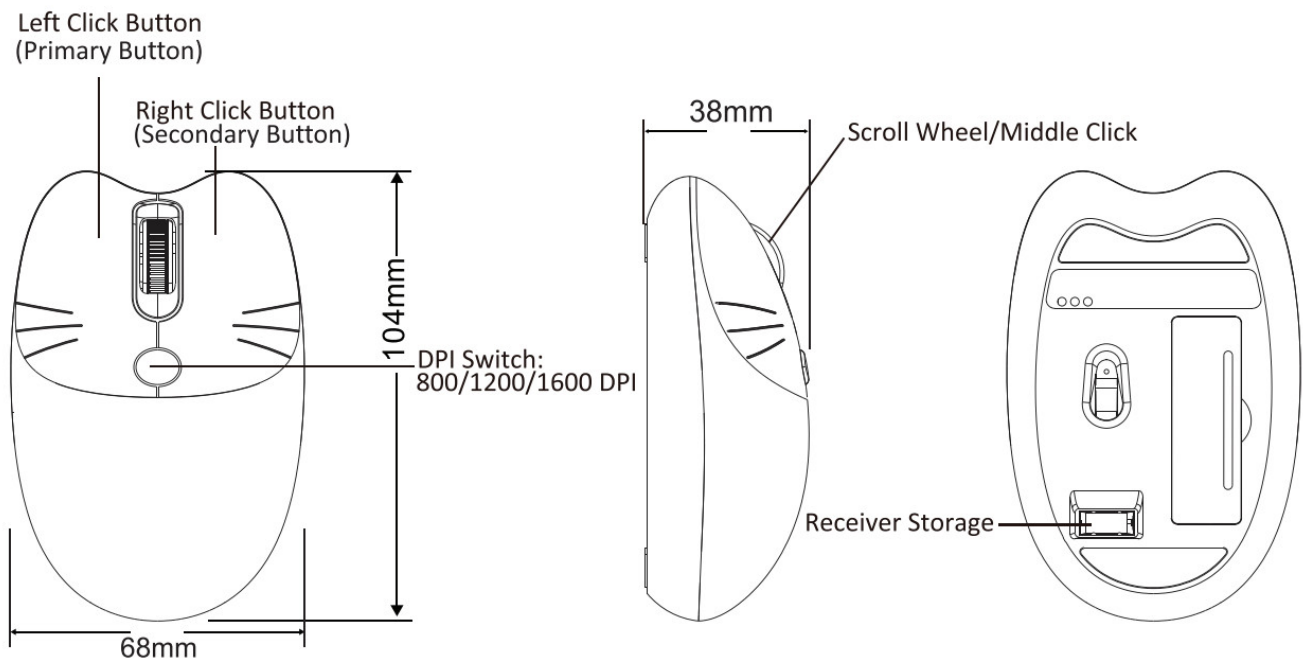

How do you connect PERIDUO-715?

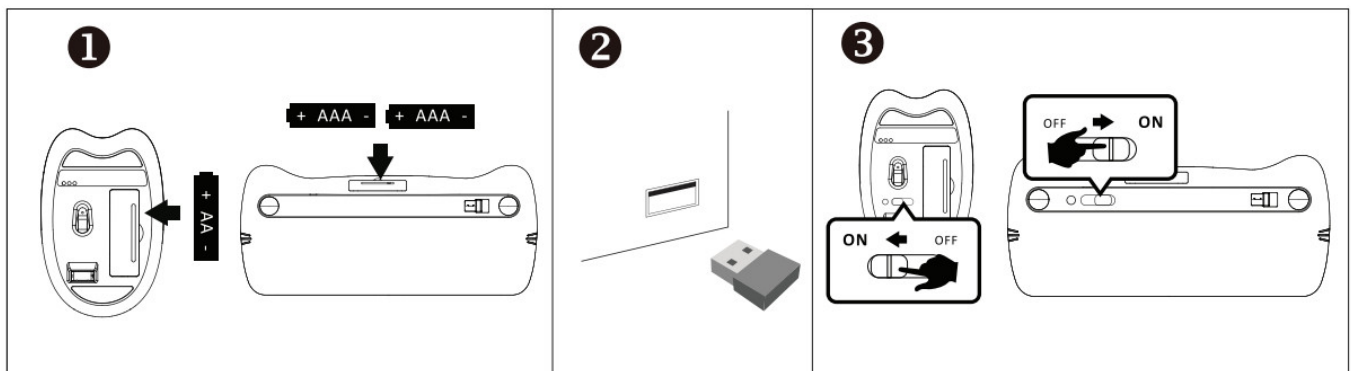

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution

- The manufacturer and re-resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:
 - ▶ Any attempt to dismantle, change or modify the product in any manner
 - ▶ Malfunction or damage is due to misuse or improper alteration or repair.
 - ▶ Malfunction or damage caused by external influence such as falling
 - ▶ Malfunction or damage is caused by fire, salt, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
 - ▶ Malfunction or damage is caused by other devices connected to the products.
 - ▶ Malfunction or damage is caused by high temperature, humid, greasy, dusty, and hazardous environment.
- You are cautioned that changes or modifications not expressly approved by Perixx Computer GmbH could void your authority to operate the equipment.
- All brand names, trademarks, and logos are the properties of their respective owners.

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to the user. Perixx recommends users avoid excessive use of this or any keyboard and mouse.

Important Safety Instructions:

- Avoid dropping.
- Do not disassemble.
- This product is suitable for moderate climates only.
- The maximum ambient temperature during use of this product must not exceed 40 degree
- Open flame sources, such as candles, must not be placed on this product.
- Only use a dry cloth or brush to clean this product.

Perixx offers a one-year limited warranty with an optional one-year extension.

Specification

***Wireless keyboard**


Interface	2.4GHz	Operating system	Win 7 or later
Size	344*151*27mm	requirements	
Weight	458±10g	Number of keys	84 keys
Input current	3V/6mA	Type of keyboard	Membrane
Battery required	AM batteries 2pcs	Actuation distance	2.5±0.2mm
Material	ABS	Total travel distance	5.0±0.2mm
		Durability	8 million keypresses
*Wireless Mouse			
Interface	2.4GHz	Number of buttons	S
Size	104*68*38mm	DPI	800/1200/1600
Weight	78±5g	Acceleration	8G
Input current	1.5V/15mA	Tracking speed	30IPS
Battery required	AA battery 1pc	Report rate	125 Hz
Material	ABS	Durability	3 million keypresses
Operating system requirements	Win 7 or later		









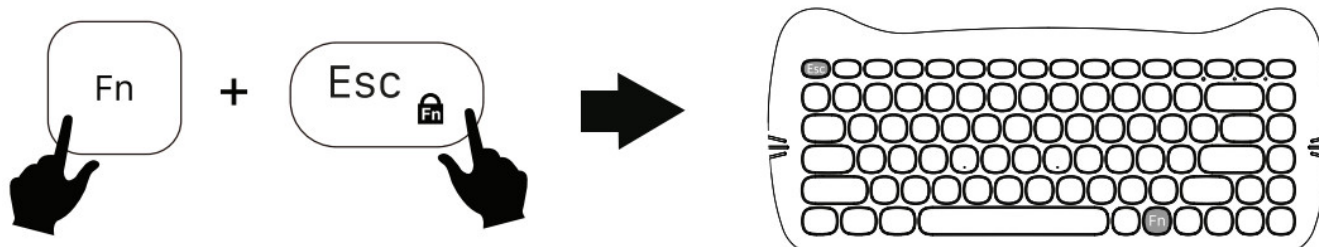



Sleep mode

	Sleep mode	Deep sleep mode
Y/N	Yes, after 1 minute	Yes, after 8 minutes
How to wake the keyboard/mouse	Move or click	Move or click

Multimedia keys

****Please press “Fn + Fn Lock” before using multimedia keys.****



 F1	Previous Track	 F7	Browser
 F2	Play/Pause	 F8	Search
 F3	Next Track	 F9	E-mail
 F4	Mute	 F10	My favorite
 F5	Volume down	 F11	Save
 F6	Volume up	 F12	Settings

Unit	Restricted substances and their chemical symbols					
	Lead (Pb)	: Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium Cr+6	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
	0	0	0	0	0	0
	0	0	0	0	0	0
	0	0	0	0	0	0
	0	0	0	0	0	0


Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicates that the percentage content of the restricted substance exceeds the reference percentage value of the present condition.

Note 2: "0" indicates that the percentage content of the restricted substance does not exceed the percentage of the reference value of presence.

Note 3 : The " – " indicates that the restricted substance corresponds to the exemption



Documents / Resources

	<p>periXX Periduo-715 Keyboard and Mouse Combo [pdf] User Manual Periduo-715 Keyboard and Mouse Combo, Periduo-715, Keyboard and Mouse Combo</p>
---	--

Manuals+.