




Perixx PERIPAD-205 Numeric Keypad User Manual

[Home](#) » [Perixx](#) » Perixx PERIPAD-205 Numeric Keypad User Manual 

Contents

- [1 Perixx PER IPAD-205 Numeric Keypad](#)
- [2 Product illustrations](#)
- [3 CAUTION](#)
- [4 Specification](#)
 - [4.1 PERIPAD-205](#)
 - [4.2 PERIPAD-705](#)
- [5 Important Safety Instructions](#)
 - [5.1 PERIOD-705](#)
- [6 FCC Warning](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




Perixx PER IPAD-205 Numeric Keypad





Product illustrations

PERIPAD-205

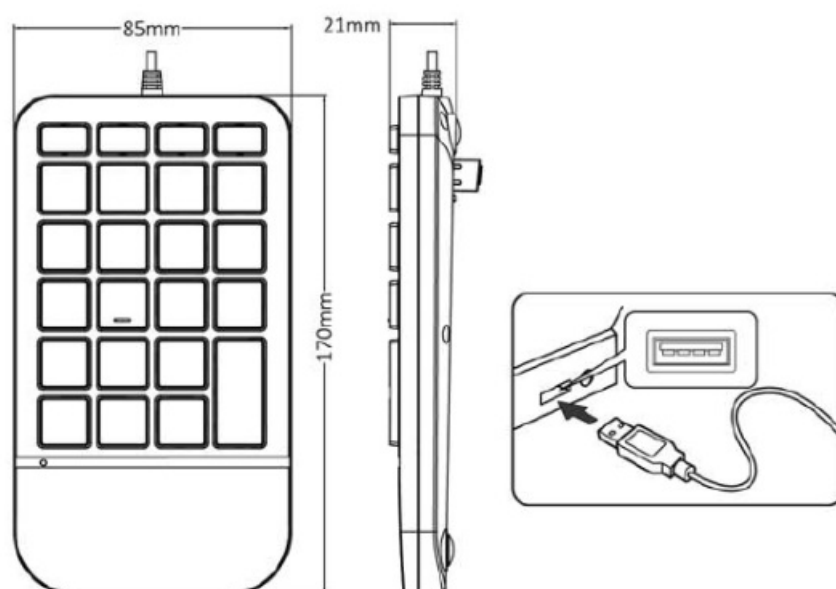

PERIPAD-705

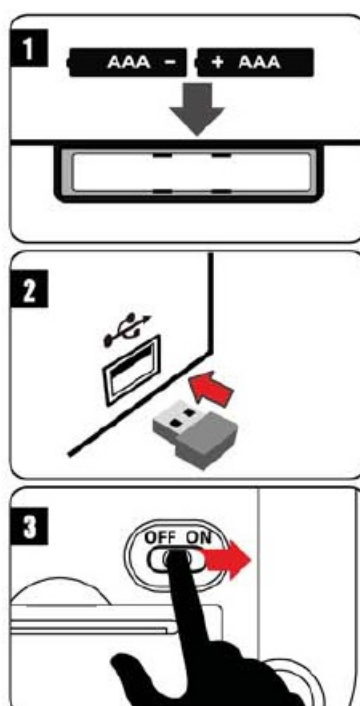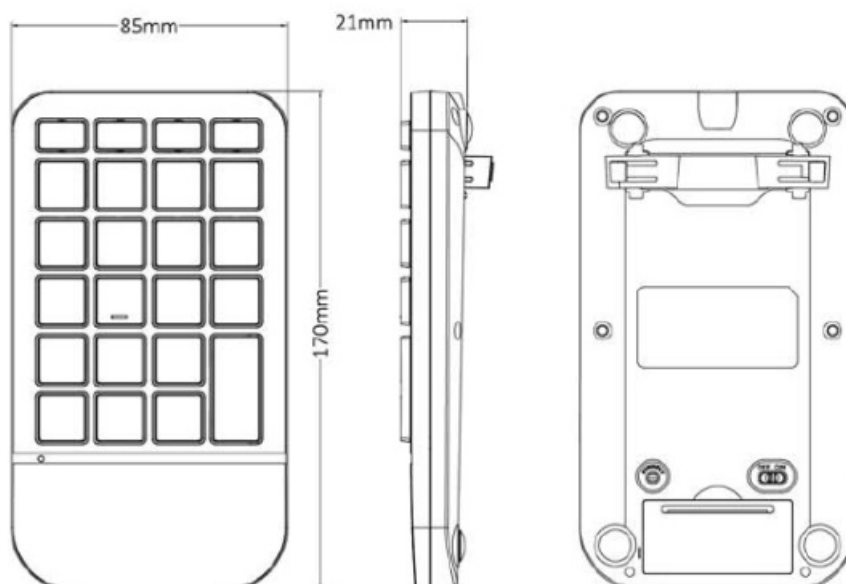

CAUTION

- The manufacturer and re-resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:
- Any attempt to dismantle, change or modify the product in any manner
- Malfunction or damage due to misuse or improper operation or report.
- Malfunction or damage caused by external influence such as falling
- Malfunction or damage caused by fire, oil, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
- Malfunction or damage is caused by other devices connected to the product, etc.
- Malfunction or damage is caused by high temperature, humid, greasy, dusty, and hazardous environments.
- You are cautioned that changes or modifications not expressly approved by Prix, Computer GmbH could void the authority to operate the equipment.
- All brand names, trademarks and logos are the properties of their respective owners.

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to the user. Peripad recommends users to avoid excessive use of this or any keyboard and mouse.

Specification

PERIPAD-205

- interface ; USB 2.0
- Size 170•55•21mm
- Cable Length 1M
- Weight 150g
- Material ABS
- OS requirement Win XP / above
- Key number 23
- Key Type Membrane
- Actuation distance 1.30mm
- Total travel distance 2.2±0.2mm
- Durability 10 million keypresses

PERIPAD-705

- Interface: 2.4G
- Size: 110•55•21mm
- Input Current: 3V / ~10mA
- Weight: 135g
- Material: ABS
- OS requirement: Win XP / above
- Key number: 23
- Key Type: Membrane
- Actuation distance: 1.30mm

- Total travel distance: 2.2±0.2mm
- Durability: 10 million keypresses

Important Safety Instructions

- Avoid Dropping.
- Do not disassemble.
- Do not expose to liquids.
- This product is suitable for indoor use only.
- The maximum ambient temperature during use of this product must not exceed 40 degrees
- Open flame sources, such as candles, must not be placed on this product
- Only use a dry cloth or brush to clean this product.

PERIOD-705

- LEO Indicator Status
- Flashing red Power On
- Flashing red Pairing
- Flashing red Low battery

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources

	<p>Perixx PERIPAD-205 Numeric Keypad [pdf] User Manual PERIPAD-705, PERIPAD705, Z2G-PERIPAD-705, Z2GPERIPAD705, PERIPAD-205, PERIPAD-705, PERIPAD-205 Numeric Keypad, PERIPAD-205, Numeric Keypad</p>
--	---