

# phrozen V2 Cure UV Post-Curing Lamp User Manual


[Home](#) » [phrozen](#) » phrozen V2 Cure UV Post-Curing Lamp User Manual 

## Contents


- [1 phrozen V2 Cure UV Post-Curing Lamp](#)
- [2 Power Supply & Light Switch](#)
- [3 To Set Curing Time](#)
- [4 How to Operate the UV Curing Lamp](#)
- [5 Warning](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



**phrozen V2 Cure UV Post-Curing Lamp**

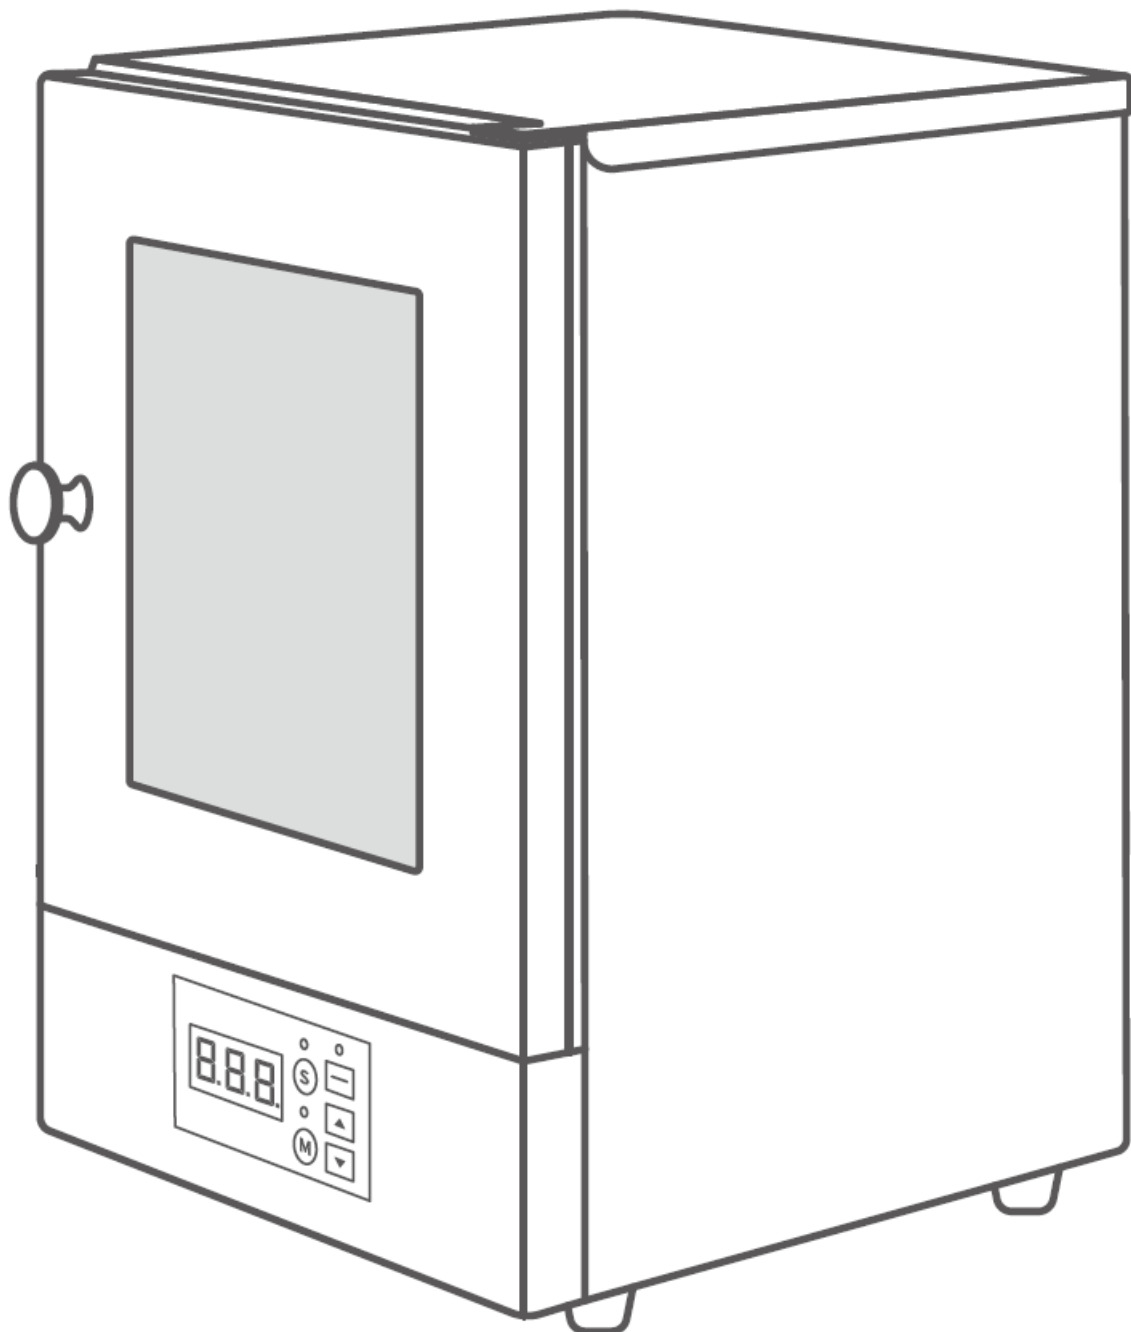

## Power Supply & Light Switch

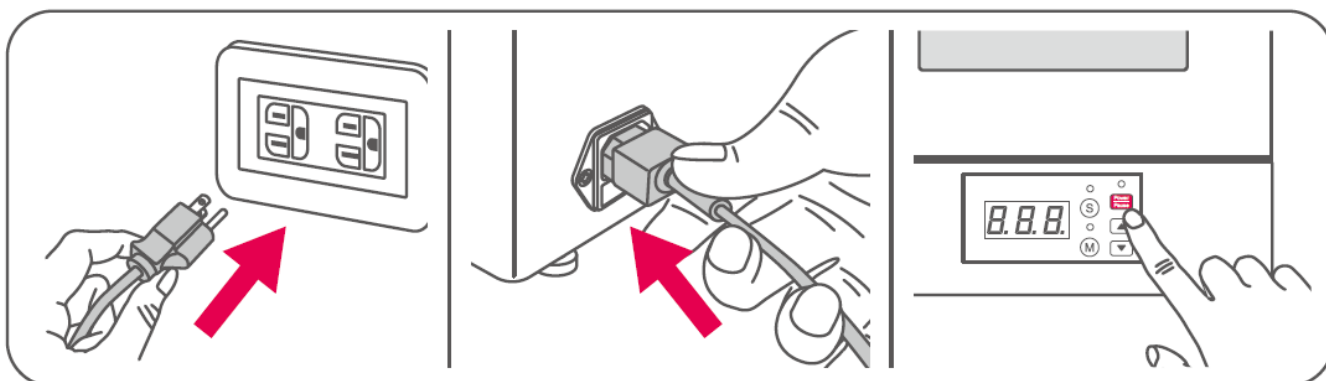

### Turn on the device

Connect the power cable. Press the Power button to turn on the device.


### Turn off the device

Long press the Power button. The curing lamp will turn off after a beep sound.

## To Set Curing Time


### Click the button S for preset modes

This comes with three curing time settings: 5 min, 10 min, 20 min.

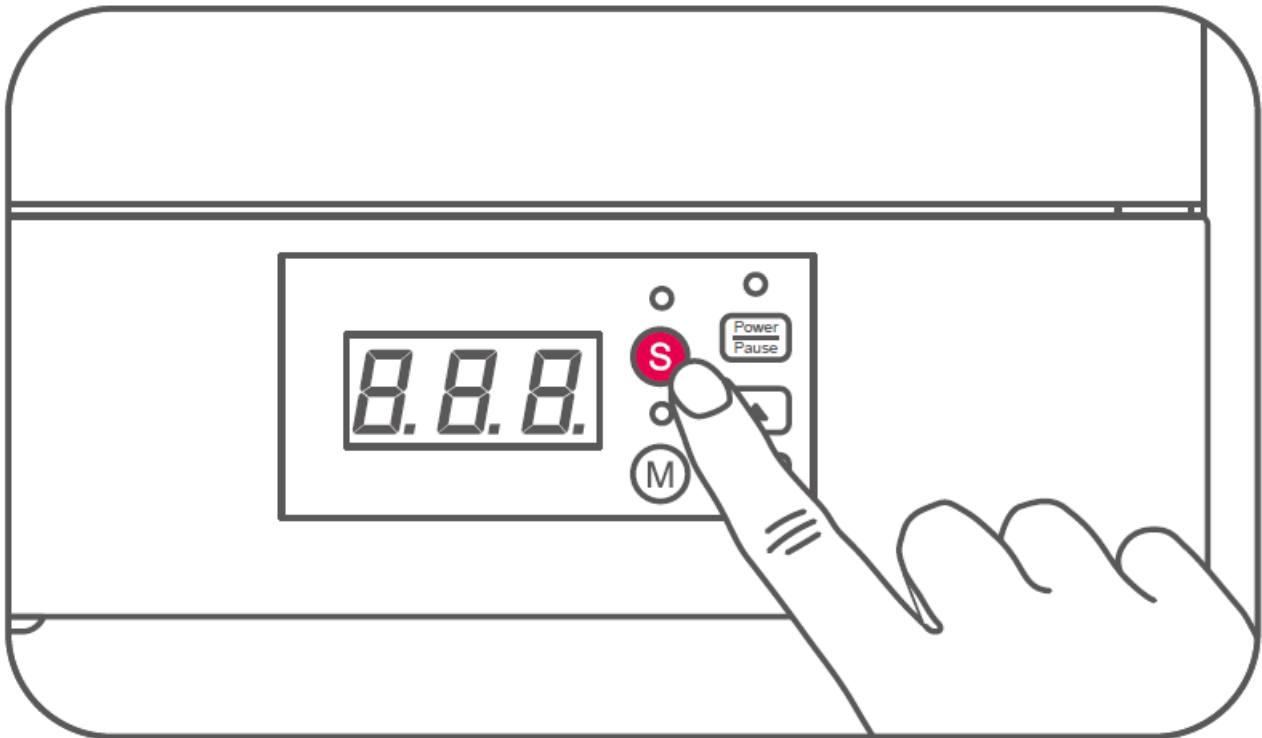


### Click the button for custom modes

Click on the up and down keys to increase or decrease 1 minute each time. Long press the keys to quickly increase or decrease the minutes.

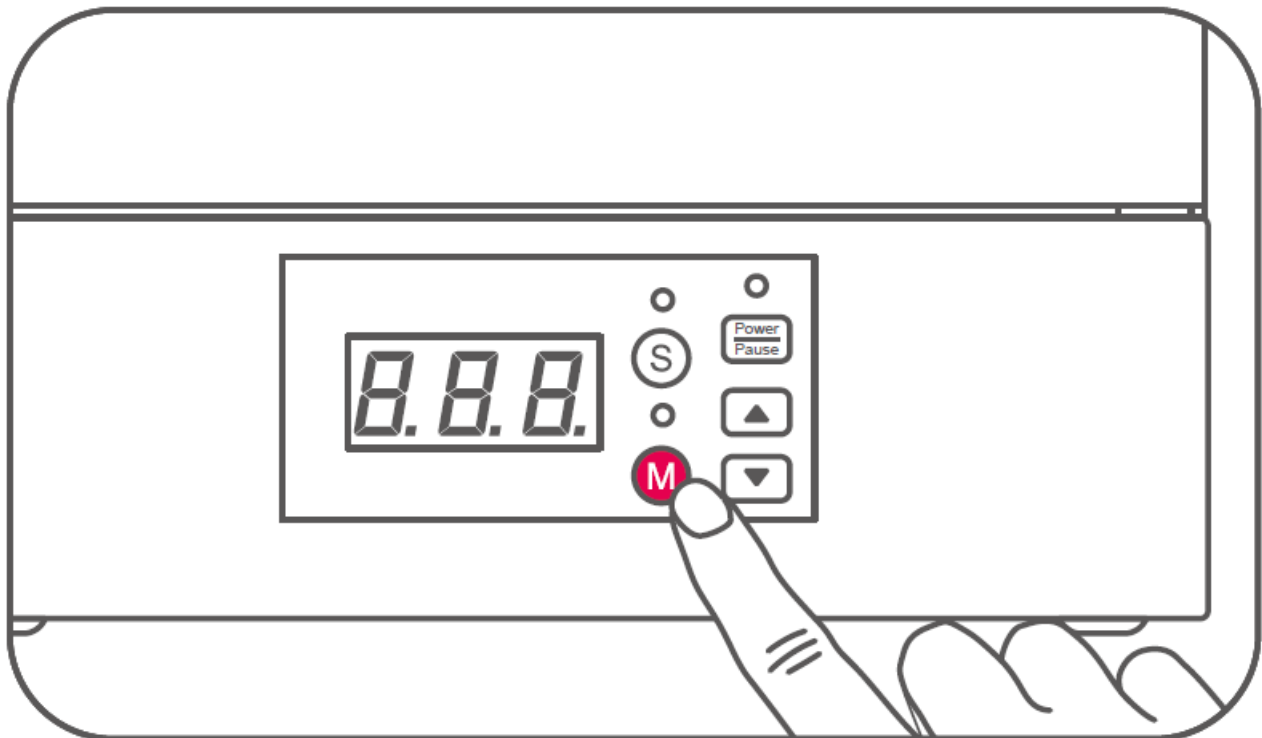

## How to Operate the UV Curing Lamp

Close the UV lamp cover. Click on the Power button. The curing lamp will begin operation.

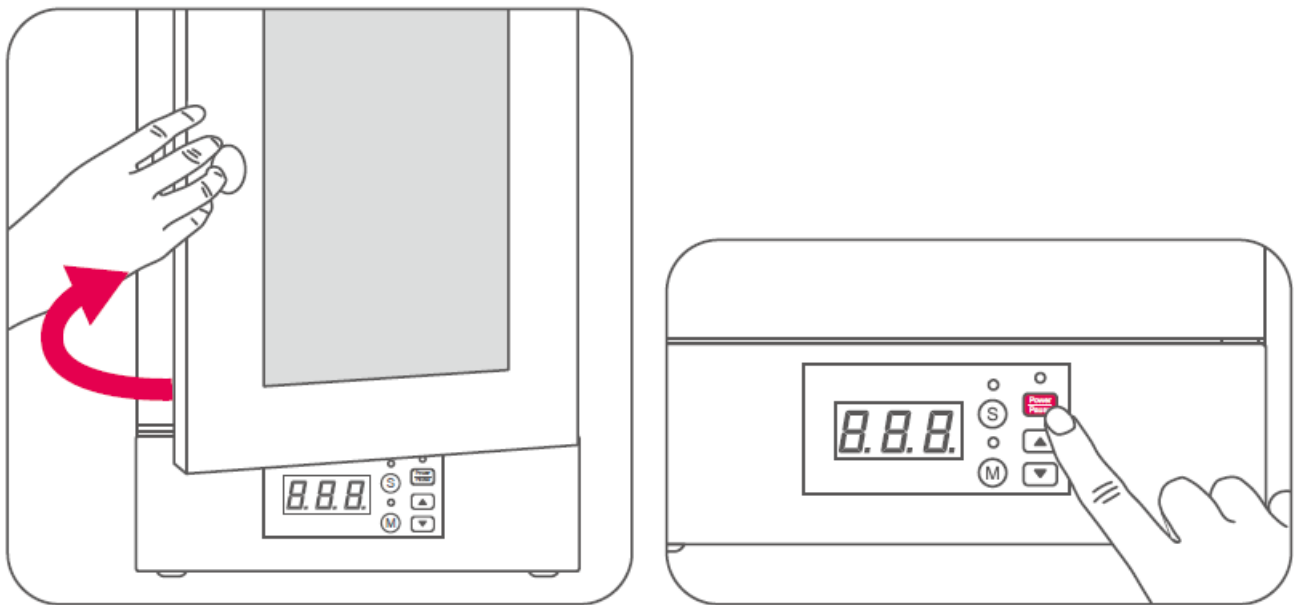


## Warning

- The UV lamp needs to be closed completely for the device to begin operation.
- Do not stare at the UV curing lights without closing the UV lamp as this may cause damage to your eyes.
- This appliance can be used by children aged 8 and above as well as by persons with reduced physical, sensory, or mental capabilities, if supervised or given instruction regarding the use of the appliance in a safe way, to ensure that the hazards involved are understood. Children are NOT allowed to play with the appliance.
- Children are NOT allowed to clean or provide device maintenance without adult supervision.

## Standard Maintenance Procedure

Please use sanitizing alcohol to clean the outside of your device. Do not use any oily or corrosive liquids to clean the device.

## Documents / Resources

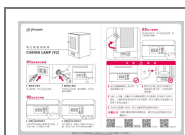

[phrozen V2 Cure UV Post-Curing Lamp](#) [pdf] User Manual  
V2 Cure UV, Post-Curing Lamp, V2 Cure UV Post-Curing Lamp, Curing Lamp, Lamp