



510 DL Centro Variable
Voltage Vape

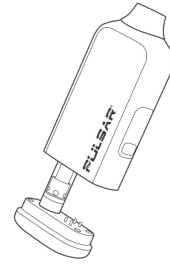

PULSAR 510 DL Centro Variable Voltage Vape Instruction Manual


[Home](#) » [Pulsar](#) » PULSAR 510 DL Centro Variable Voltage Vape Instruction Manual 

Contents

- [1 PULSAR 510 DL Centro Variable Voltage Vape](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 SPECS](#)
- [6 KIT INCLUDES](#)
- [7 POWER ON/OFF](#)
- [8 PRE-HEATING](#)
- [9 CHANGE VOLTAGE SETTINGS](#)
- [10 CHARGING](#)
- [11 PROTECTION FEATURES](#)
- [12 INSTRUCTIONS](#)
- [13 CLEANING INSTRUCTIONS](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



PULSAR 510 DL Centro Variable Voltage Vape

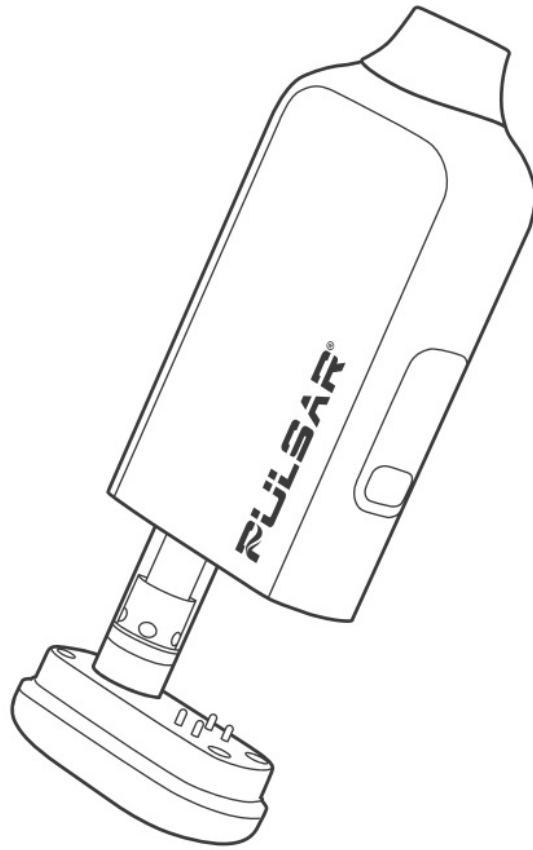

Product Specifications

- **Size:** 3.45 x 1.67 x 0.78 (87.7mm x 42.4mm x 19.8mm)
- **Max Cart Size:** .55 x 2.28 (14mm x 58mm)
- **Battery Capacity:** 650mAh
- **Voltage:** 1.8v / 2.4v / 2.8v / 3.4v / 3.8v (1.8v Pre-heat)
- **Charging:** USB-C
- **Resistance:** 0.8

Product Usage Instructions

Power On/Off:

Press the power button quickly 5 times to turn the device on or off.

Pre-Heating:

Quickly pull from the mouthpiece twice or press the power button on the side 2 times to activate the pre-heat function.

Change Voltage Settings:

Press the power button 1 time to change the voltage setting. The screen indicates the voltage setting with various colors.

Charging:

The LED light will be red while charging, and the lightning icon will flash. When fully charged, the LED changes to green and the lightning icon stops flashing.

Protection Features:

- Battery life/cartridge protection: Red light flashes after 10 seconds of continuous use.
- Over-voltage/short-circuit protection: LED flashes red 3 times and device turns off.
- No cartridge/dead cartridge: LED flashes white 3 times.

Cleaning Instructions:

1. Remove the bottom magnetic connector from the battery.
2. Wipe the connector with an isopropyl alcohol pad.
3. Clean inside the air pathway with an alcohol swab in a circular motion.

FAQ

- **How do I know when the device is fully charged?**

The LED changes to green, and the screen shows 100% when fully charged.

- **How do I adjust the voltage settings?**

Press the power button once to cycle through the available voltage options.

- **What do I do if the device enters standby mode?**

Charge the device before using it again if the LED flashes red or white in standby mode.

SPECS

- **Size:** 3.45" x 1.67" x 0.78" (87.7mm x 42.4mm x 19.8mm)
- **Max Cart Size:** .55" x 2.28" (14mm x 58mm)
- **Battery Capacity:** 650mAh
- **Voltage:** 1.8v / 2.4v / 2.8v / 3.4v / 3.8v (1.8v Pre-heat)
- **Charging:** USB-C
- **Resistance:** $\geq 0.8\Omega$

KIT INCLUDES

- 1x Pulsar DL Centro Battery
- 1x Bottom Magnetic Connector

POWER ON/OFF

Press the power button quickly 5 times to turn the device on or off.

PRE~HEATING

Quickly pull from the mouthpiece twice to activate the pre-heat function. You can also press the power button on the side 2 times to activate the pre-heat function.

CHANGE VOLTAGE SETTINGS

You change the setting by pressing the power button 1 time. The screen also indicates the voltage setting.

- **1.8v** – Yellow
- **2.4v** – Purple
- **2.8v** – Green
- **3.4v** – Blue
- 3.8v – Red

CHARGING

The LED light will be red while charging and the lightning icon will flash on screen. When the device is fully charged the LED will change to green and the lightning icon will stop flashing. When the battery is dead the LED will flash red 10 times and enter standby mode to let you know it needs to be charged before it's used again.

PROTECTION FEATURES

- Battery life/ cartridge protection: After 10 continuous seconds of use, the red light will flash 4 times and enter standby mode.
- Over-voltage/short-circuit protection: The LED will flash red 3 times and the device will fully turn off.
- If there is no cartridge or dead cartridge: The LED will flash white 3 times.

INSTRUCTIONS

1. Make sure the bottom magnetic connector is properly connected to the battery. The battery will not charge if the bottom connector is not attached.
2. Before using the DL Centro, fully charge the device using a USB-C charging cable and a standard charging brick. You will see the LED and screen turn on and the light band will be red when the battery is charging.
3. Allow the battery to fully charge before the first use. When the LED light turns green and the screen shows 100% the device is fully charged and can be unplugged.
4. Remove the bottom magnetic connector and firmly screw in the 510-threaded cartridge of your choice.
5. Insert the cartridge into the device and ensure the bottom magnetic connector is properly connected. The LED will flash green to let you know there is a good connection.
6. Press the power button 1 time to adjust the voltage.
7. Activate the pre-heat function to prime the cartridge by giving the unit 2 quick pulls or press the bottom button 2 times. This will activate the device at 1.8v for 15 seconds, the fire symbol will flash on the screen and the LED will slowly change from red to purple. After 15 seconds, the device will switch to your previously selected voltage.
8. Simply pull from the mouthpiece or press and hold the power button to activate the cartridge vapor and enjoy your session.

CLEANING INSTRUCTIONS

1. Remove the bottom magnetic connector from the battery.
2. Wipe the outside and inside of the bottom magnetic connector with an isopropyl alcohol pad. Use an alcohol swab to wipe any excess oil out of the 510 connector.
3. Clean inside the air pathway with an alcohol swab. Using a circular motion, work your way up and down the air pathway until you do not see any more oil.


4. Do not submerge any part of the device in cleaning solution. Allow all parts to air dry prior to reassembly.

NOTE: The mouthpiece is not removable. Attempting to remove it could impair or permanently disable the breath control functionality.

WARNINGS

Do not expose to extreme temperatures or direct sunlight. Do not drop the device or accessories. Do not drop or submerge in any liquid. Do not modify the electronics in any way. This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.

Documents / Resources

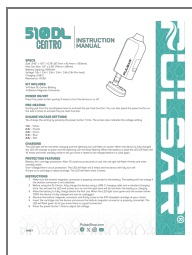

[PULSAR 510 DL Centro Variable Voltage Vape](#) [pdf] Instruction Manual

510, 510 DL Centro Variable Voltage Vape, 510 DL Centro, Variable Voltage Vape, Voltage Vape, Vape

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.