

PYLE PDMICKT34 Wired Microphone Kit Instruction Manual

Home » Pyle » PYLE PDMICKT34 Wired Microphone Kit Instruction Manual


PYLE PDMICKT34 Wired Microphone Kit



Contents

- 1 Cardioid (at 1 KHz)
- 2 Features
- **3 Technical Specs**
- **4 Connecting and Disconnecting The Microphone Cable**
- 5 Usage
- 6 Documents / Resources
- 7 Related Posts

Cardioid (at 1 KHz)

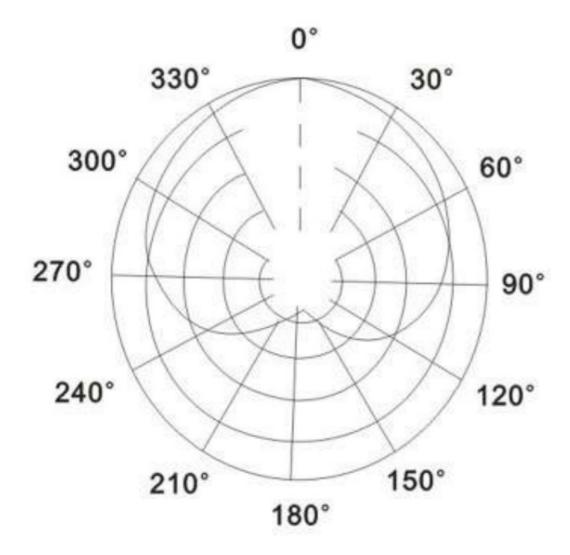

Features

Includes (3) Hand held Microphones & (3) XLR Audio Cables Built-in Acoustic Pop Filters
Ultra-Wide Frequency Response
High Signal Output for Vocals & Singing
Rugged Construction & Steel Mesh Grill
Reinforced Sound Cartridge
ON/OFF Switch for Stage Control
Perfect for Stage Performances or In-Studio Use


Technical Specs

Mic Element Hyper-Cardioid

Pickup Pattern: Unidirectional Moving Coil Mic Construction Material: Zinc Alloy Audio Cable Connectors: XLR to 1/4"

XLR Cable Length: 26'+ Ft. Open Circuit Sensitivity: -54 dB Frequency Response: 60Hz-15kHz

Output Impedance: 600 Ohm, +/-3dB (0dB=1V/Pa@ 1kHz)

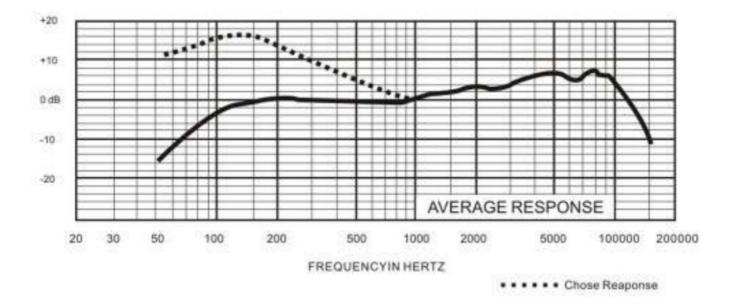


Connecting and Disconnecting The Microphone Cable

- 1. Insert the XLR connector into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone, push the connector into the microphone until it clicks.
- 2. To disconnect the cable and microphone, grasp the connector while depressing the tab. Pull the connector away from the microphone.

Usage

1. For the best Gain-before-feedback and isolation from undesired background noise, aim the microphone. toward the sound resource and away from undesired sound resource.

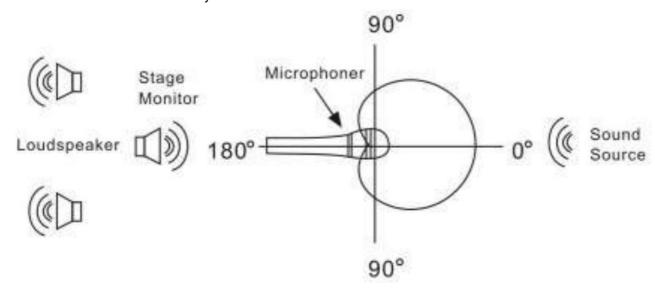

2. Do not cover any part of the grille with your hand, covering the grille alters the sound and distorts the polar pattern in creasing the chance for feedback.





Cautions

- 1. If the head of the microphone is covered by hand or brought close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and speaker.
- 2. It is important to keep foreign particles out of the grill and the windscreen because they may alter the frequency response of the microphone.
 - The grill shall be periodically cleaned using warm, soapu water, rinsed with plain water and letdry before replacing.
- 3. Due to the high sensitivity of the cartridge, do not drop it from high or apply strong shock to it.
- 4. To maintain the sensitivity and quality of sound reproducing, avoid exposing it to moisture and exreme temperatures.



Documents / Resources



PYLE PDMICKT34 Wired Microphone Kit [pdf] Instruction Manual PDMICKT34, PDMICKT34 Wired Microphone Kit, Wired Microphone Kit, Kit