



PYLE PSMRS05 Metal Microphone Isolation Shield User Guide

[Home](#) » [Pyle](#) » PYLE PSMRS05 Metal Microphone Isolation Shield User Guide 



PSMRS05 Metal Microphone Isolation Shield User Guide

Contents

- [1 PSMRS05 Metal Microphone Isolation Shield](#)
- [2 PACKAGE CONTENTS](#)
- [3 HOW TO INSTALL](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

PSMRS05 Metal Microphone Isolation Shield

PYLE

PyleUSA.com

Patna – PSMRS115

Metal Microphone Isolation Shield

Vocal Booth and Studio Recording Acoustic Panel




PSMR504
Three Panels Metal Isolation Shield



PSMR505
Five Panels Metal Microphone
Isolation Shield

PACKAGE CONTENTS


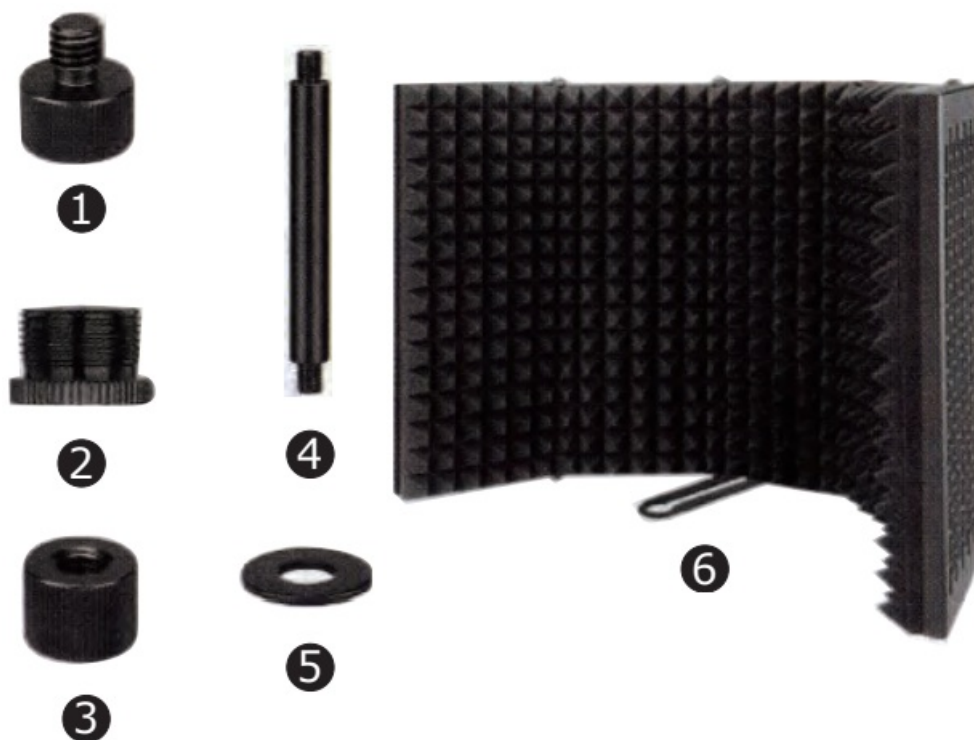


HOW TO INSTALL

USAGE 1 Use on the desktop

Step 1: Take out the isolation shield and all accessories on the desk.

Step 2: Install the adapter on connecting rod (and then Install the microphone on the adapter).

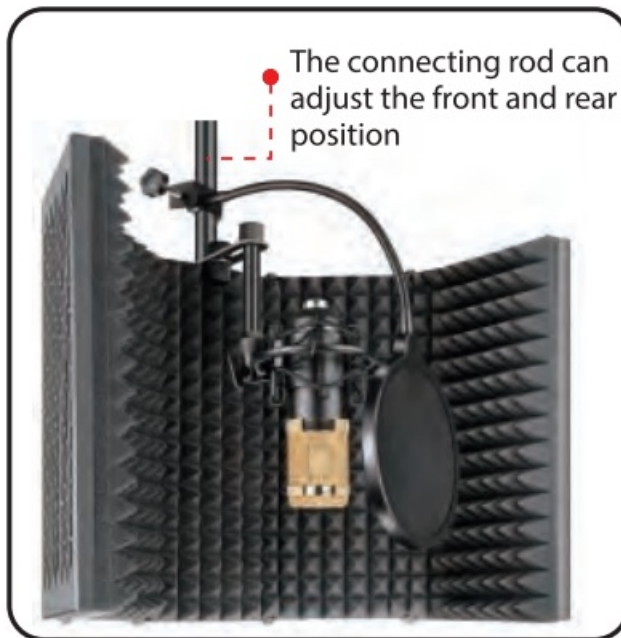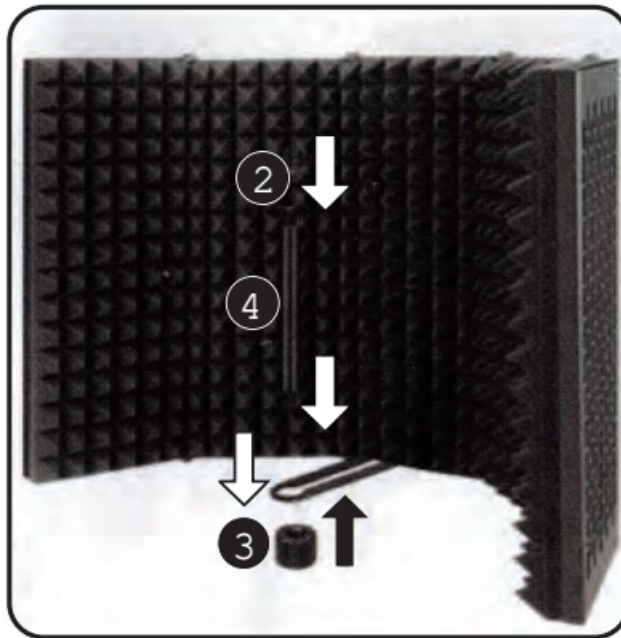

Step 3: Pass the connecting rod through the crossbar of the isolation shield (the connecting rod can move forward and backward to adjust the position)

Step 4: Combine connecting rod and washer with a nut.

Step 5: Use it on the desk (Note: microphone and shock mount are not included).

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

USAGE 2

Use with floor stand (5/8 interface)

Step 1: Take out the isolation shield and all accessories on the desk.


Step 2: Take out the floor stand.

(Note: The floor stand, microphone, shock mount, and pop filter is not included in the product and the customer needs to prepare it himself).

Step 3: Combine the nut, connecting rod, and adapter (the connecting rod can move forward and backward to adjust the position).

Step 4: Install the washer, screws, and nut on the crossbar of the isolation shield

Step 5: Fix the isolation Shield on the floor stand (as the picture shows)

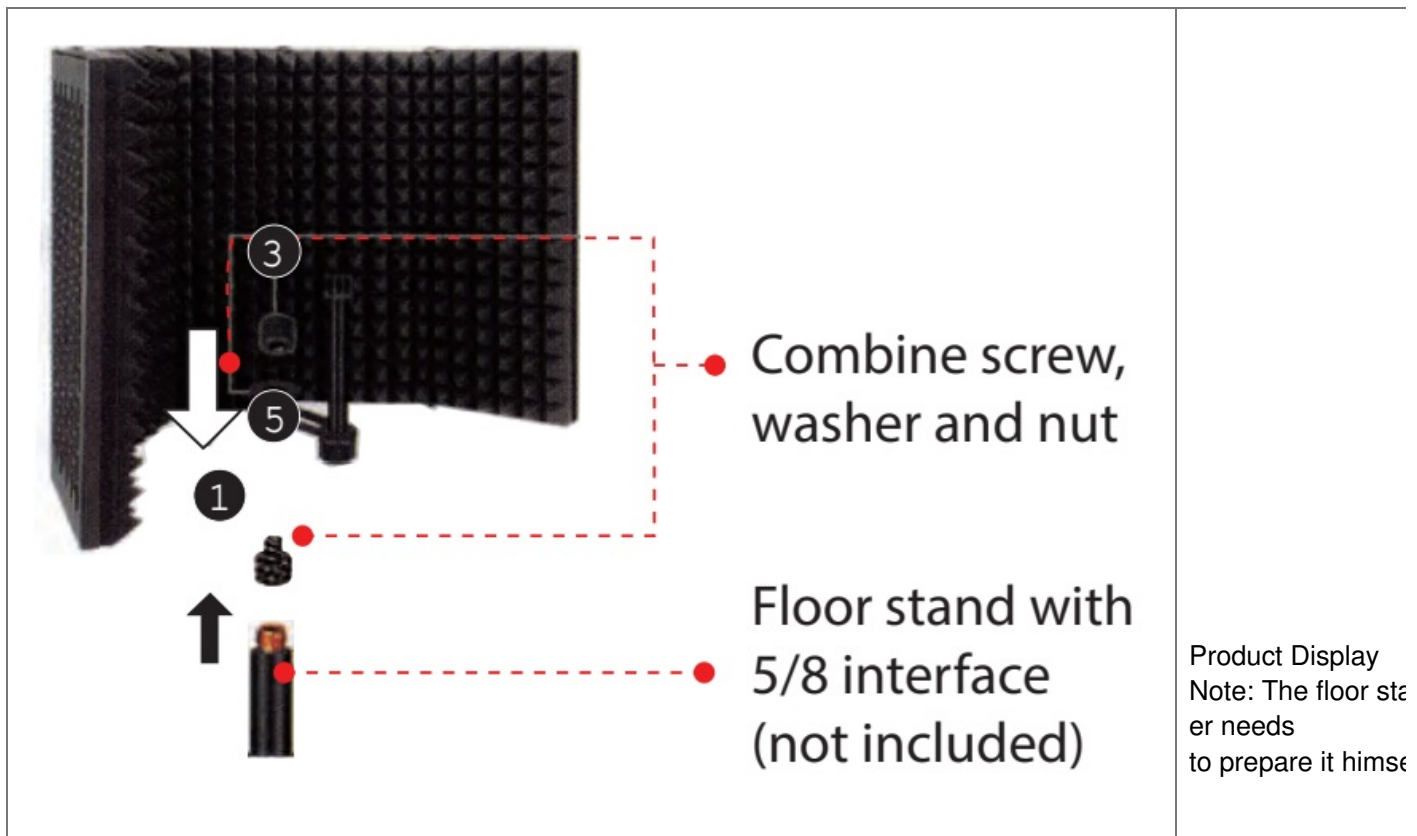

USAGE 3

Use with our stand (3/8 interface)


Step 1: Take out the isolation shield and all accessories on the desk.

Step 2: Take out the door stand.

(Note) That our stand, microphone, shock mount, and pop filter are not included in the product and the customer needs to prepare it himself).

Step 3: Combine the nut, washer, connection rod, and adapter (the connecting rod can move forward and backward to adjust the position).

Step 4: Fix the sound enclosure to their stand with nuts and washers.

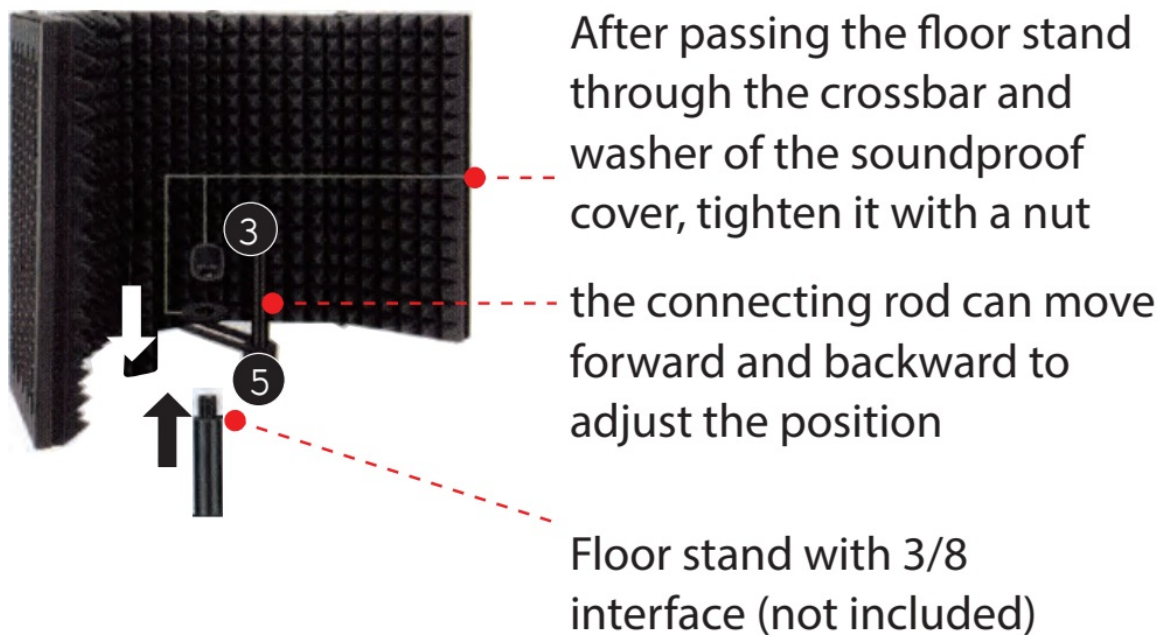

California Prop 65 Warning





WARNING: This product contains Nickel carbonate which is known to the state of California to cause

cancer birth defects and other reproductive harm. Do not ingest.
For more info go to: www.P65warnings.ca.gov

www.PyleUSA.com

Documents / Resources

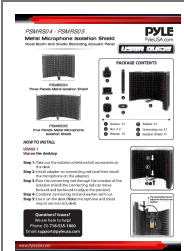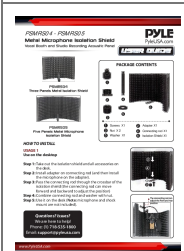	<p>PYLE PSMRS05 Metal Microphone Isolation Shield [pdf] User Guide PSMRS04, PSMRS05, Metal Microphone Isolation Shield, PSMRS05 Metal Microphone Isolati on Shield, Microphone Isolation Shield, Isolation Shield, Shield</p>
	<p>PYLE PSMRS05 Metal Microphone Isolation Shield [pdf] User Guide PSMRS04, PSMRS05, Metal Microphone Isolation Shield, PSMRS05 Metal Microphone Isolati on Shield, Microphone Isolation Shield, Isolation Shield</p>