



rapoo M200 Multi-Mode Wireless Mouse User Guide

[Home](#) » [rapoo](#) » rapoo M200 Multi-Mode Wireless Mouse User Guide



M200 Multi-Mode Wireless Mouse
User Guide

Instruction




<https://www.bilibili.com/video/BV1yW411C7BH>

Scan to quickly understand the connection steps

Contents [[hide](#)]

- 1 Package contents
- 2 Pair your first device
- 3 Pair your second device
- 4 Status LED
- 5 WARRANTY
- 6 Safety instructions
- 7 Troubleshooting
- 8 Copyright
- 9 Documents / Resources
- 10 Related Posts

Package contents

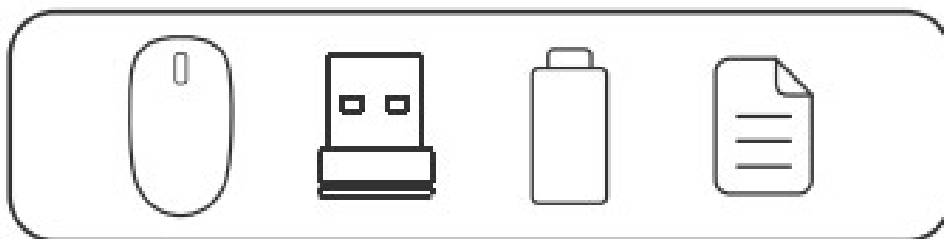


System requirements

Windows' XP / Vista / 7 / 8 / 10 or later, USB port

Switch among paired devices

Press the Bluetooth button to switch among up to 3 paired devices (connect up to 2 devices via Bluetooth and 1 via a 2.4 GHz receiver).

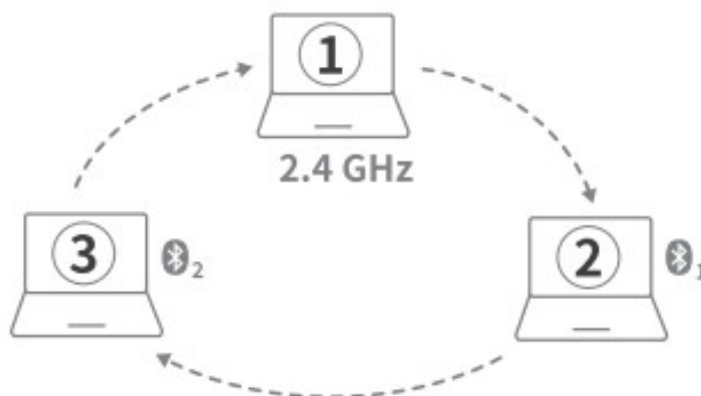

2.4GHz connection

Insert the Rapoo receiver and turn on the power switch of the mouse to complete the connection.



Pair your first device

Turn on the mouse the, Bluetooth button for more than, 3 seconds, and the mouse will be in a searchable state within 2 minutes.





Pair your second device

Short press the blue key for 0.5 seconds to switch channels. Long press the Bluetooth key for more than 3 seconds, and the mouse will be in a searchable state within 2 minutes. Follow the steps of “pairing your first device” to complete the connection of the second device.



Status LED

Instructions for connecting back to the indicator light

Turn on the mouse switch, the indicator light will be on for 6 seconds, and the Bluetooth device 1 is currently connected; The indicator light flashes slowly, and the Bluetooth device 2 is currently connected; The indicator light goes out, and the 2.4G receiver device is currently connected.

Note 1: “O ” Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of the present condition.

Note2: “O ” indicates that the percentage content of the restricted substance does not exceed the percentage of the reference value of presence

WARRANTY

The device is provided with one-year limited hardware warranty from the purchase day. Please see www.rapoo.com for more information.

Safety instructions

Do not open or repair this device. Do not use the device in a damp environment. Clean the device with a dry cloth.

Troubleshooting

See www.rapoo.com for the latest FAQs, drivers, and quick start guide. For more services and help, please register on www.rapoo.com.

Copyright

It is forbidden to reproduce any part of this quick start guide without the permission of Shenzhen Rapoo Technology Co., Ltd.

NOTE:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help



Documents / Resources

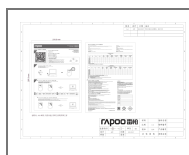

[rapoo M200 Multi-Mode Wireless Mouse](#) [pdf] User Guide
2983, PP22983, M200 Multi-Mode Wireless Mouse, Multi-Mode Wireless Mouse